

IFP63 Series

Commercial Touch Display User Guide



IMPORTANT: Please read this User Guide to obtain important information on installing and using your product in a safe manner, as well as registering your product for future service. Warranty information contained in this User Guide will describe your limited coverage from ViewSonic® Corporation, which is also found on our web site at http://www.viewsonic.com in English, or in specific languages using the Regional selection box of our website.

Thank you for choosing ViewSonic®

As a world-leading provider of visual solutions, ViewSonic® is dedicated to exceeding the world's expectations for technological evolution, innovation, and simplicity. At ViewSonic®, we believe that our products have the potential to make a positive impact in the world, and we are confident that the ViewSonic® product you have chosen will serve you well.


Once again, thank you for choosing ViewSonic®!

Safety Precautions

Please read the following **Safety Precautions** before you start using the device.

- Keep this user guide in a safe place for later reference.
- Read all warnings and follow all instructions.
- Do not use the device near water. To reduce the risk of fire or electric shock, do not expose the device to moisture.
- Never remove the rear cover. This display contains high-voltage parts. You may be seriously injured if you touch them.
- Avoid exposing the device to direct sunlight or other sources of sustained heat.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that may increase the temperature of the device to dangerous levels.
- Use a soft, dry cloth to clean the external housing. For more information, refer to the "Maintenance" section.
- When moving the device, be careful not to drop or bump the device on anything.
- Do not place the device on an uneven or unstable surface. The device may fall over resulting in an injury or a malfunction.
- Do not place any heavy objects on the device or connection cables.
- If smoke, an abnormal noise, or a strange odor is present, immediately turn the device off and call your dealer or ViewSonic[®]. It is dangerous to continue using the device.
- The device is a monitor with an LED backlight intended for general office use.
- Do not attempt to circumvent the safety provisions of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the plug does not fit into your outlet, obtain an adapter and do not attempt to force the plug into the outlet.
- When connecting to a power outlet, DO NOT remove the grounding prong. Please ensure grounding prongs are NEVER REMOVED.
- Protect the power cord from being treaded upon or pinched, particularly at the plug, and at the point where it emerges from the equipment. Ensure that the power outlet is located near the equipment so that it is easily accessible.

- Only use attachments/accessories specified by the manufacturer.
- When a cart is used, use with caution when moving the cart/equipment combination to avoid injury from tipping over.
- Disconnect the power plug from the AC outlet if the device is not being used for a long period of time.
- Place the device in a well-ventilated area. Do not place anything on the device that prevents heat dissipation.

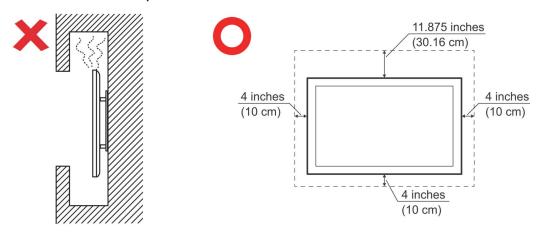

- Refer all servicing to qualified service personnel. Service will be required when the unit has been damaged in any way, such as:
 - » if the power supply cord or plug is damaged
 - » if liquid is spilled onto or objects fall in the unit
 - » if the unit is exposed to moisture
 - » if the unit does not operate normally or has been dropped

IMPORTANT

To ensure the optimal performance and longevity of your display, it is essential to follow the recommended handling, mounting, and storage procedures. Placing the display in a horizontal position can lead to a range of potential issues, including:

- Excessive stress on the display's structural components, resulting in the formation of cracks or distortions along the edges.
- Uneven weight distribution, which can cause the screen to warp, sustain internal damage, or crack over time.
- Thermal-related damage, as the internal components may not be able to dissipate heat as intended, leading to potential failure or permanent damage.

Furthermore, altering the display's form can also compromise the integrity of its internal components, including the sensitive LCD cells, which can result in a permanent degradation of the display's quality.

To prevent such issues and maintain the display's optimal condition, it is recommended to always mount, handle, transport, and store it in a vertical position. Failure to do so may void the warranty and compromise the display's performance and lifespan.

Note: Any damage resulting from the misuse or improper handling of the display is not covered under warranty.

Contents

Safety Precautions	3
Introduction	10
Package Contents	
Wall Mount Kit Specifications (VESA)	
Product Overview	
Front Panel	
Rear Panel	
Control Panel	
Front I/O	14
Rear I/O	15
Side I/O	16
Remote Control	18
Installing the Batteries	20
Receiver Range	21
Using Gestures	22
Making Connections	24
Connecting to Power	
Connecting to Video Inputs and Enabling Touch	25
USB Type C Connection	
HDMI Connection	26
DisplayPort Connection	26
RS-232 Connection	27
USB Connection	28
USB Type A	28
USB Type C	28
Network Connection	29
Media Connection	30
Video Output	30
Audio Connection	31
Audio In	31
Audio Out	31
SPDIF Connection	31
Optional Connections	32
Slot-in PC (OPS Slot) Installation	32
Wi-Fi Card (Wi-Fi Slot) Installation	33


Using the Display	34
Turning the Display On/Off	
Initial Launch Setup	
Home Screen	
How to Sign Up	42
Use as Guest	
Sign In	43
Home Screen Message	44
Toolbar	45
Toolbar Icons	46
On-Screen Display (OSD) Menu - General Settings	48
Input Settings	
Display Settings	52
Eye Care	54
Applications	56

ViewBoard Settings	57
ViewBoard Launcher	
Wireless & Network	57
Display	63
Preference	66
Input Source	75
Apps	78
System	81
Android Launcher	90
Network & Internet	90
Connected Devices	92
Apps	93
Notifications	94
Storage	96
Sound	97
Display	98
Wallpaper & Style	99
Accessibility	100
Security & Privacy	102
Passwords & Accounts	104
Digital Wellbeing	105
Google	106
Advanced	107
System	108
About Device	109
Tips & Support	110
Android Settings Menu Tree	111
Pre-installed Applications and Settings	156
AirSync	
myViewBoard Manager	
myViewBoard Whiteboard	

RS-232 Protocol	161
Description	161
RS-232 Hardware Specification	
LAN Hardware Specification	
RS-232 Communication Setting	162
LAN Communication Setting	
Command Message Reference	
Protocol	163
Set-Function Listing	
Get-Function Listing	171
Appendix	182
Display Modes	
DisplayPort	
HDMI	
USB Type C	
VGA	
HDMI Out	
Troubleshooting	185
Maintenance	187
General Precautions	
Cleaning the Screen	
Cleaning the Case	187
Regulatory and Service Information	188
Compliance Information	
FCC Compliance Statement	188
Industry Canada Statement	188
CE Conformity for European Countries	189
Declaration of RoHS2 Compliance	190
ENERGY STAR Statement	191
Indian Restriction of Hazardous Substances	192
Product Disposal at End of Product Life	192
Copyright Information	193
Customer Service	
Limited Warranty	
Mexico Limited Warranty	198


Introduction

Package Contents

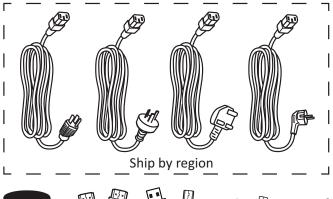





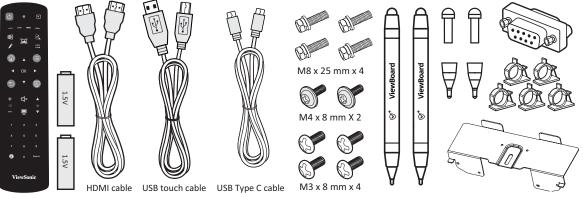


- AAA Batteries
- Camera Plate
- 5 x Clamps
- Compliance Statement
- HDMI Cable (3 m)
- Power Cord (3 m)
- Quick Start Guide
- Wi-Fi Module (optional)

- 4 x Replacement Pen Nibs
- USB Type C Cable (1.8 m)
- RS-232 Adapter
- 10 x Screws
- 2 x Touch Pens
- USB Touch Cable (3 m)
- Remote Control

Note: The cables included in your package may vary depending on your country. Please contact your local reseller for more information.

Wall Mount Kit Specifications (VESA)


Note: The following illustration is for instructional purpose only. For details, please refer to the actual product and follow the instructions in the wall mount installation guide to install your wall mount. If attaching to other building materials, please contact your local reseller.

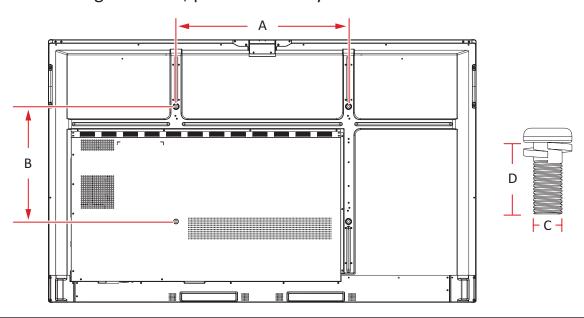

Model	VESA Spec. (A x B)	Standard Screw (C x D)	Quantity
IFP6563	600 x 400 mm		
IFP7563	800 x 400 mm	M8 x 25 mm	4 Pieces
IFP8663	800 x 600 mm		


Note:

- Do not use screws that are longer than the standard dimension, as they may cause damage to the inside of the display.
- Only mount the display in landscape orientation. Never mount in a portrait orientation.

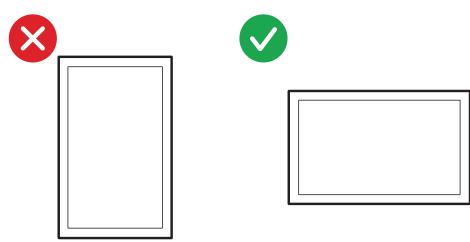


Product Overview


Front Panel

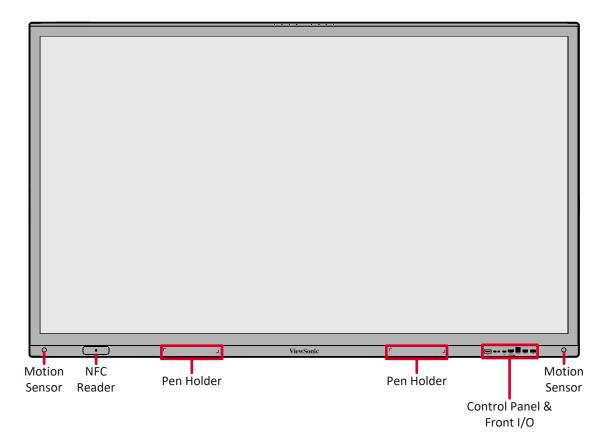

Rear Panel

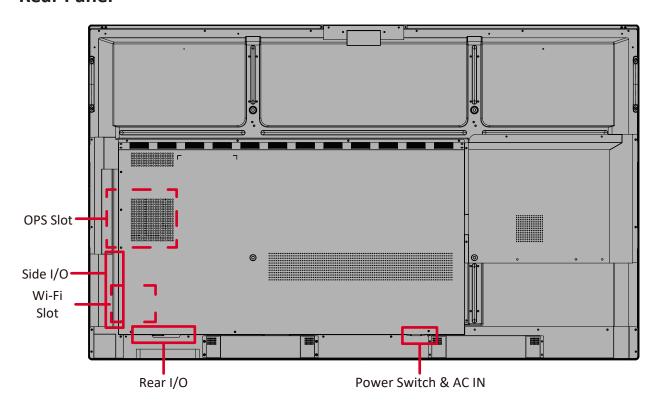


Control Panel

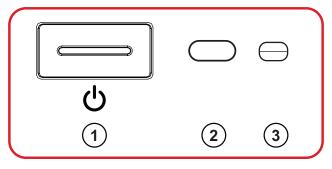


Number	Item	Description		
1	G.	 Press to turn on the display. Once on, press again to turn on or off the backlight only. Once on, press and hold to turn off the display. 		
2		Remote control IR receiver.		
3	\ominus	Ambient light sensor.		

Front I/O

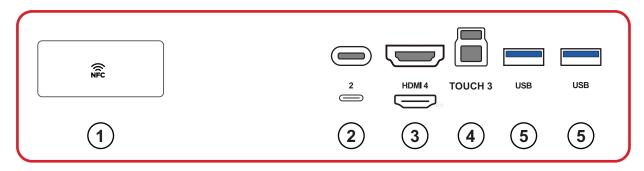


Number	Item	Description	
1	NFC	NFC reader.	
2	2 (TYPE C 2)	 USB Type C input. USB 3.0 Gen 1 standard. Supports DP v. 1.2 with audio, video, and touch. Supports LAN by 10M/100M. Supports power charge up to 65W. Power charge supported: 5V/3A, 9V/3A, 15V/3A, 20V/3.25A. 	
3	HDMI 4	 HDMI input. Connect to a computer with HDMI output, set-top box, or other video device. Supports 4K display; HDMI v. 2.1; CEC. 	
4	TOUCH 3	 USB Type B Touch signal output to external computer After connection (with an external computer), the device connected to the USB port can directly be used by the external computer 	
5	USB	 Note: Pairs with the HDMI 4 port next to it. USB Type A input. USB 3.2 Gen 1 standard. Connect USB devices such as hard disks, keyboard, mouse, etc. Automatically switches between the external computer and display. 	

Rear I/O

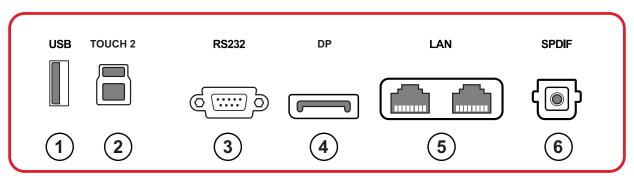

Number	Item	Description		
1	USB	USB Type A input.USB 2.0 standard.For ViewBoard source only.		
2	TOUCH 2	 USB Type B Touch signal output to external computer After connection (with an external computer), the device connected to the USB port can directly be used by the external computer Note: Pairs with the HDMI 3/DP port. 		
3	RS232	Serial interface; used for mutual transfer of data between devices.		
4	DP	DisplayPort input (v. 1.2).Supports 4K display.		
5	LAN	 Standard RJ45 (10M/100M/1000M) Internet connection interface. Features hub support for network sharing. 		
6	SPDIF	Multichannel sound via optical signals.		


Side I/O

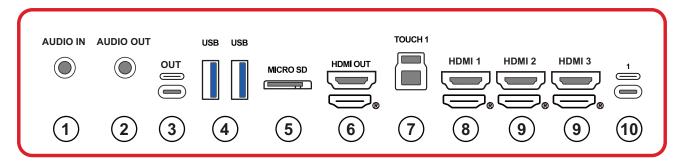

Number	Item	Description	
1	AUDIO IN	External computer audio input.	
2	AUDIO OUT	Audio output to an external speaker/headset.	
3	OUT (Type C Out)	 USB Type C output. Connect to devices with USB Type C input. Supports 1080p and 4K @ 60 Hz. Supported by select models. 	
4	USB	 USB Type A input. USB 3.0 Gen 1 standard. Connect USB devices such as hard disks, keyboard, mouse, etc. Automatically switches between the external computer and ViewBoard. 	
5	MICRO SD	Data only, up to 512 GB.	
6	HDMI OUT	 HDMI output. Connect to a computer with HDMI input, set-top box, or other video device. Supported by select models. Note: CEC and ARC are not supported. 	
7	TOUCH 1	 USB Type B. Touch signal output to external computer. After connection (with an external computer), the device connected to the USB port can directly be used by the external computer. Note: Pairs with the HDMI 1/2. 	
8	HDMI 1	 HDMI input. Connect to a computer with HDMI output, set-top box, or other video device. Supports 4K display; HDMI v. 2.1; CEC; ARC. 	


Number	Item	Description	
9	HDMI 2/3	 HDMI input. Connect to a computer with HDMI output, set-top box, or other video device. Supports 4K display; HDMI v. 2.1; CEC. 	
10	1 (Type C 1)	 USB Type C input. USB 3.0 Gen 1 standard. Supports DP v. 1.2 with audio, video, and touch. Supports LAN by 10M/100M. Supports power charge up to 65W. Power charge supported: 5V/3A, 9V/3A, 15V/3A, 20V/3.25A, 20V/5A. 	


Remote Control

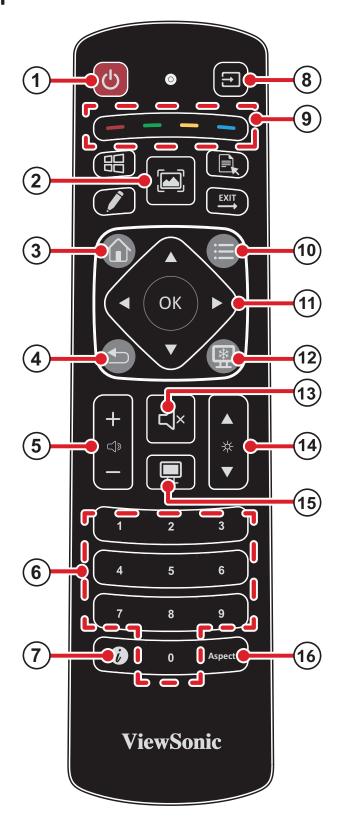


	Button	Description		
1	Power	Turns the display on or off.		
2	Screenshot	Takes a scre	enshot.	
3	Home	Returns to t	he Home screen	
4	Return	Returns to t	he previous screen.	
5	Volume	Increases or	decreases the volume level.	
6	Keypad	Number key	pad.	
7	Information	Opens the ir	nformation menu.	
8	Input Source	Selects the i	nput source.	
	9 Media Control	Red	Play/Pause	
0		Green	Stop	
9		Yellow	Forwards	
		Blue	Backwards	
10	Settings	Opens the settings menu.		
11	Navigation	Selects an item or adjusts the value in the menu.		
12	Freeze	Freezes the screen.		
13	Mute	Stops audio output.		
14	Brightness	Increases or decreases the brightness level.		
15	Blank	Blanks the screen.		
16	Aspect Ratio	Changes the aspect ratio.		

Installing the Batteries

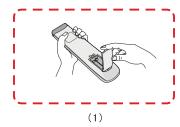

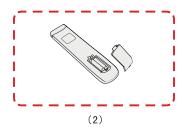

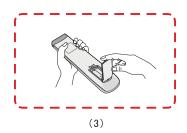


- 1. Open the battery compartment by removing the battery cover.
- 2. Insert two AAA batteries, ensuring correct polarity.
- **3.** Replace the battery cover until it clicks into place.

Note:

- Store the remote control and batteries away from heat and humidity.
- Use only recommended battery types.
- Remove batteries when not in use for extended periods.
- Dispose of old batteries following the manufacturer's instructions and local regulations.

Receiver Range

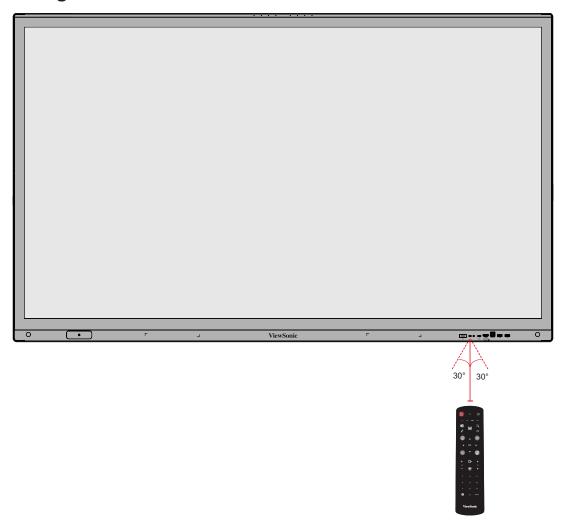


The working range of the remote control is shown here. It has an effective range of 8 m (19.69 ft), with a horizontal and vertical field of view of 30 degrees. Ensure there is nothing obstructing the remote control's signal to the receiver.

Using Gestures

Touch gestures allow the user to use pre-determined commands without using a keyboard or mouse. Using gestures on the display, the user can select/deselect objects, change the location of an object, access settings, erase digital ink, and much more.


Select and Deselect an Object (Clicking)

Press and release the display to select/ deselect options or objects. This is like a single, standard left mouse click.

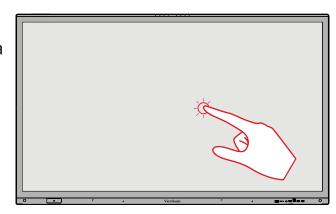


Display Menu Options (Right-Clicking)

Press and hold the display with your finger. This is like a single, standard right mouse click.

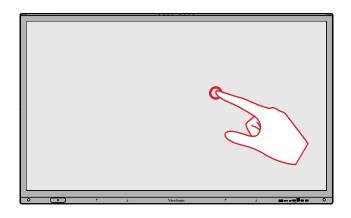


Double-Clicking

Quickly press and release twice in the same location on the display. This is like a double, standard left mouse click.

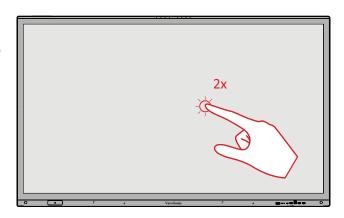


Moving an Object

Press and hold the object on the display and slowly drag it with your finger to your desired location.

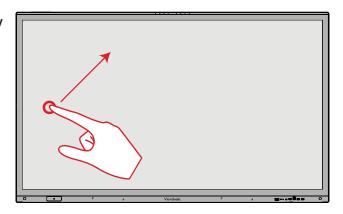


Erasing Digital Ink

Use your flattened hand, palm, or fist on the display and move your hand across the area which you wish to erase.

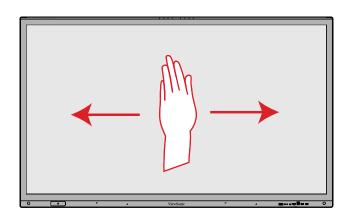


Swipe Up for General Settings

Swipe up from the bottom of the display to open the settings.

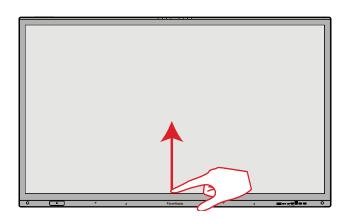


Making Connections

Connecting to Power

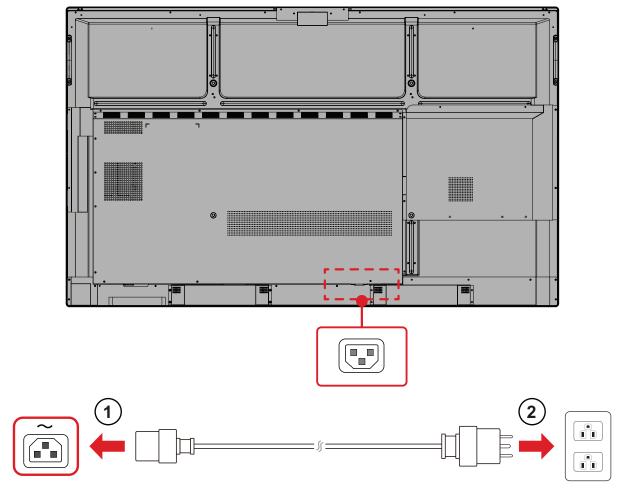

- 1. Connect the power cord to the AC IN jack at the rear of the display.
- 2. Plug the power cord plug into a power outlet.

Connecting to Video Inputs and Enabling Touch

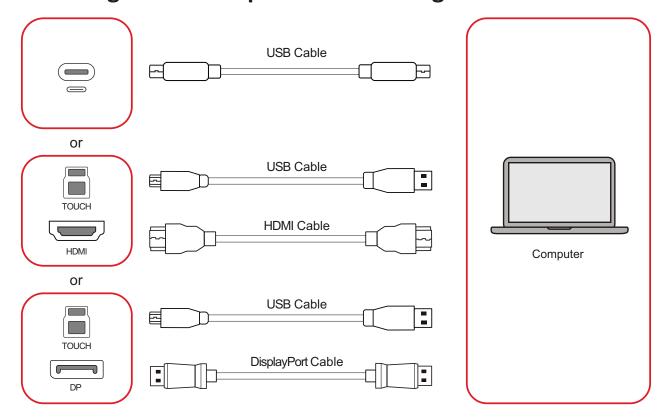

Your external device(s) can be connected in any of the following configurations.

USB Type C Connection

Connect a USB Type C cable from your external device to the display's USB Type C port.

HDMI Connection

- **1.** Connect an HDMI cable from your external device to the **HDMI 1/2/3/4** port on the display.
- **2.** Connect a USB Type B to USB Type A cable to the external device from the appropriate **TOUCH** port of the display.

Note:

- The TOUCH 1 port is for the HDMI 1/HDMI 2 port.
- The **TOUCH 2** port is for the **HDMI 3/DP** port.
- The **TOUCH 3** port is for the **HDMI 4** port.


DisplayPort Connection

- **1.** Connect a DisplayPort cable from your external device to the **DP** port on the display.
- **2.** Connect a USB Type B to USB Type A cable to the external device from the appropriate **TOUCH** port of the display.

Note:

- The **TOUCH 1** port is for the **HDMI 1/HDMI 2** port.
- The TOUCH 2 port is for the HDMI 3/DP port.
- The **TOUCH 3** port is for the **HDMI 4** port.

RS-232 Connection

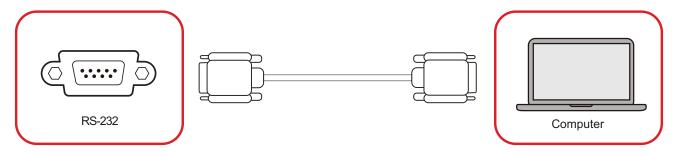


When you use a RS-232 serial cable to connect the display to an external computer or control system, certain functions can be controlled remotely such as: power on and off, volume adjustment, input select, brightness, and more.

USB Connection


Just like any PC, it is easy to connect various USB devices and other peripherals to the display.

USB Type A

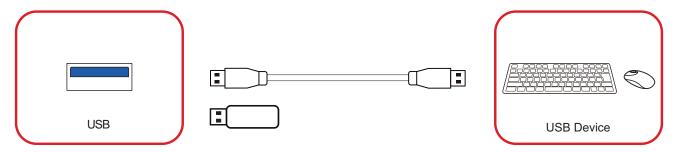


Plug the USB device or storage drive into a **USB** port of the display.

USB Type C

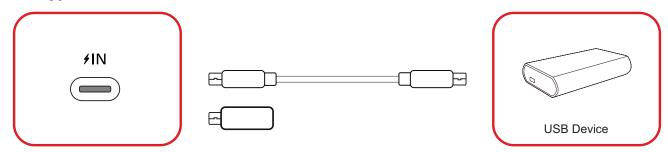


Plug the USB device or storage drive into a USB Type C port of the display.

Network Connection

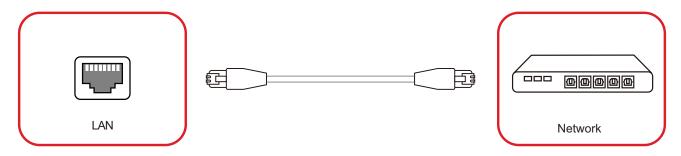

To connect to a local network, connect an Ethernet cable to your network, then connect the other end to a **LAN** port of the display.


Media Connection

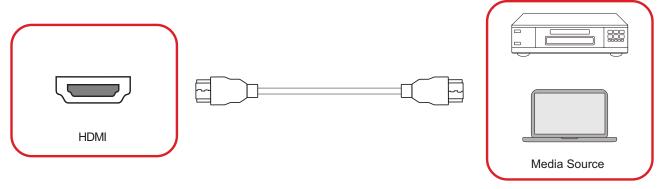

To connect to a media source:

- 1. Connect an HDMI cable to an HDMI port on the display and peripheral device.
- **2.** Press the **INPUT** button on the remote control and switch to the HDMI input source.

Video Output

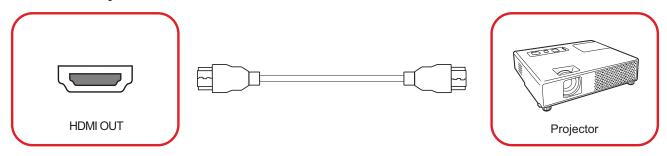


To output video via a display device:

- **1.** Connect an HDMI cable to the HDMI IN port of your display device, then connect the other end to the **HDMI OUT** port of the display.
- **2.** Press the **INPUT** button on the remote control and switch to the HDMI IN input source.

Audio Connection


The display supports Audio In, Audio Out, and SPDIF.

Audio In

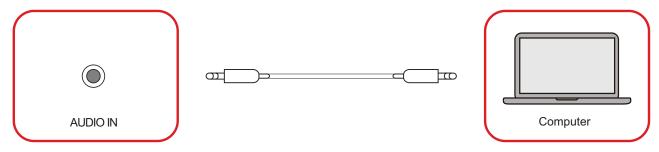


To play audio from your external device through the display's speakers, connect one end of an audio cable to your external device, and the other end to the display's **AUDIO IN** port.

Audio Out

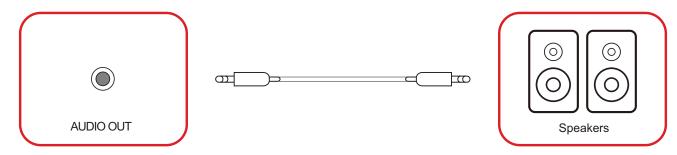

To play audio from the display through an external speaker, connect one end of an audio cable to the external speaker, and the other end to the display's **AUDIO OUT** port.

SPDIF Connection

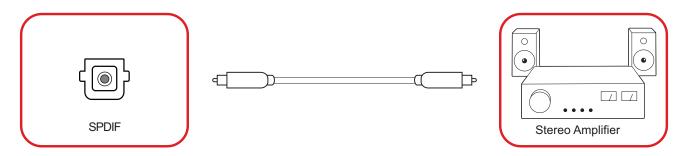

To connect to an external sound system, connect an optical cable from the display's **SPDIF** port to your sound system's optical connector.


Optional Connections

Note: The following illustrations are for instructional purpose only. For details, please refer to the actual device.


The display comes with an **OPS Slot** as well as a **Wi-Fi Slot** for optional add-ons such as a slot-in PC (e.g., VPC-35) or Wi-Fi card (e.g., VB-WIFI-005).

Slot-in PC (OPS Slot) Installation

1. Remove the OPS Slot cover of the display.

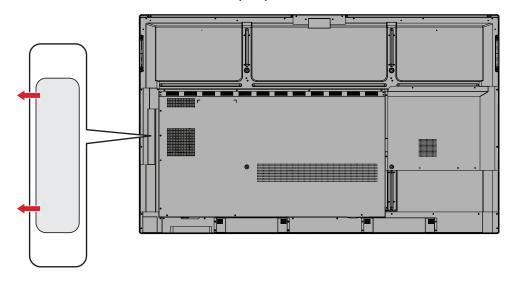


2. Carefully insert the slot-in PC into the OPS Slot of the display.

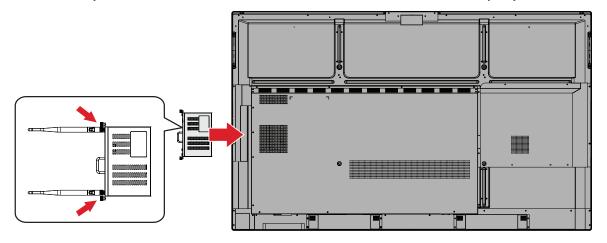


3. Secure the slot-in PC to the display.

Wi-Fi Card (Wi-Fi Slot) Installation

1. Remove the Wi-Fi Slot cover of the display.

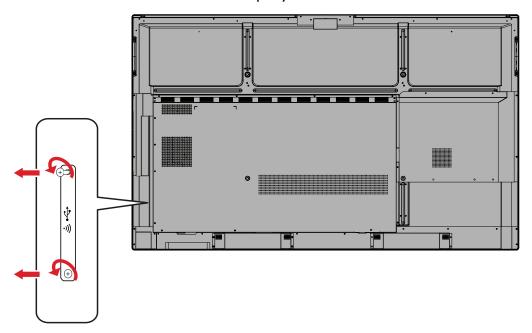

2. Carefully insert the slot-in Wi-Fi card into the Wi-Fi Slot of the display.

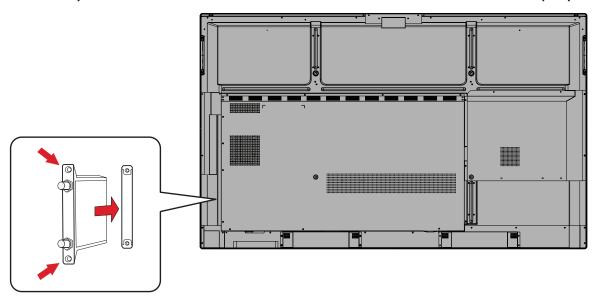


3. Secure the slot-in Wi-Fi card to the display.

Using the Display

Turning the Display On/Off

1. Make sure the power cord is connected, plugged into a power outlet, and the **Power Switch** is in the on position.

Note: The Power Switch is located at the bottom of the display.

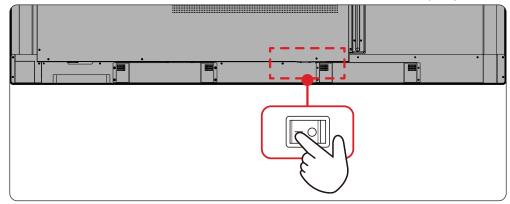

- 2. Press the Power button on the display or remote control to turn on the display.
- **3.** To turn the display off, press and hold the **Power** button.

Initial Launch Setup


When you first turn on your display, an initial setup wizard will launch.




1. Choose your preferred Language.




2. Adjust accessibility features as needed.

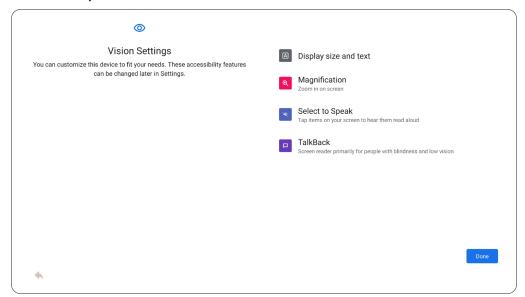


3. Setup and connect to a network.

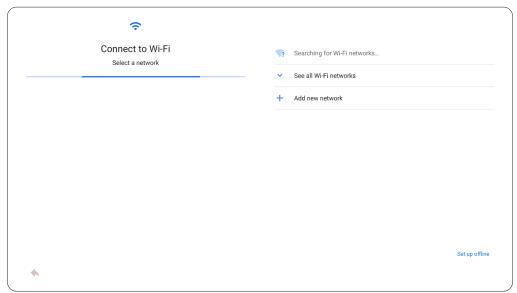

4. Set and adjust the Date and Time as needed.

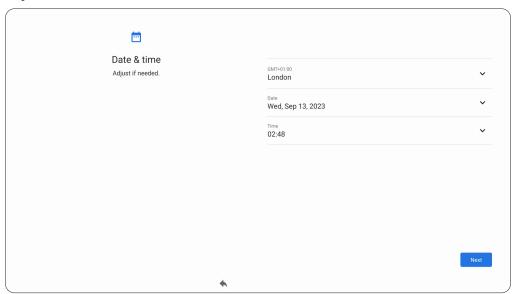



5. Copy your apps and data from another device to the display.

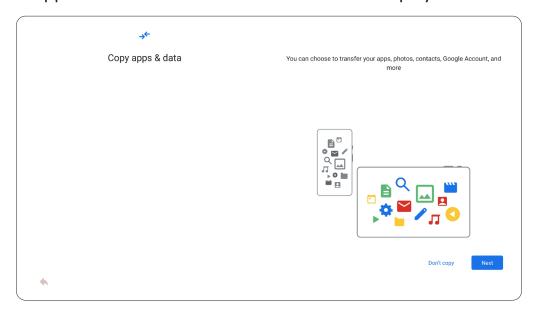

- If you want a fresh start, tap **Don't copy**.
- To start copying and transferring your apps and data, tap Next.
 - » If you use a USB cable to copy and transfer data, connect the cable to your devices and follow the on-screen directions to start transfer.
 - » If you don't have a cable, tap No cable? to start transfer wirelessly.

Note: Before starting, make sure your another device is connected to power, turned on, and unlocked.

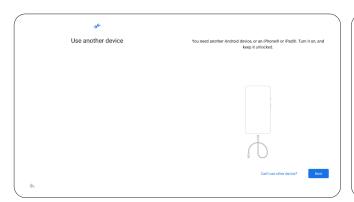


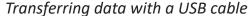




Transferring data wirelessly

6. Sign in with a Google account, or tap Skip to continue without signing in.

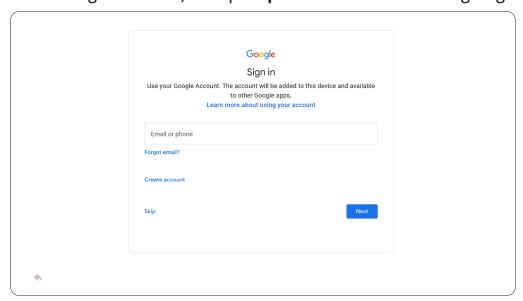


7. Accept or decline the Google services.

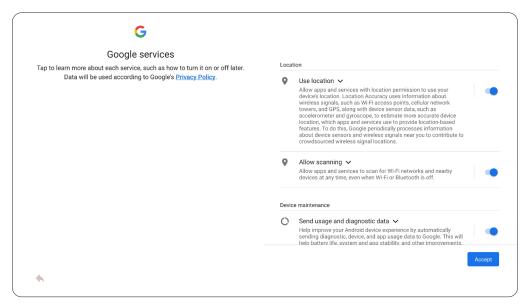


8. Set a PIN to setup a Screen lock. Then, tap **Next**, enter the PIN again, and tap **Confirm**.


Note: Personal Identification Number (PIN) helps prevent unauthorized use of the display. It is strongly recommended to set a pin for each of the owner profiles as only owners can manage access to the display(s) and more.

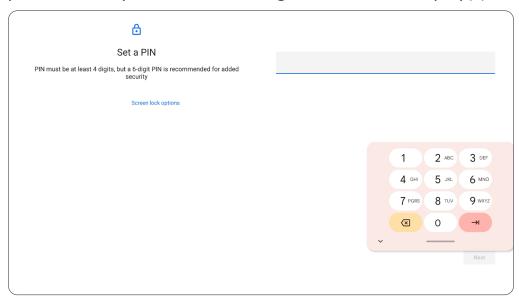


9. Select **Enable Device Owner Permissions** to confirm the ownership and gain access to the advanced features on mydisplay Manager. Then, tap **Next**.

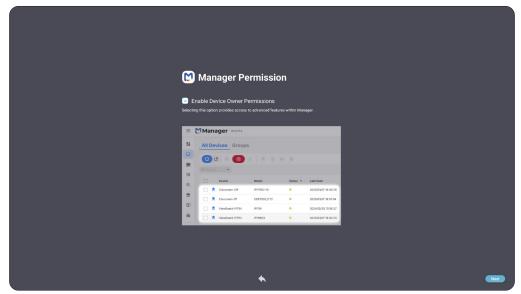

10. Select the preferred boot up mode, then tap **Next**.

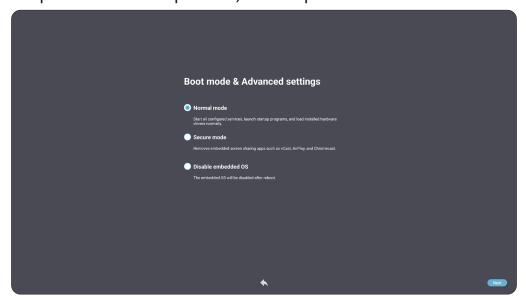


- 11. Select the preferred Operating System (OS) launcher.
 - Select Enable ViewBoard Launcher for the ViewBoard launcher scheme.
 - Deselect Enable ViewBoard Launcher for the Android launcher scheme.

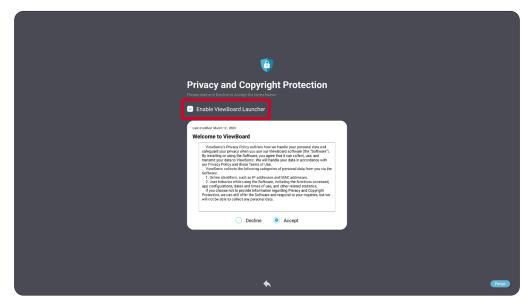

Note: You can always switch to the other launcher scheme later in the **System** settings. Go to "ViewBoard Settings" for more details.






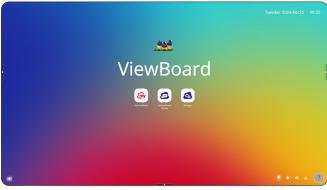

ViewBoard Launcher (Scheme B)


12. Accept or decline the Privacy and Copyright Protection terms. Then, tap **Finish** to complete the initial setup.

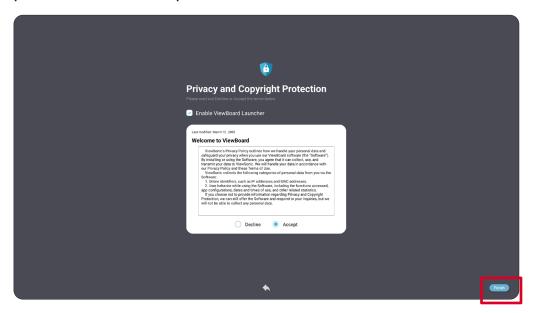

Home Screen


Note: The Home Screen layout varies between the two Launchers. Use the following display Launcher example as a general reference only.

On the Home Screen select from Use as Guest and Sign In.

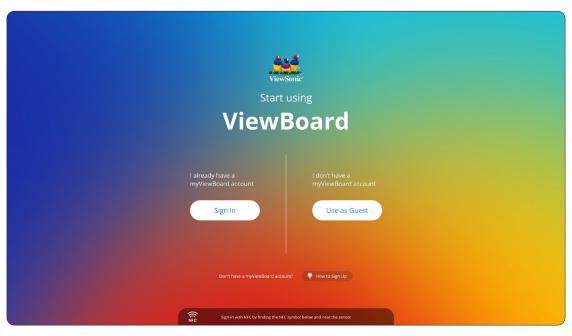

How to Sign Up


Select the **How to Sign Up** button at the bottom of the screen, then scan the QR code and follow the directions to log in.

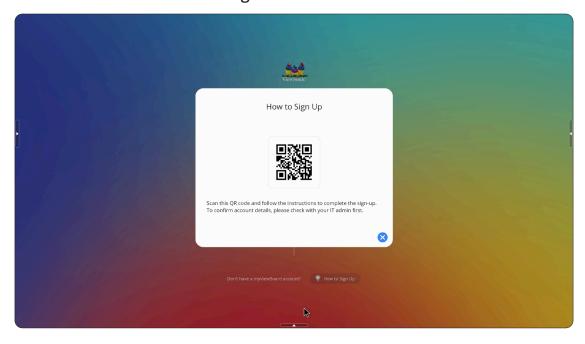

Use as Guest


Select the **Use as Guest** button to log in with a guest account.

Note: Please note that user settings cannot be saved when logging in with a guest account.

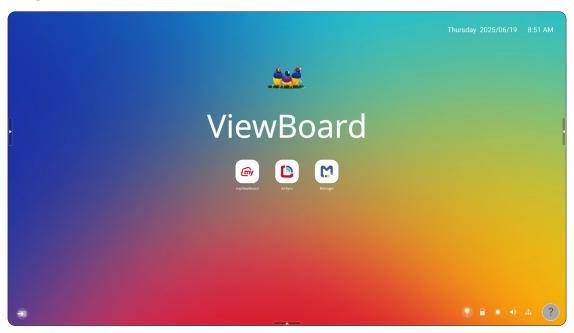


Sign In

Select the **Sign In** button to log in with various accounts.

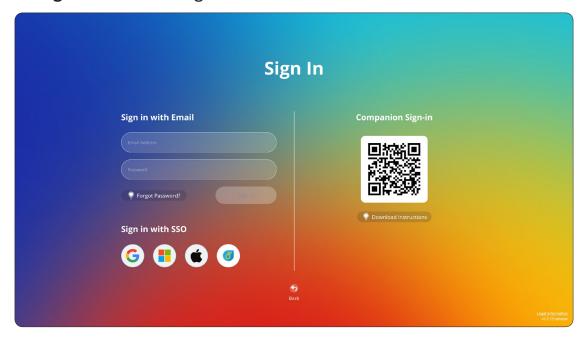

Home Screen Message


The Home Screen message can be edited by selecting it directly on the Home Screen.

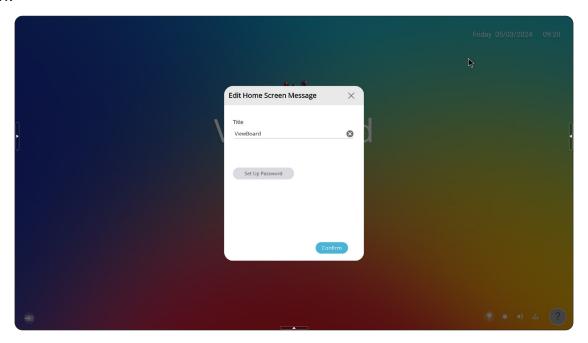

Additionally, a password can be set by selecting the **Set Up Password** button.

Toolbar

The Toolbar is where applications and tools can be found. Trigger icons are on the right, left, and bottom edge of the screen for quick access.

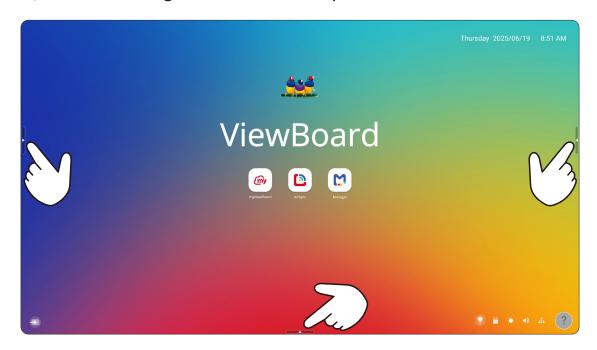

To launch an application or tool:

- 1. Tap a Toolbar trigger icon.
- 2. Tap on your desired application or tool.



Note: The default Toolbar setting is to be available for all input sources; however, users can go to: **Settings** > **Preference** > **Toolbar settings** to adjust the options: (1) Show side Toolbar, (2) Hide side toolbar, (3) Disable in all input sources.


Toolbar Icons

Icon	Description
Return	Return to the previous operation screen. Note: Only for the display source.
Home	Return to the Home Screen.
	Display all currently open applications.
	ViewBoard Windstand OfficeScrite OfficeScrite OfficeScrite OfficeScrite OfficeScrite
-	Select the small frame to display in a PIP window.
Recent	Home Home
	Note: Selecting the "X" will close the application.
Applications	View all installed applications.
File Folder	Browse and open files.

Icon	Description
<u> </u>	Quickly view and adjust various frequently used tools.
Tools	
Marker	Annotate with underlying, highlighting, and more. Note: Pick up the Touch Pen to turn on Marker .
Input Source	Select and change the input source signal.

On-Screen Display (OSD) Menu - General Settings


Access Input, Display, and other general settings through the OSD Menu.

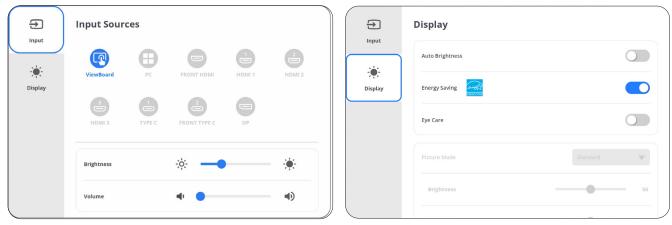


Input Settings

Display Settings


Open the OSD Menu by pressing **INPUT** on the remote control or tapping the **Input Source** icon.

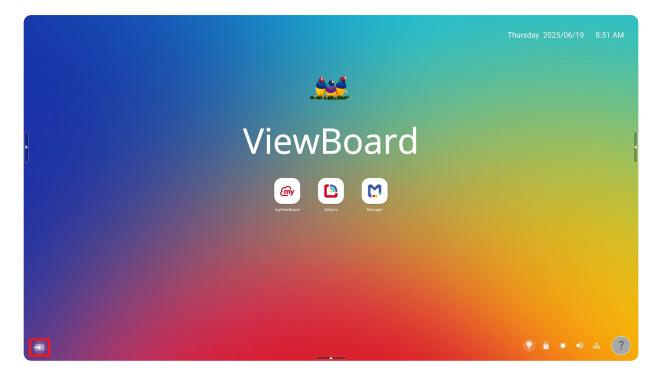

The **Input Sources** setting can also display by tapping the signal source icon.

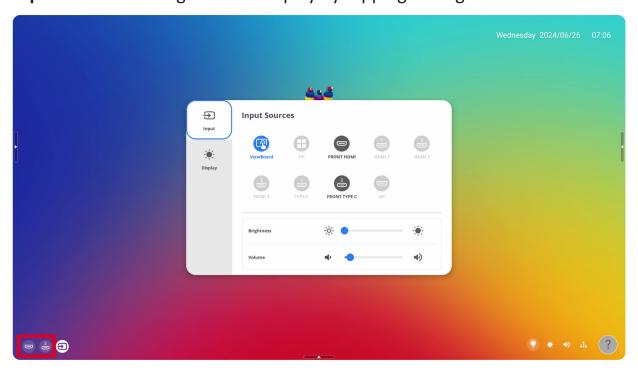

Input Settings

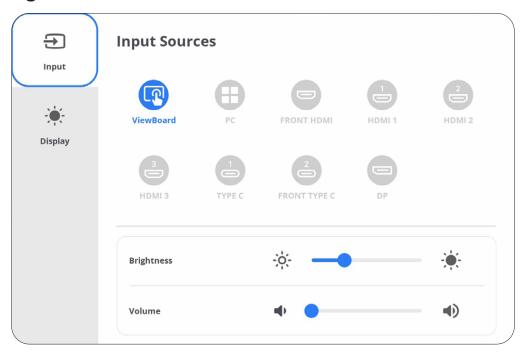

To select an input source:

- 1. Press INPUT on the remote control or tap the Input Source icon to display the Input Settings menu.
- **2.** Press the **Navigation** buttons $(\uparrow / \downarrow / \leftarrow / \rightarrow)$ on the remote control to select the input source you want.

Note: The PC source will only be visible when a slot-in computer is installed.

- **3.** Press **ENTER** on the remote control, or tap the desired input source.
- **4.** Press **BACK** on the remote control, or tap a blank area outside of the menu to exit.

To adjust the brightness:




- 1. Press INPUT on the remote control or tap the Input Source icon to display the Input Settings menu.
- **2.** Drag the brightness slider directly to adjust the backlight value.
- **3.** Press **BACK** on the remote control, or tap a blank area outside of the menu to exit.

To adjust the volume:



- 1. Press INPUT on the remote control or tap the Input Source icon to display the Input Settings menu.
- **2.** Drag the volume slider directly to adjust the value, or press the **Volume** buttons on the remote control to adjust. Additionally, pressing **Mute** on the remote control will mute/unmute the volume.
- **3.** Press **BACK** on the remote control, or tap a blank area outside of the menu to exit.

Display Settings

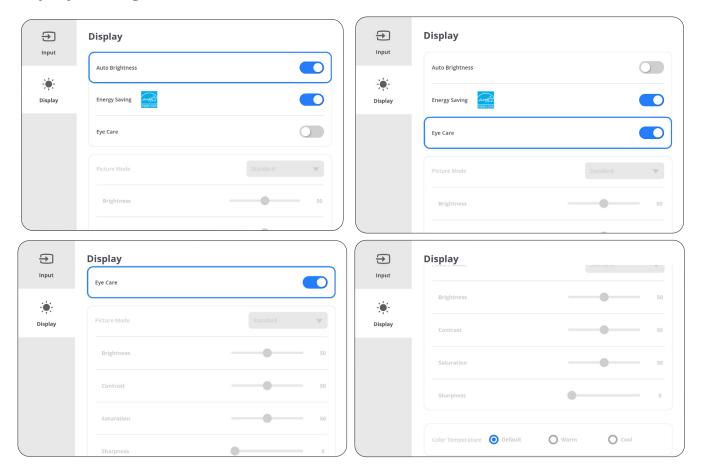

To adjust the display settings:


- 1. Press INPUT on the remote control or tap the Input Source icon to display the Input Settings menu. Then select the Display tab.
- **2.** Press the **Navigation** buttons ($\uparrow/\downarrow/\leftarrow/\rightarrow$) on the remote control to select the menu option you want.
- Press ENTER on the remote control to confirm or press the Navigation buttons (←/→) to adjust the menu option. Additionally, tap/adjust the menu option directly.
- **4.** Press **BACK** on the remote control, or tap a blank area outside of the menu to exit.

Display Settings - Menu Options

Item	Description	
Auto Brightness	_	htness adjustment. Adjusts maximum brightness mbient light levels.
Energy Saving	Enable to redu	ce power consumption.
Eye Care	Adjusts the filter that blocks high-energy blue light for a more comfortable viewing experience.	
	Select a predef	ined picture setting.
	Mode	Description
	Standard	Default picture mode.
Picture Mode	Bright	Maximizes the brightness of the display. This mode is suitable for environments where extra-high brightness is required (e.g., well-lit rooms).
	Soft	A high brightness level with lower contrast level.
	Custom	Customize the picture settings.
Brightness	Adjust the background black levels of the screen.	
Contrast	Adjusts the difference between the image background (black level) and the foreground (white level). Use this to set the peak white level after you have previously adjusted the Brightness setting to suit your selected input and viewing environment.	
Saturation	Adjust the amount of color present.	
Sharpness	A high value results in a sharper picture; a low value softens the picture.	
Color Temperature	Adjust the color temperature value.	

Eye Care

Eye Care blocks high-energy blue light for a more comfortable viewing experience.

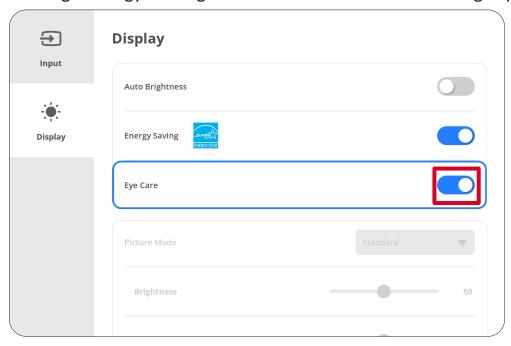

Calculating Breaks

When viewing screens for extended periods, it is recommended to take periodic breaks from viewing. Short breaks of at least 10 minutes are recommended after one hour of continuous viewing.

Taking shorter, more frequent breaks are generally more beneficial than longer, less frequent breaks.

Focus Fatigue (20-20-20 Rule)

To reduce the risk of eye fatigue by constantly looking at the screen, look away from the screen at least every 20 minutes and gaze at a distant object (at least 20 feet away) for at least 20 seconds.

Looking at Distant Objects


While taking breaks, users can further reduce eye strain and dryness by focusing on objects that are further away from them for 10-15 seconds, then gaze at something up close for 10-15 seconds. Repeat this up to 10 times. This exercise reduces the risk of your eyes' focusing ability to "lock up" after prolonged computer work.

Eye and Neck Exercises


Eye Exercises

Eye exercises can help minimize eye strain. Slowly roll your eyes to the left, right, up, and down. Repeat as many times as needed.


Exercises for the eyes

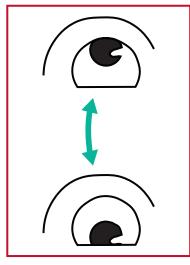

(1) Keep the body and the head upright. Move the eyes up to look at the ceiling, then turn down to look at the floor.

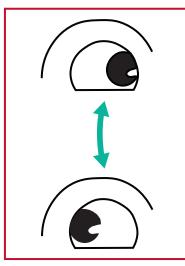

(2) Move the eyes left and right slowly to look at objects on the two sides.

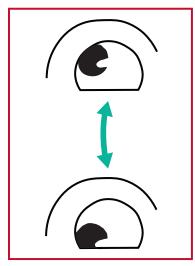


(3) Move the eyes to look at objects at the right upper direction and then right lower direction.
Repeat for the left upper and left lower directions.

Neck Exercises

Neck exercises can also help minimize eye strain. Relax your arms and let them hang at your sides, bend forward slightly to stretch the neck, turn your head to the right and to the left. Repeat as many times as needed.

Applications

Much like any smart phone or tablet you can install several different applications.

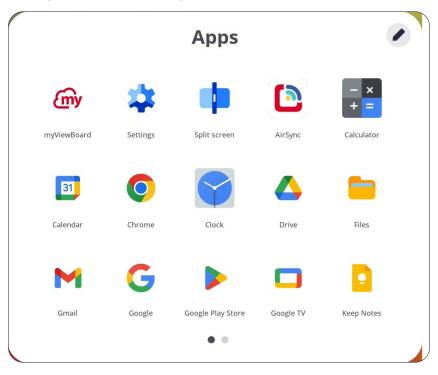

Applications can be accessed from the Toolbar, directly from the Home Screen via shortcuts, or by selecting the **Applications** icon.

Note: The following included application descriptions are not a comprehensive list and will vary by the user.


Icon	Description
	AirSync Wirelessly mirror screens to a larger display.
M	myViewBoard Manager Remotely manage multiple installations of ViewSonic devices.
(my	myViewBoard Whiteboard A digital whiteboarding application.
*	Settings Access the System Settings.

ViewBoard Settings

ViewBoard Launcher

Wireless & Network

Check current network connection status, set up and manage Wi-Fi, Ethernet, Bluetooth, and VPN, and establish a Wireless hotspot.

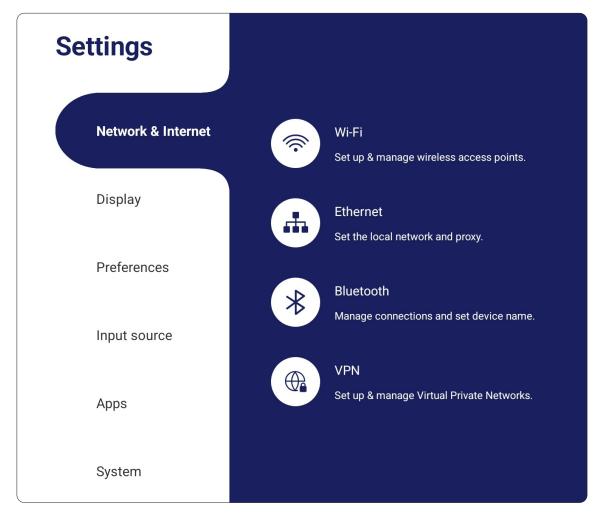

Note:

- Wi-Fi, Wireless hotspot, and Bluetooth settings will appear when an optional Wi-Fi card (e.g., VB-WIFI-005) has been installed in the Wi-Fi slot.
- Ethernet will disable automatically when Wi-Fi is enabled. Wi-Fi will disable automatically when Ethernet is enabled. Wi-Fi will disable when Wireless hotspot is enabled.
- The device cannot connect to the Internet when **Wireless hotspot** is enabled.


Wi-Fi

Setup, manage wireless access points, and share internet connection by hotspot.

• Tap the toggle button to turn Wi-Fi On or Off.



 Once On, you can: Add a Network, view Saved Networks, Refresh the network list, or view Advanced settings.

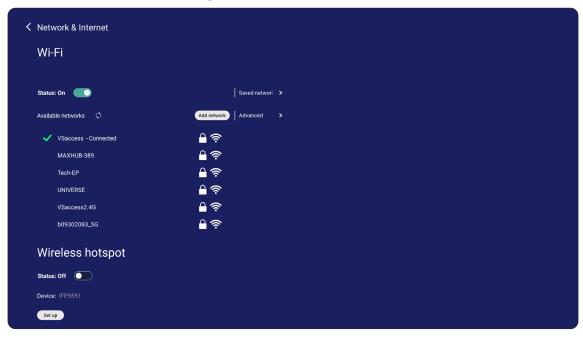

• In **Advanced** settings, you can toggle **Network notifications On** or **Off** and view **Network card info**.



To share your internet connection with other devices.

1. Tap the toggle button to turn Wireless hotspot On or Off.



2. Tap Set up to set the Network name, Security, and Password.



Ethernet

Set the local network and proxy.

• Tap the drop down menu to connect/disconnect the Ethernet.




• You can adjust Local network and Proxy settings as well.



Bluetooth

Manage connections, set the device name and discoverability.

• Tap the toggle button to turn Bluetooth **On** or **Off**. Once **On**, users can select a listed device to pair and connect to, rename their device, remove a device.

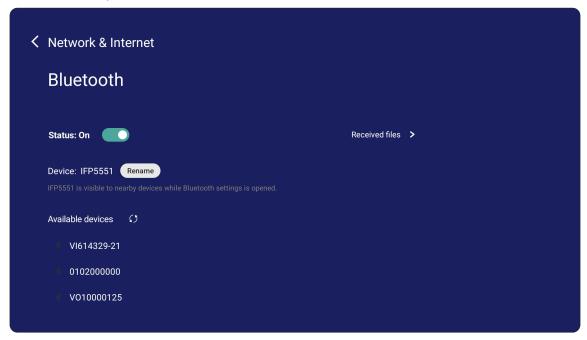


VPN

Setup and manage Virtual Private Networks.




To create a VPN profile:


1. Go to: Settings > Network & Internet > VPN and tap Add VPN.

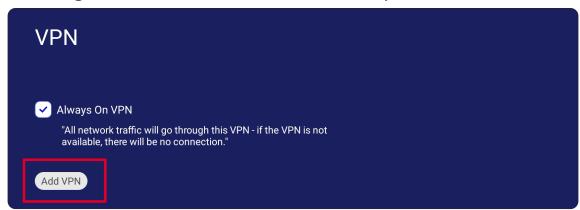


2. Key in the Name.

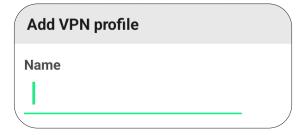

3. Select the VPN **Type**.

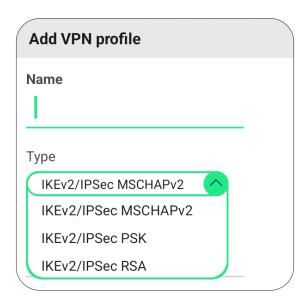


DisplayAdjust the **Wallpaper**, **Protection**, and **HDMI Out** settings.

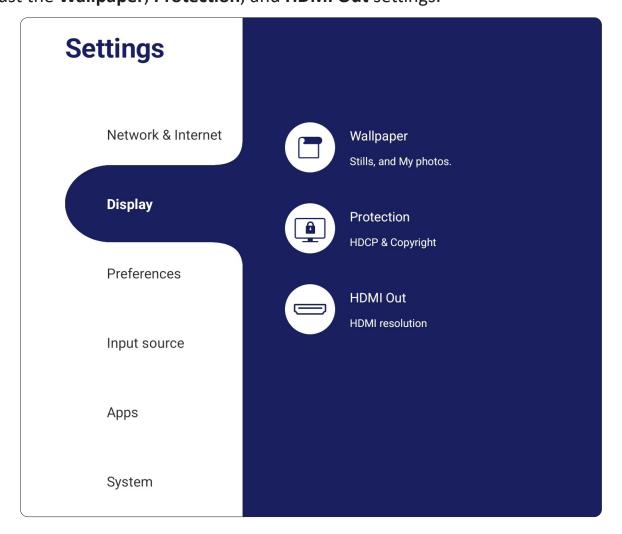

Wallpaper

Users can change their wallpaper with default images, or use their own by tapping the add icon and selecting the image file.

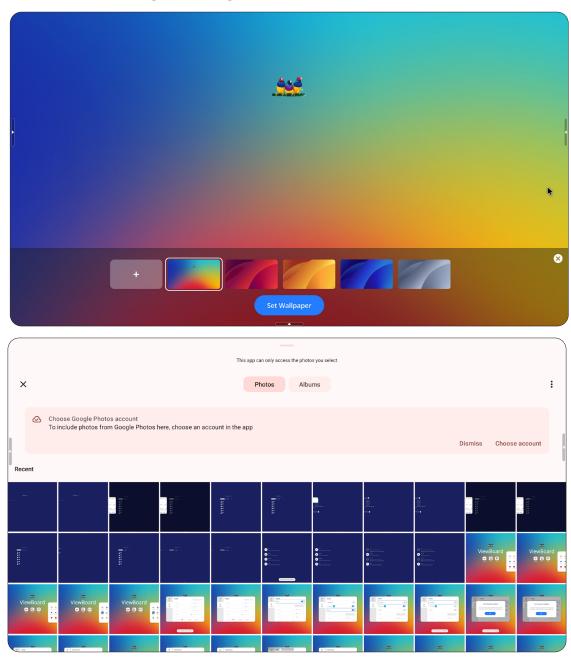

Protection

Set HDCP & Copyright on or off.




HDMI Out

Adjust the HDMI Out Resolution setting, enable video output, and mute/unmute the speakers when connected via HDMI Out.


Note:

- The **Disable ViewBoard Speakers when using HDMI Out** option box is not selected by default.
- Swipe up on the listed resolutions to see more supported resolutions.

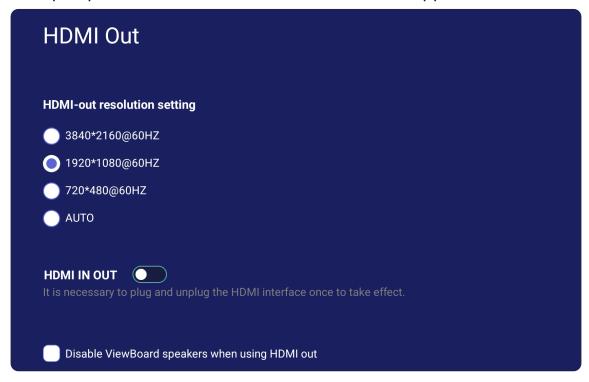

Preference

View and adjust Touch, Language, Keyboard & Input, Date & Time, Boot Mode & Advanced, Start up & Shut down, and Toolbar settings.

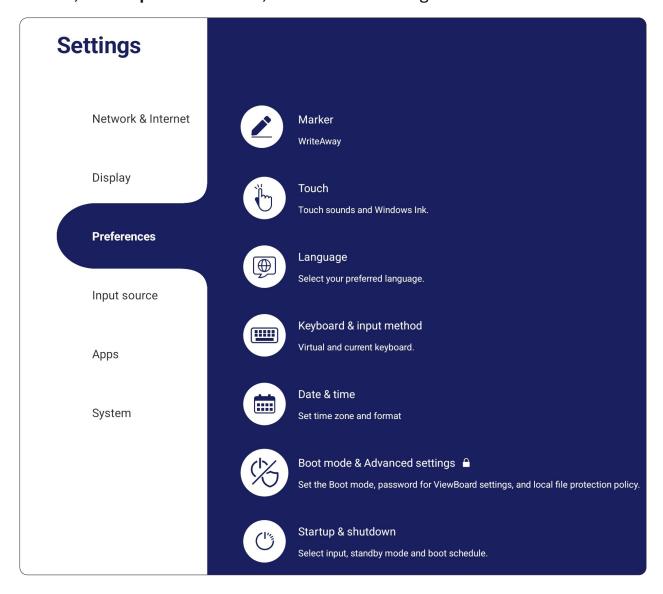

Marker

Toggle WriteAway on or off for the Marker or myViewBoard whiteboard tool.



Touch

Adjust Touch Settings and toggle Touch Sounds and Windows Ink on or off.



Language

Adjust and choose the preferred language from the available languages.




Keyboard & Input Method

Enable/disable the visual keyboard and/or change the default input method.



Date & Time


Set the system time and format.

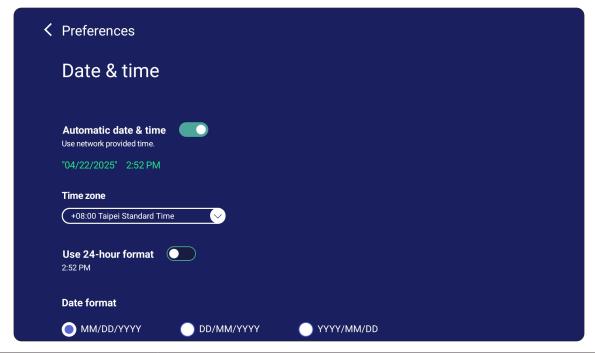

ltem	Description
Automatic Date & Time	When enabled, the ViewBoard will automatically synchronize the date and time via the Internet.
Time Zone	Select the appropriate time zone.
Time Format	Choose from 12-hour or 24-hour time format. Simply toggle 24-hour format on or off.
Date Format	Select from the available date formats.

Boot Mode & Advanced Settings

Adjust the preferred boot up mode and set/reset a password.

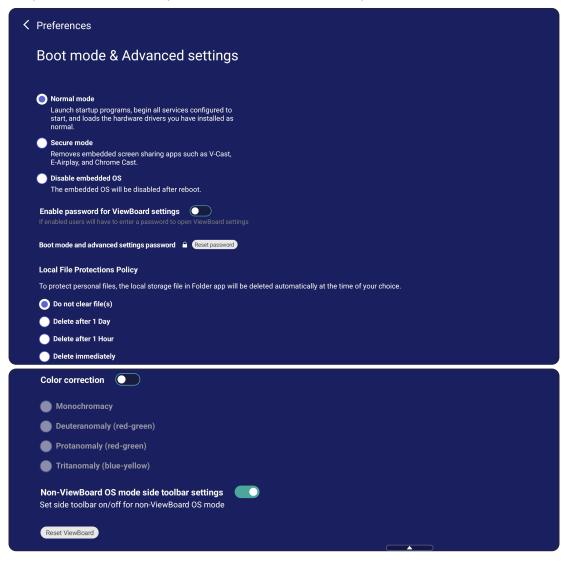


Item	Description
Normal Mode	The embedded screen sharing apps will run normally.
Secured Mode	The embedded screen sharing apps will be removed.
Disable Embedded OS	The system will automatically reboot, and then the Embedded OS will not appear.
ViewBoard Settings Access Password	Toggle to lock/unlock the ViewBoard Settings.
Password for Protection	Modify the Boot mode and ViewBoard Settings entry password.
Local File Protection Policy	Choose how long to keep local storage files in the Folder application.
Color Correction	Color correct the ViewBoard display screen.

Item	Description
Non-ViewBoard OS Mode Side Toolbar Settings	Toggle to turn on or off the side toolbar for non-ViewBoard OS environment.
Reset ViewBoard	Reset the ViewBoard to its factory default settings.

Startup & Shutdown

Set the **Startup Input, Standby Mode, EnergyStar Mode, Black Screen After Startup, Power off Reminder** timer and **Schedule** settings.

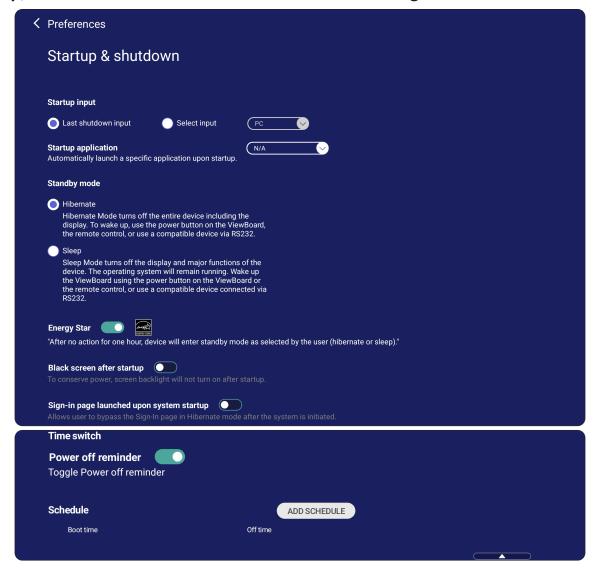

ltem	Description
Startup Input	Adjust the Startup Input preference.
Startup Application	Open an application automatically when logging in.
Standby Mode	Decide what happens when you press the Power button while the ViewBoard is on.
Energy Star	Enable to automatically initiate Sleep Mode when the screen is idle for one hour.
Black Screen After Startup	When enabled, the ViewBoard will turn off the backlight automatically after booting up.

ltem	Description
Sign-in Page Launched Upon System Startup	Enable to skip the sign-in screen when waking up the ViewBoard from Sleep Mode.
Time Switch	When enabled, the ViewBoard will turn off without a notification after a set period of time.
Schedule	Schedule a Boot and Shut off time.

Toolbar Setting

Adjust the Side toolbar settings.




Sensor Settings

Set the Motion sensor and Sensor data notification settings.



Multi-Window Mode

Enable/disable the **Multi-Window Mode**.

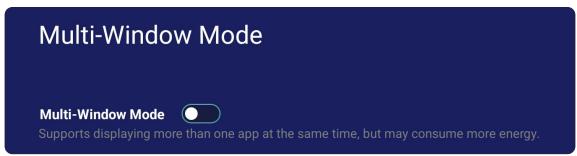


Sound Setting

Output audio from the preferred output source.




Input Source

Adjust the input source names and settings, as well as the side toolbar settings.

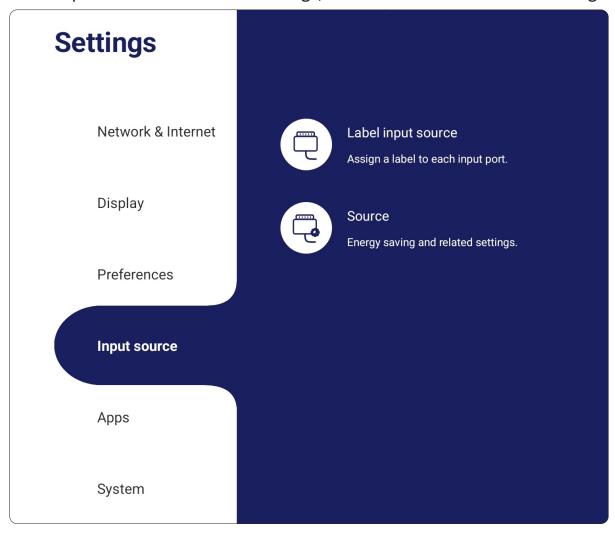


Label Input Source

Set labels for each input source that will be easily recognized when displayed.

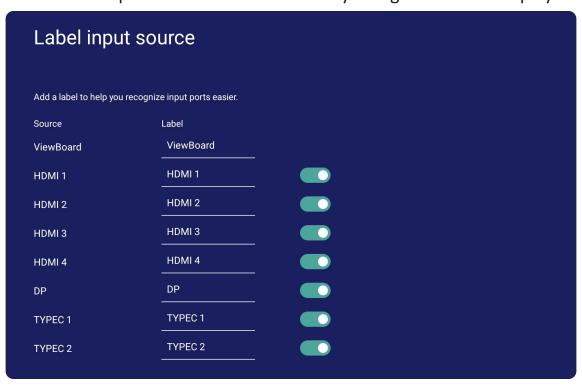

Source


Toggle Wake up by active HDMI input or HDMI CEC on or off, and select one of the Auto switch input ports options.

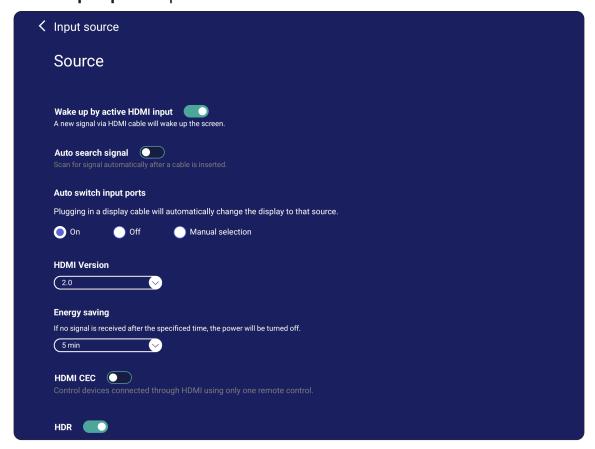

Item	Description
Wake up by Active HDMI input	The screen will turn on automatically after plugging in an HDMI cable when the screen is off.
Auto Search Signal	When enabled, if the current source does not have a signal, the ViewBoard will automatically search for an input source.
Auto switch input ports	The original signal will automatically switch to a new cable after it's plugged in.
HDMI Version	Set HDMI Version.
Energy Saving	Set a time period to power off if no signal is detected.
HDMI CEC	Enable/disable HDMI CEC functions.

Apps

The user can view application information and force stop, uninstall, move to USB storage, clear data, clear cache, and clear defaults.

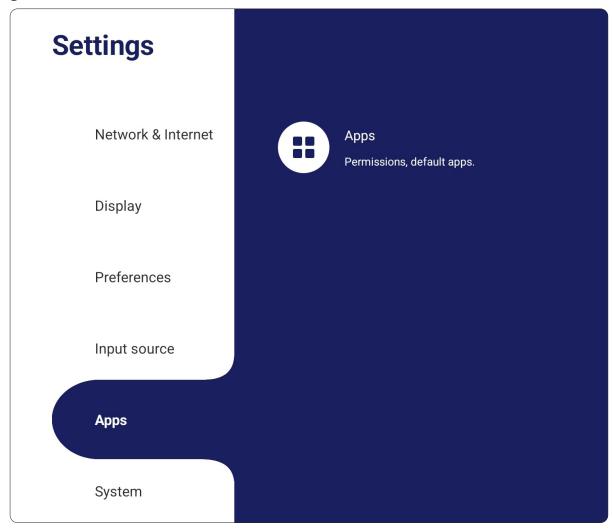


Note:


- Pre-loaded apps cannot be uninstalled.
- Not all apps support the move to USB storage feature.
- Not all apps support Clear Defaults.

Apps

View any running or installed applications.

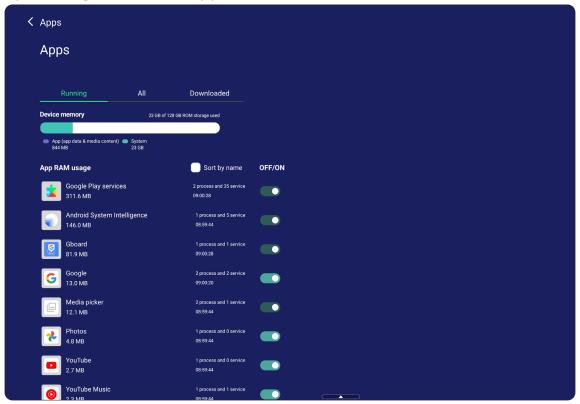


• Selecting **All** will display all installed applications.

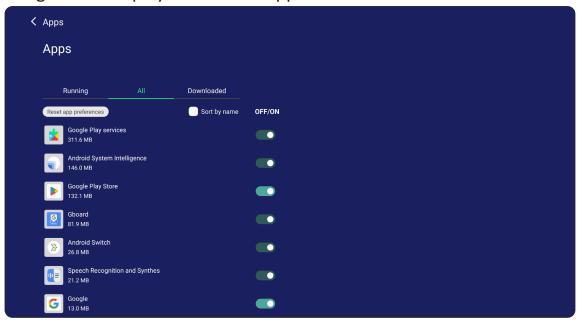

• Selecting **Download** will list all installed applications that can be uninstalled.




• Tapping on an application in the **Running/All/Download** panel will display further information about the application.

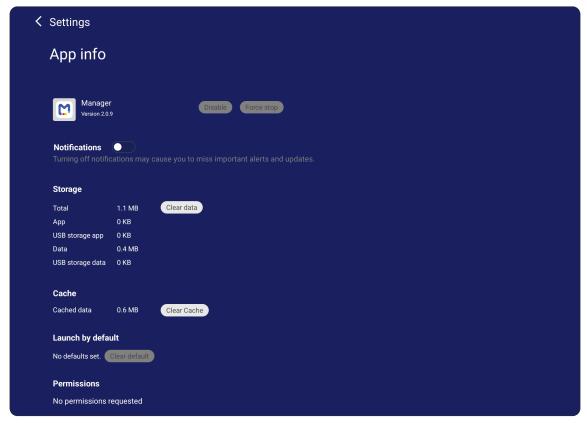


System

View and adjust **Storage**, **Clone to USB**, **Display ID**, **Security**, **System Update**, and **About device** settings.

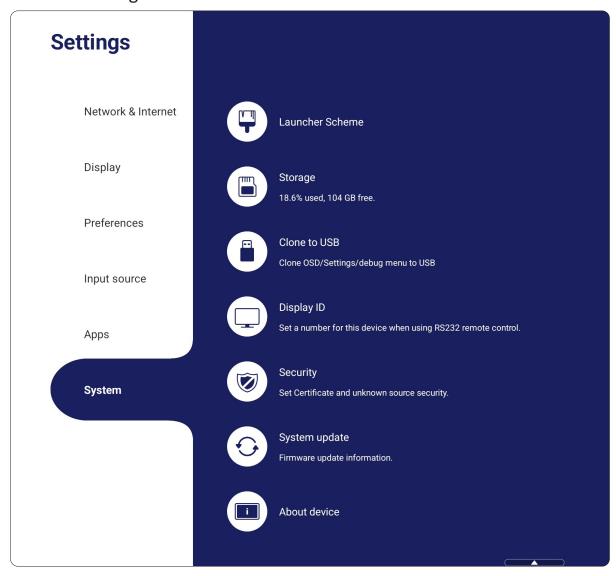


Launcher Scheme

Choose between Scheme A (Android Launcher) and Scheme B (ViewBoard Launcher) to set the Home Screen layout.

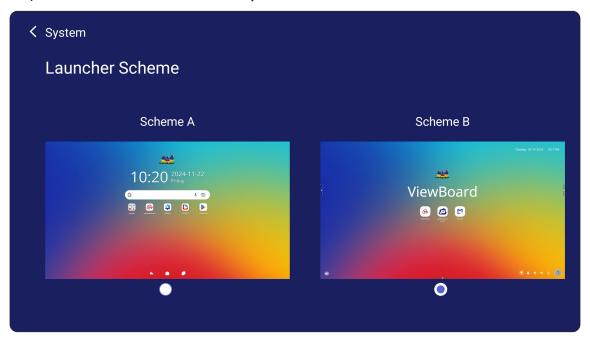


Storage

Displays all internal and external storage capacities.

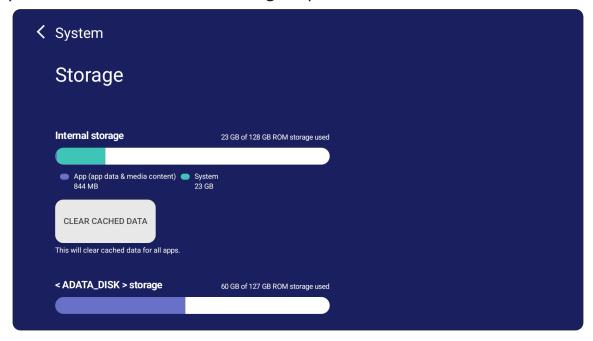

Clone to USB

Copy settings to an external USB drive.

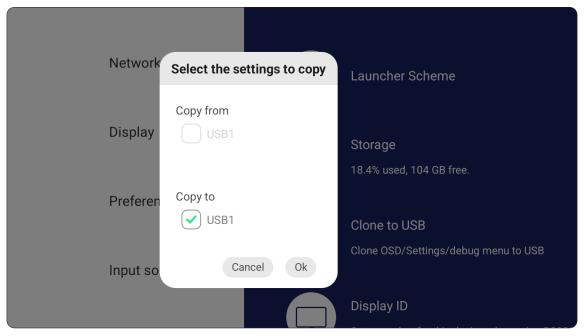


Display ID

Assign a number to remote control the display by RS-232/LAN.



• To assign or change the Display ID, tap **Change** and input a number.

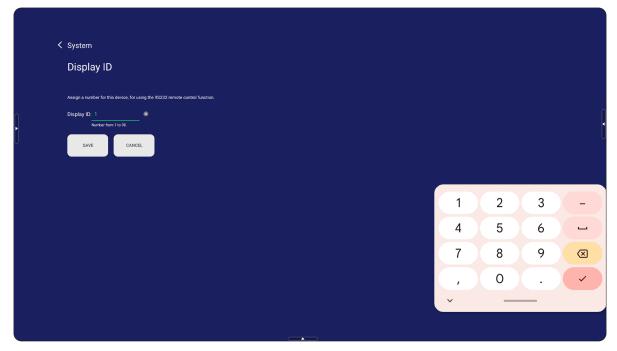

Note: The Display ID is for RS-232 users, and the range is 01~99.

Security

Review **Certificate**, **Trusted Credential** storage, and **Unknown sources** install settings.




• To manually install additional certificates, tap on the certificate from the list of the available **CA/User/Wi-Fi certificate** storages. Then, tap the file.

Note: You may be required to enter your PIN code again to confirm the action.



- Selecting Clear Credentials will remove all manually installed credentials.
 - 1. Tap Clear Credentials > OK.


Note: Pre-loaded credentials cannot be cleared.

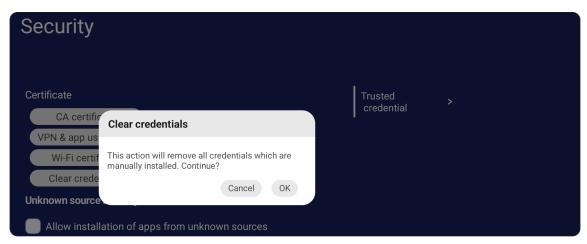

2. A confirmation message will appear when all credentials are removed.



• Under Trusted Credentials view and edit all trusted and installed CA certificates.

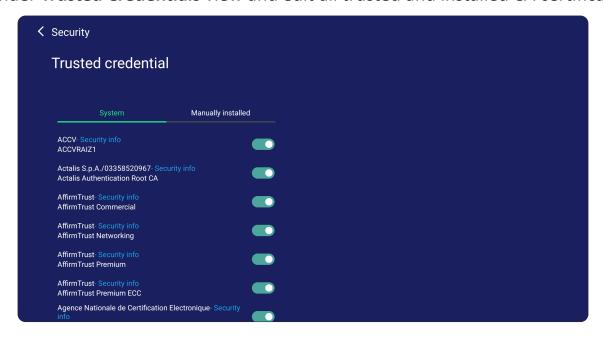

• Tapping on a credential will provide more detailed information.




• Allow the installation of applications from unknown sources by selecting the box under **Unknown source security**.



Note: Applications from unknown sources may not be compatible or work properly.

System Update

The ViewBoard automatically searches for software updates whenever connected to the Internet (OTA). With just one click, users can update their version of ViewBoard software.

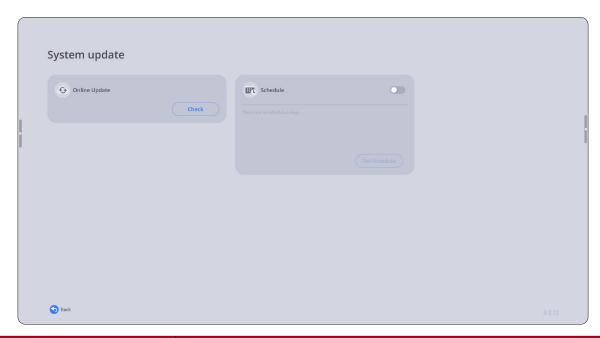


Item	Description
Online Update	Manually check online for a new software version.
	Set the update time.
	Schedule Setup
Schedule	2 17 AM 3 : 18 PM
	SUN MON TUE WED THU FRI SAT
	Cancel

About Device


Display Embedded Player information, Legal information, and Asset Tagging.



• By selecting **Edit**, the asset information can be adjusted.

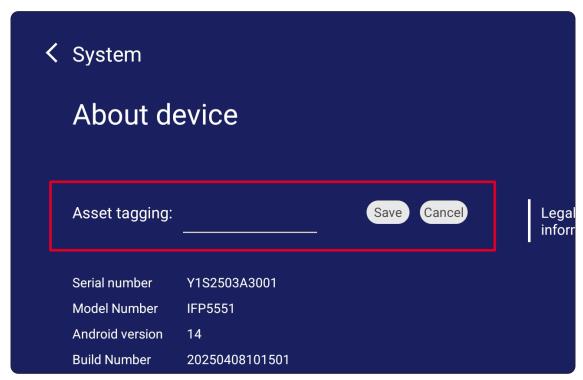


• Tap on **Legal information** to check open source licenses.

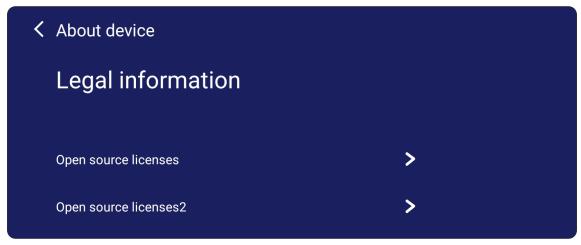

Android Launcher

Network & Internet

Check current connection status, set up and manage Wi-Fi, Ethernet, VPN, and wireless Hotspot.

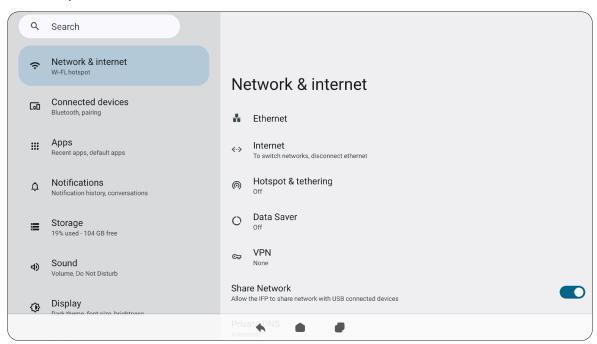


Item	Description
Ethernet	Set the Ethernet network settings.
Internet	Set up and manage Ethernet and Wi-Fi connection, as well as Network preferences.
Airplane Mode	When enabled, all wireless communication will be turned off.
Hotspot & Tethering	Set and share your internet connection with other devices.
Data Saver	When enabled, most apps and services will get background data via an internet connection. Active apps will not be affected.
VPN	Set up and manage Virtual Private Networks.
Share Network	Enable to share the network with other USB connected devices.
Private DNS	Maintain an Automatic Private DNS or set one up manually for security and privacy.

Note:

- Wi-Fi, Hotspot, and Bluetooth settings will appear when an optional Wi-Fi card (e.g., VB-WIFI-005) has been installed in the Wi-Fi Slot.
- Ethernet will take priority when both Ethernet and Wi-Fi are enabled.
- The device can connect to the Internet when Hotspot is enabled.

Connected Devices


Set up and manage Bluetooth connections, saved devices, and connection preferences for Bluetooth, Casting, and Print Services.

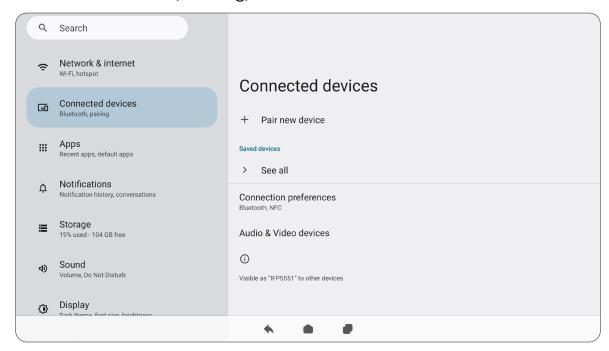

Item	Description
Pair New Device	Enable Bluetooth to search for and connect to a Bluetooth device.
Saved Devices	View all previously connected Bluetooth devices. Note: Bluetooth will turn on.
Connection Preferences	View Bluetooth, Cast, and Print Service preferences and share files with nearby devices.
Audio & Video Devices	View all USB connected devices.

Apps


View any running or installed applications. Tap on them for more detailed information and options.

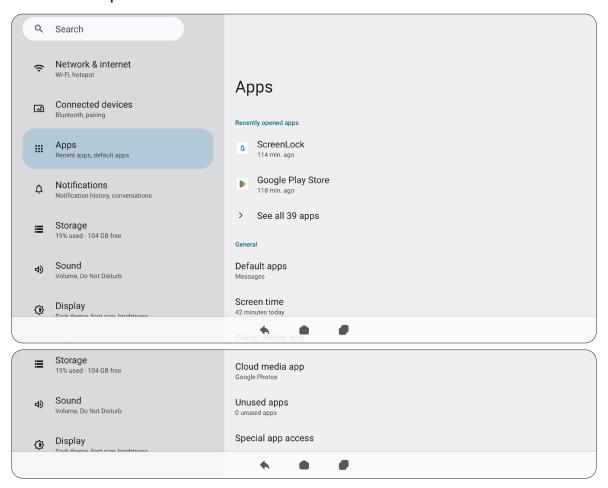

Item	Description
Recently Opened Apps	Any recently used applications will be listed here.
Default Apps	Set default applications for certain uses (e.g., default browser application).
Screen Time	Displays the total amount of time the ViewBoard has been in use by the day.
Cloud Media App	Set your cloud media items (e.g., photos, videos, etc.) locally on the ViewBoard.
Unused Apps	Applications that have not been used for a certain period of time will be listed here.
Special App Access	Set several access permissions for applications.

Notifications

Manage notification and conversation settings and preferences.

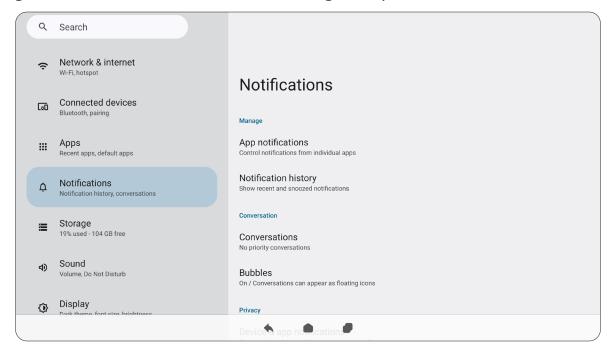


Item	Description
App Notifications	Set up notification settings for individual applications.
Notification History	View recent notifications.
Conversations	Set previously received notifications or messages as priority.
Bubbles	When enabled, conversations can appear as a floating icon on screen.
Device & App Notifications	Control which applications and devices can read notifications.
Notifications on Lock Screen	Choose to show all, some, or no conversations or notifications on the lock screen.
Do Not Disturb	Set notification preferences for when "Do Not Disturb" mode is turned on.
Flash Notifications	Set the screen or camera to light up every time a notification comes in.
Wireless Emergency Alerts	Choose to receive or not receive Emergency Alerts.
Hide Silent Notifications in Status Bar	When enabled, notifications that have been "silenced" will no longer appear in the status bar area.

Item	Description
Allow Notification Snoozing	When enabled, notifications can be "snoozed" for a short period of time for applications.
Notification Dot on App Icon	When enabled, a small dot will appear on the application icon when there is a new notification available.
Enhanced Notifications	When enabled, receive suggestions for actions, replies, etc.

Storage


Check the storage status of the ViewBoard.

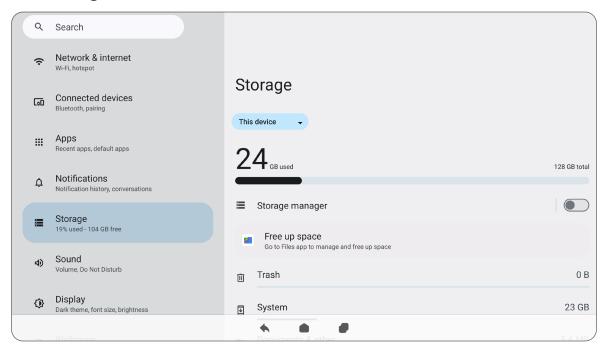

ltem	Description
Storage Manager	When enabled, the storage manager will remove backed up photos and videos.
Trash	View and manage files that have been moved to the Trash.
System	View the total storage space of system files.
Documents & Other	View and manage the Documents folder.
Games	View and manage the storage space used by gaming applications.
Apps	View and manage the storage space used by applications.
Audio	View and manage the Audio folder.
Videos	View and manage the Video folder.
Images	View and manage the Images folder.

Sound


Adjust the volume level and set up varies sound preferences.

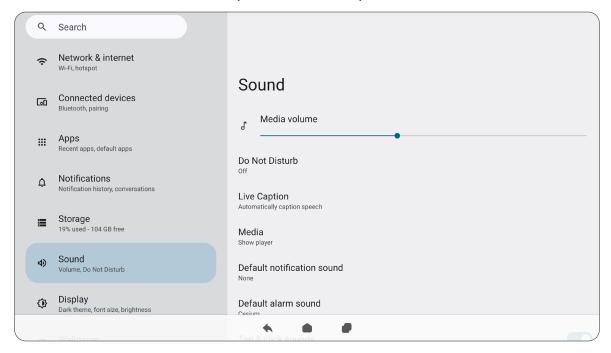

Item	Description
Media Volume	Adjust the volume level.
Do Not Disturb	Set sound preferences for when "Do Not Disturb" mode is turned on.
Live Caption	When enabled, automatically caption.
Media	Set the media player preferences.
Default Notification Sound	Choose the default sound effect for notifications.
Default Alarm Sound	Choose the default sound for alarms.
Tap & Touch Sounds	When enabled, a sound effect will play every time a touch or tap input is received.

Display


Adjust Brightness, Timeout, Theme, HDMI CEC, and other display related settings.

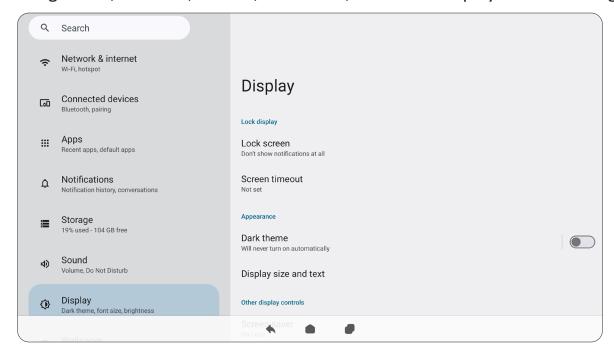

Item	Description
Lock Screen	Set lock screen preferences.
Screen Timeout	Set when the screen will lock after a period of inactivity.
Dark Theme	When enabled, the brighter default background color will be changed to a darker one.
Display Size and Text	Adjust the overall display size or only the text size.
Screen Saver	When enabled, a screen saver will play when the ViewBoard is not in use.

Wallpaper & Style


Adjust and personalize the Wallpaper, Colors and theme of the ViewBoard.

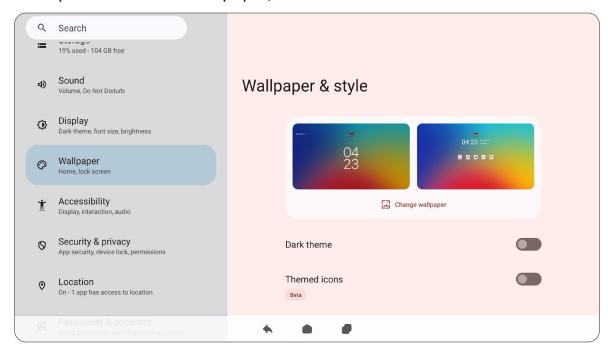

ltem	Description
Change Wallpaper	Select a wallpaper for the background.
Dark Theme	When enabled, the brighter default background color will be changed to a darker one.
Themed Icons	Set a set of icons that match the style of the application icons on the Home Screen with your wallpaper.

Accessibility

View and adjust various tools that can help people with visual, auditory, speech, or physical disabilities use the ViewBoard.

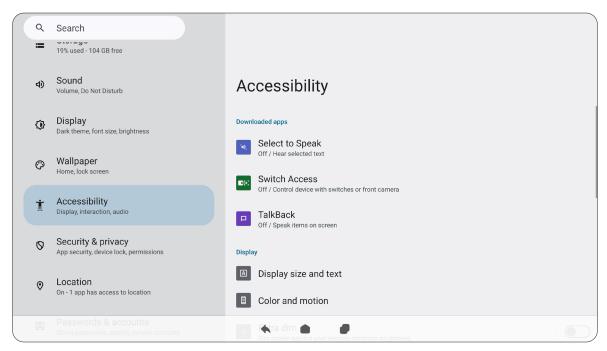


Item	Description
Select to Speak	When enabled, certain on-screen items will be read or described aloud when tapped (e.g., text or image).
Switch Access	Allows the use of one or more switches (e.g., keyboard, controller, etc.) to control the ViewBoard.
TalkBack	When enabled, device actions will be described by audio so it can be used without looking at the screen.
Display Size and Text	Adjust the overall display size or only the text size.
Color and Motion	Apply color correction and inversion and enlarge the mouse pointer.
Extra Dim	Dim the screen for a more comfortable viewing experience.
Magnification	Zoom in on the screen to enlarge the content.
Accessibility Menu	Add a shortcut for a enlarged on-screen menu to control the device.
Timing Controls	Adjust how long temporary messages that ask for an action are on screen, enable Auto click, and adjust the touch and hold delay time.
System Controls	Adjust the way to navigate the system.
Live Caption	Set the live caption preferences.

Item	Description
Caption Preferences	Enable captions and adjust the size and style.
Audio Description	When enabled, an audio description of what is happening on screen in supported movies and shows will be given.
Flash Notifications	Set the screen or camera to light up every time a notification comes in.
Audio Adjustment	Combine audio channels into a single mono channel.
Accessibility Shortcuts	Adjust the shortcut settings and availability on the lock screen.
Text-to-Speech Output	When set up, text can be read out loud.

Security & Privacy


Review and adjust device security and privacy settings.

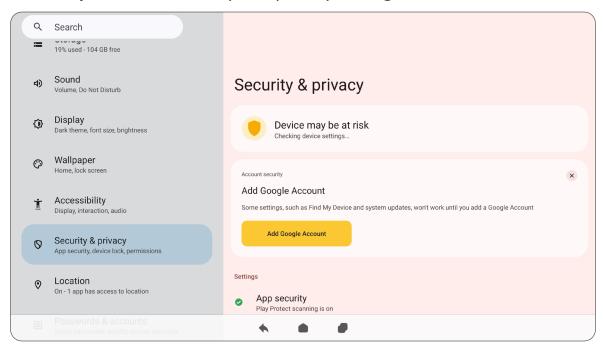

Item	Description
Device May Be at Risk	Scans regularly if the ViewBoard is safe from any harmful behaviors. Recommendations, and actions, will also be given to enhance the overall security and privacy.
Add Google Account	Add, remove, and manage your Google accounts linked to your ViewBoard.
App Security	Manage permissions for installed applications.
Device Unlock	Set the preferred options to lock/unlock the ViewBoard.
Account Security	Manage security permissions for all accounts on the ViewBoard.
Device Finders	Locate the ViewBoard remotely.
System & Updates	Check for system and security updates.
Privacy	Manage application access to your data (e.g., location or camera permissions, etc.)
More Security & Privacy	View and adjust additional security and privacy settings.
More Security Settings	View and adjust various security-related settings.

Location


View and manage location settings.

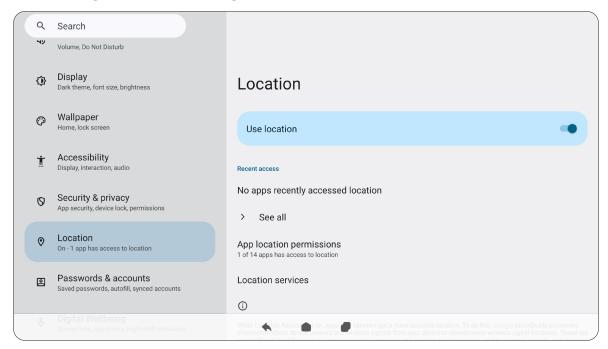

Item	Description
Use Location	When enabled, the location of the device will be accessible to applications.
Recent Access	Review which applications recently accessed the device's location.
App Location Permissions	Review which applications have permission to access the device's location.
Location Services	Turn on or off various alerts, services, and scanning related to location and location accuracy.

Passwords & Accounts


Review saved passwords, select autofill services, and add accounts.

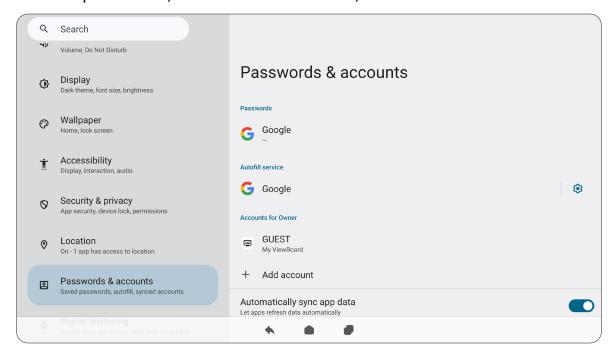

Item	Description
Passwords	Review saved passwords.
Autofill Service	Select which autofill service to use, if any.
Accounts for Owner	Add or remove accounts.
Automatically Sync App Data	When enabled, applications can refresh data automatically.

Digital Wellbeing


Review the ViewBoard's usage time, and set up various tools to promote a better balance with the device.

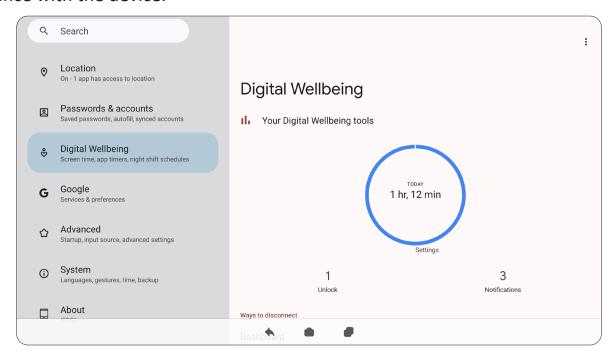

Item	Description
Your Digital Wellbeing Tools	A brief overview of device usage, unlocks, and notifications.
Dashboard	Review screen time, number of notifications, and number of device unlocks.
Night Shift	Reduce the amount of blue light emitted by the ViewBoard's screen.
Manage Notifications	Review which applications can send notifications.
Do Not Disturb	Set notification preferences for when "Do Not Disturb" mode is turned on.
Heads Up	Set notification preferences when you're moving with the ViewBoard.
Show Icon in the App List	Hide or display the Digital Wellbeing icon from your app list.


Google

Review all of Google's services and set up preferences.

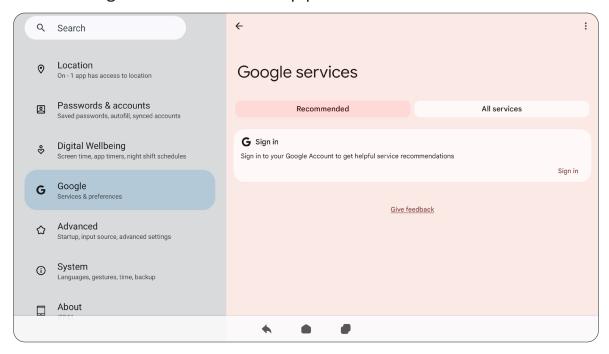

Advanced


View and adjust various system settings.

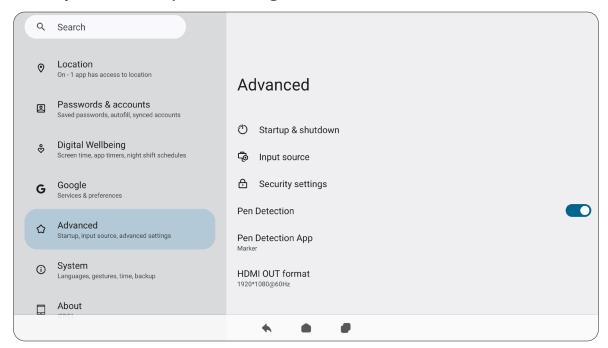

Item	Description
Startup & Shutdown	Set the startup and shutdown settings.
Input Source	Adjust the input source names, HDMI CEC, and other input source settings.
Security Settings	Set a password for the ViewBoard or the advanced settings, or manage the permissions to install applications from unknown sources.
Pen Detection	Enable the Pen detection function.
Pen Detection App	Set the preferred app when the Touch Pen is detected.
HDMI Out Format	Se the preferred HDMI Out Resolution settings.

System


View and adjust various system settings.

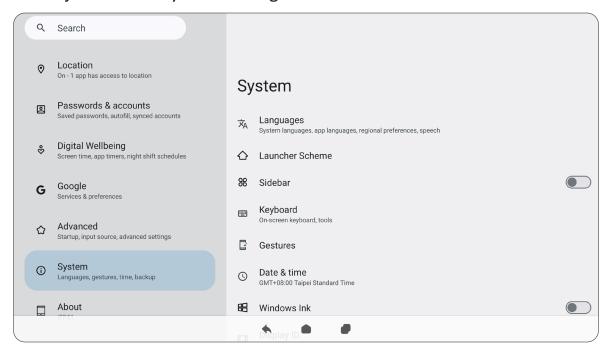

ltem	Description
Languages	Choose the preferred language and input method.
Launcher Scheme	Choose between Scheme A and Scheme B to set the Home Screen layout.
Sidebar	Adjust the side toolbar settings.
Keyboard	Enable/disable the visual keyboard and/or change the default input method.
Gesture	Set the preferred touch gestures when using the ViewBoard.
Date & Time	Set the date and time.
Windows Ink	Enable and set up Windows Ink support.
Display ID	Assign a number to remote control the display by RS-232/LAN.
Backup	With a Google account, back up the device's data.
ViewSonic System Update	Check for system updates.
Multiple Users	Review who is signed in and the available user logins.
Reset Options	Reset the ViewBoard to factory default settings.

About Device


Review device information.

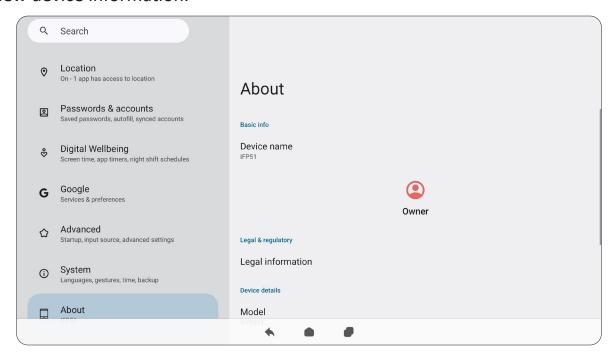

Item	Description		
Device Name	View the name of the device.		
Legal Information	View the relevant legal information.		
Model	View the model of the ViewBoard.		
Android Version	View the installed version of Android.		
IP Address	View the IP Address.		
Ethernet Address	View the Ethernet Address.		
Wi-Fi MAC Address	View the Wi-Fi MAC Address.		
Device Wi-Fi MAC Address	View the Device Wi-Fi MAC Address.		
Bluetooth Address	View the Bluetooth Address.		
Up Time	View how long the device has been in operation.		
Build Number	View the build number.		

Tips & Support

View new features, tips, and get support for the myViewBoard Whiteboard, myViewBoard Display, and myViewBoard Manager applications.

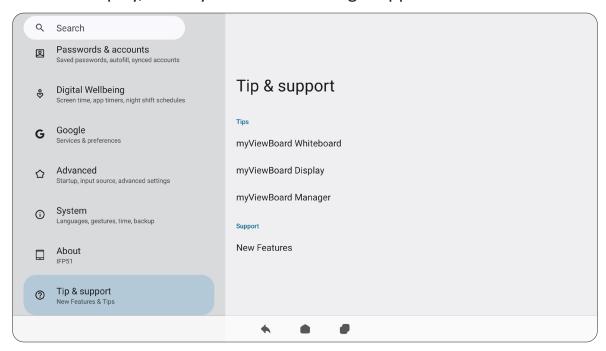

Android Settings Menu Tree

Menu	Sub-menu		Menu Option	
		DHCP		
		Static IP		
		IP Address		
	Ethernet	Dafault gateway		
	Ethernet	Netmask		
		DNS		
		Proxy		
		Mac address		
		Wi-Fi	Wi-Fi list	
Network & Internet		VVI-FI	Add network	
internet			Turn on Wi-Fi automatically	
			Notify for public networks	
	Internet	Network Preferences	Share Wi-Fi only via a QR code	
			Install certificates	Recent
			Wi-Fi direct	
		Saved Networks	Other networks	
		Non-carrier data usage		

Menu	Sub-menu		Menu Option	
			Use Wi-Fi hotspot	
			Hotspot name	
		Wi-Fi hotspot	Security	WPA2-Personal
	Hotspot & tethering	·	Turn off hotspot automatically	
			Extend compatibility	
		USB tethering		
National C		Bluetooth tethering		
Network & Internet	Data Saver	Unrestricted data		
		VPN+		
	VPN	VPN list		
	Shared network			
		Off		
		Automatically		
	Private DNS	Private DNS provider hostname		
		Enter hostname of DNS provider		

Menu	Sub-menu		Menu Option	
		Connected device		
		This device		
		File transfer		
		USB tethering		
	USB	PTP		
		No data transfer		
		Convert video to AVC		
		Charge connected device		
	Pair new	Device name		
	device	Available devices		
	See all	Saved devices		
Connected		Bluetooth	Use NFC Bluetooth	
Devices			Device name	
			Pair new device	
		NFC	Use NFC	
				Default payment
		IVIC	Contactless payments	app Use default
	Connection		. ,	payment app
	preferences	Cast	Cast list	
		Printing	Default print Service	
			Add service	
			Account	
		Quick share	Device name	
			Who can share with you	

Menu	Sub-menu		Menu Option	
		Camera		
			Auto	
		Mic	Off	
Connected	Audio & video		USB-audio touch device Auto	
Devices	devices		Auto	
		Mic	Speaker	
			HDMI out	
		Speaker		
			App info	
			Notifications	
				Location
				Phone
			is unused Clear storage/ca	Camera
				Pause app activity is unused
				Clear storage/cache
				App size
Apps	Recently	App list	Storage & cache	User data
	opened apps			Cache
				Total
				Total
			Mobile data & Wi-Fi	Foreground
				Background
				App timer
			Screen time	Manage notifications
				App used in the background

Menu	Sub-menu		Menu Option	
				Unrestricted
			App battery usage	Optimized
			asage	Restricted
			Open by default	Open supported links
	Recently opened apps	App list	Pause app activity if unused	
			Display over	
			other apps	Allow display over other apps
			Modify system settings	Allow modifying system settings
			Version	
Apps		Browser app	Default browser app	
		Digital assistant	Use text from screen	
		Digital assistant app	Use screenshot	
	Default anns		Flash screen	
	Default apps	Home app	Default home app	
		SMS app	Default SMS app	
			Instant apps	
		Opening links	Opening links Instant apps preferences	
	Screen time	Activity details		
	Cloud media app			
	Unused apps			

Menu	Sub-menu		Menu Option
Menu	Sub-menu	All files access Device admin apps Display over other apps Do not disturb access Media management apps Modify system settings Device & app notification	Menu Option
Apps	Special app access	1	
		Usage access VR helper services	
		Wi-Fi control Turn screen on	
		Full screen notification	

Menu	Sub-menu		Menu Option	
			Screen lock	
				All Google Play store notification All "Alerts" notifications
				Account
				App auto open
				Open app reminders
	Арр	A num limb	Open apreminded Paymen Deals, a Recommend Updates available Store Updates commend All "Essent Paymen Deals, a Recommend Updates available Deals available Deal	
	notifications	App list Google Play store Updates available of the play store Updates available of the play store Updates available of the play store All "Essent notification of the play Proton		Updates available
				Updates completed
Notifications				All "Essentials" notifications
				Maintenance
			Play Protect	
				required
			All Google Play store notification All "Alerts" notifications Account App auto open Open app reminders Payments, Deals, and Recommendation Updates available Updates complete All "Essentials" notifications Maintenance Play Protect required Security and error Setup	
		Sec		Setup
				All notification dot
	Notification history	Use notification history		
	Conversations			
	Bubbles	Allow apps to show bubbles		
	Device & app	Allowed		
	notifications	Not allowed		

Menu	Sub-menu		Menu Option	
	Notifications on lock screen	Show conversations, default, and silent Hide silent conversations and notification Don't show any notifications		
	Sensitive notifications			
		Turn on now		
				Starred contact
				Contacts
				· ·
				Anyone
Notifications		People		None
		георіе	Starred contact	
			Calls	Contacts
	Do not disturb			Anyone
				None
				Allow repeat callers
		Anns	Apps	
		Apps	Add apps	
			Alarms	
			Media sounds	
		Alarms & other interruptions	Touch sounds	
			Reminders	
			Calendar events	

Menu	Sub-menu		Menu Option	
				User schedule
				Days
				Start time
			Sleeping	End time
				Alarm can override end time
		Schedules		Do Not Disturb behavior
				User schedule
				During events for
			Event	Where reply is
	Do not disturb			Do not disturb behavior
			Add more	
		Duration for quick settings The settings Settin		
Notifications			For 1 hour	
			Ask every time	
			No visuals or sound from notification	
				Don't turn on screen
		Display options for		Don't wake for notifications
		hidden notification		Hide notification dots on app icons
			Custom	Hide status bar icons at top of screen
				Don't pop notifications on screen
				Hide from pull-down shade

Menu	Sub-menu		Menu Option	
	Flash	Screen flash		
	notifications	Preview		
	Wireless Emergency Alerts			
Notifications	Hide Silent Notifications in Status Bar			
	Allow Notification Snoozing			
	Notification Dot on App Icon			
	Enhanced Notifications			
		User storage manager		
	Storage manager		Over 30 days old	
		Remove photos & videos	Over 60 days old	
			Over 90 days old	
	Trash			
	System			
Storage	Apps			
	Documents & other			
	Games			
	Apps			
	Audio			
	Videos			
	Images			

Menu	Sub-menu		Menu Option	
	Media volume			
				Starred contacts
				Contacts
			Messages	Priority conversations
				Anyone
		People		None
				Starred contacts
			Calla	Contacts
Sound	Do not disturb		Apps	Anyone
				None
		Anne		
		Аррѕ	Add apps	
			Alarms	
		Apps Apps Add apps Alarms Alarms & other Touch sounds		
		Alarms & other interruptions	Touch sounds	
		terraptions	Reminders	
			Calendar events	

Menu	Sub-menu		Menu Option	
				User schedule
				Days
				Start time
			Sleeping	End time
				Alarm can override end time
		Schedules		Do Not Disturb behavior
				User schedule
			_	During events for
			Event	Where reply is
				Do not disturb behavior
			Add more	
	Do not disturb	Duration for quick settings	Until you turn off	
Sound			For 1 hour	
			Ask every time	
			No sound from notification	
			No visuals or sound from notification	
				Don't turn on screen
		Display options for		Don't wake for notifications
		hidden notification		Hide notification dots on app icons
			Custom	Hide status bar icons at top of screen
				Don't pop notifications on screen
				Hide from pull-down shade

Menu	Sub-menu		Menu Optio
		Use Live Cation	
		Language	(English only)
		Hide profanity	
	Live caption	Show sound labels	
Sound		Live Caption in volume control	
		Help	
	Media	Pin media player	
		Show media on lock screen	
		Show media recommendations	
	Default notification sound	None	
		Adara/Aldebaran/ Selenium/	
	Journa	Add notification	

Menu	Sub-menu		Menu Option
		None	
		Argon	
		Barium	
		Bee-Beep alarm	
		Beep-Beep-Beep alam	
		Buzzer alarm	
		Cabon	
	Default alarm sound	Cesium	
		Heium	
		Krypton	
Sound		Neon	
		Neptunium	
		Osmium	
		Oxygen	
		Piezo alarm	
		Platinum	
		Platinum	
		Rooster alarm	
		Scandium	
		Add alarm	
	Tap & click sounds		

Menu	Sub-menu		Menu Option
			Show all notification content
		Privacy	Show sensitive content only when unlocked
			Don't show notifications at all
		Add users from lock screen	
	Lock screen	Add text on lock screen	
		Show device controls	
Display		Use device controls	
		Dynamic clock	
		Wake screen for notifications	
		Double-line clock	
		15 seconds	
		30 seconds	
		1 minute	
	Screen timeout	2 minutes	
		5 minutes	
		10 minutes	
		30 minutes	

Menu	Sub-menu		Menu Option
		Use dark theme	
			None
	David Alexand		Turns on at custom time
	Dark theme	Schedule	Turns on from sunset to sunrise
			Turns on bedtime
		Font size	
	Display size and text	Display size	
		Bold text	
		High contrast text	
Display		Reset settings	
		Use Screen Saver	
		Screen saver	Never
			15 min
			30 min
			60 min
	Screen saver		90 min
			Clock
			Colors
		Choose a screen saver	Photos frame
			Photo table
			Photo

Menu	Sub-menu		Menu Option
	Wallpaper	Home screen	
		Lock screen	
		My Photos	Select a photo
		On-device wallpapers	Preview
		Cityscapes	
	Change wallpaper	Life	
		Textures	
Wallpaper &		Landscapes	
Style		Art	
		Earth	
		Solid colors	
		Geometric shapes	
		Seascape	
		Wallpapers	
	Dark theme		
	Themed icons		

Menu	Sub-menu	Menu Option		
		Select to speak shortcut		
				Preferred engine
			Text to speech	Language
			settings	Speech rate
				Pitch
	Select to speak	Settings	Change reading voice	
			Read in background	
Accessibility			Read text on images	
			Help & feedback	Popular help resources
				Enable taking snapshot
			Developer settings	Allow snapshot to take detail information
	Switch access	Use Switch Access	Choose a switch type	
		Switch Access shortcut		

Menu	Sub-menu		Menu Option	
			Help & feedback	Popular help resources
			Open setup guide	Choose a switch type
				Use camera switches
				Open mouth
				Smile
				Raise eyebrows
				Look left
			Camera switch	Look right
		Settings	settings	Look up
	Switch access			Enhanced visual feedback
				Enhanced audio feedback
Accessibility				Keep screen on
				Ignore repeated camera switch triggers
				Pause camera Switch
				Auto-scan
				Reverse auto-scan
			Assign switches	Select
			Assign switches for scanning	Next
				Previous
				Touch & hold
				Scroll forward
				Scroll backward
		Assign switches to shortcuts	New shortcuts	

Menu	Sub-menu		Menu Option	
			Enable menu customization	
			Revert to Default Menu	Restore default menu
				Auto-scan time
			Auto-scan	Delay on first item
				Number of scans
				Linear scanning
	Switch access	h access Settings	Scanning method	Row-column scanning
				Group selection
Accessibility			Point scan	Line speed
				Delay on first item
				Number of scans
				Vertical scans
				Horizontal scans
			Automatically start scanning	
			Auto-select	
			Scanning	Highlight color
			highlight style	Highlight line style

Menu	Sub-menu		Menu Option	
				Spoken feedback
				Speak descriptive text
				Verbosity
				TTS settings
		Settings	Speech, sound	Finish speech before moving
	Switch access		& vibration	Maximum spoken time per item
				Vibration feedback
				Sound feedback
Accessibility				Sound volume
				Audio ducking
			Ignore repeated presses	
			Release to perform action	
			Privacy policy	
				Version
			Developer	Display speech output
			settings	Delete all shortcuts
				Log output level

Menu	Sub-menu		Menu Option	
		Use TalkBack TalkBack shortcut		
			New features in TalkBack	
				Preferred engine
				Language
			Text-to-speech settings	Speech rate
			_	Pitch
				Play/Reset
				Choose a preset
				Speak usage hints
	TalkBack	Settings	Verbosity	Speak list and grid info
				Always speak number of list items
Accessibility				Speak element type
				Speak window names
				Speak notifications when screen is off
				Use pitch changes
				Speak letters with examples
				Keyboard echo: On-screen keyboard
				Keyboard echo: Physical keyboard
				Capital letters
				Speak all progress updates
				Speak element IDs
				Speak punctuation and symbols

Menu	Sub-menu		Menu Option	
				Accessibility volume TalkBack speech rate
			Sound	Sound feedback
				Sound feedback volume
				Audio ducking
				Thick borders
				Color default
				Red
	TalkBack	ılkBack Settings	Customize focus	Orange
				Yellow
				Green
				Blue
Accessibility				Grey
			Customize Gestures	Practice gestures
				Reset gesture setting
				Swipe up/Swipe down/Swipe left/
			Customize	Customized TalkBack menu
			menus	Customized reading controls
				Detailed image descriptions
			Image & icon	Automatic image descriptions
			descriptions	Automatic icon descriptions
				Automatic descriptions for text in image

Menu	Sub-menu		Menu Option	
				Set up braille keyboard
				Review all gestures
				Languages
			Braille keyboard	Preferred typing language
			braille keyboard	Preferred braille grade
				Layout
			Include all pressed dots	
				Reverse dots
				Use braille display
Accessibility	TalkBack	Settings		Look for new device
				Languages
				Preferred reading language
			Braille display	Preferred typing language
				Preferred braille grade
		Braille display commands		
				Braille elements
				Auto-connect
				Auto-scroll

Menu	Sub-menu		Menu Option	
				Speak passwords
				Custom labels
				Single-tap to activate
				Element description order
				Time format
			Advanced settings	Reduce window announcement delay
				Typing preference
	TalkBack	Settings		Touch and hold delay when typing
			Keyboard shown Developer set	Keyboard shortcut
Aib:i:4				Developer settings
Accessibility				Privacy policy
				Terms of service
			Open Talkback at the Play Store	
			TalkBack tutorial	
			Help & feedback	
			Contact Google disability support	
		Font size		
		Display size		
	Display size and text	Bold text		
	3.73. 00/10	High contrast text		
		Reset settings		

Menu	Sub-menu		Menu Option	
			Use color correction	
			Red-green	
		Color correction	Red-green	
		Color correction	Blue-yellow	
			Grayscale	
			Color correction shortcut	
	Color and	Color inversion	Use color inversion	
	motion	Color inversion	Color inversion shortcut	
			Use dark theme	
Accessibility		Dark theme		None
			Turns on a custom time	
			Schedule	Turns on from sunset ro sunrise
				Turns on at bedtime
	Large mouse pointer			
		Make scree extra dim		
		Intensity		
	Extra dim	Keep on after device restarts		
		Extra dim shortcut		

Menu	Sub-menu		Menu Option
		Magnification shortcut	
		Magnification type	Magnify full screen
	Magnification	Magnification type	Magnify part of screen
		Magnify typing	
		Keep on while switching apps	
	Accessibility	Accessibility Menu shortcut	
	Accessibility menu	Settings	Large button
			Help & feedback
		Touch & hold delay	Short
Accessibility			Medium
		,	Long
		Time to take action	Default
			10 seconds
			30 seconds
	Time controls		1 minute
			2 minutes
			Autoclick off
			Short
		Autoclick	Medium
			Long
			Custom

Menu	Sub-menu	Menu Option		
				Swipe to invoke assistant
			Gesture	Left edge
	Constrains		navigation	Right edge
	System controls	Navigation mode Navigation mode 3-button navigation Side toolbar navigation Use live caption Languages Hide profanity Show sound labels Live caption in volume control Help Show captions Very smale	Hold Home for Assistant	
		Use live caption		
		Languages		
		Hide profanity		
	Live caption	Show sound labels		
Accessibility		Help		
		Show captions		
			Right edge Hold Home for Assistant 3-button navigation Side toolbar navigation n Pels I Text size Very small Small Small Large Very large Very large Set by app White on black Pellow on blue Custom	Very small
				Small
			Text size	Medium
				Large
				Very large
	Caption preferences	Caption size and style		Set by app
	•	,		White on black
			Cation style	Black on white
			Cation style	Yellow on black
				Yellow on blue
				Custom
		More options	Languages	

Menu	Sub-menu		Menu Option	
	Audio description			
	Flash	Screen flash		
	notifications	Preview		
	Audio adjustment	Mono audio		
			Location	Floating over other apps
				Navigation bar
		Accessibility	Accessibility Size button	Small
A cooseibility	Accessibility shortcuts	i i		Large
Accessibility			Fade when not in use	
			Transparency when not in use	
		Shortcut from lock screen		apps Navigation bar Small
		Preferred engine		
	Text-to-speech output	Language		
		Speech rate		
	2 3.20 3.0	Pitch		
		Play/Reset		

Menu	Sub-menu		Menu Option	
	Device may be at risk Add Google Account			
	Check for security updates			
	Check for system updates			
	App security	Google Play protect		
			Enhanced PIN privacy	
		Screen lock PIN	Lock after screen timeout	Immediately
				5 seconds
Security &				15 seconds
Privacy				30 seconds
	Device unlock			1 minute
				2 minute
				5 minute
				10 minute
				30 minute
				Never
	Account	Google security Checkup		
	security	Password checkup		
	Device finders	Find my device	Use find my device	
	Device illideis	Unknow tracker alerts		

Menu	Sub-menu		Menu Option	
		Check for security updates Check for system updates		
	System & updates	Security update		
		Google Play system update		
		Backup		
		Permission manager		
		Privacy dashboard		
			Ad topics	Ad topics
			Ad privacy	App-suggested ads
Security &				Ad measurement
Privacy		Ads	Reset advertising ID	
			Delete advertising ID	
	Privacy		Enable debug logging for ads	
		Health connect		
		Data sharing updates for location		
		Camera access		
		Microphone access		
		Show clipboard access		
		Show passwords		

Menu	Sub-menu		Menu Option	
			Use location No apps recently	
		Location access	accessed location	
	Privacy		App location permissions	
			Location services	
		Activity controls		
		Accessibility usage		
			Show all notification content	
Security & Privacy		Notifications on lock screen	content only	
			Don't show notifications at all	
	More security settings	Show media on lock screen		
		App content		
			Device learning	
			Keyboard	
		Android system	On-device recognition	
		Intelligence		Last hour
			Clear data	Last 24 hours
				All time

Menu	Sub-menu		Menu Option	
		_	Encrypt device	
			credentials	
			User credentials	
				CA certificate
		Encryption & credentials	Trusted credentials User credentials CA certificate VPN & app user certificate Wi-Fi certificate Clear credentials Certificate management app Extend unlock Use app pinning Lock device when unpinning	
Security &	More security			Wi-Fi certificate
Privacy	settings		Clear credentials	
			management	
		Trust agents	Extend unlock	
		App pinning Lock d	Use app pinning	
	Use location			
	Recent access			
	App location permissions	App list		
		Earthquake alerts		
		Emergency location Service		
Location		Google location History		
	Location services	Google location Sharing		
	SCI VICES	Location accuracy		
		Trusted places		
		Wi-Fi scanning		
		Bluetooth scanning		

Menu	Sub-menu		Menu Option	
	Passwords			
	Autofill service			
Passwords & accounts	Accounts for owner			
	Add account			
	Automatically sync app data			
	Your Digital Wellbeing	Unlocks		
	tools	Notifications		
	View activity details			
	App limits			
	Night shift	Do not disturb for night shift mode		
	Focus			
	Screen time reminders			
	Manage notifications	App notifications		
Digital				Starred contacts
Wellbeing			Messages	Contacts
				Priority conversations
				Anyone
		People		None
	Do Not Disturb			Starred contacts
			Calls	Contacts
			Calls	Contacts Priority conversations Anyone None Starred contacts
				None
		Anns	Apps	
		Apps	Add apps	

Menu	Sub-menu		Menu Option	
		Alarms Media sound	Alarms	
			Media sound	
		Alarms & other interruptions	Touch sounds	
		,	Reminders	
			Calendar events	
				User schedule
			Sleeping	Days
				Start time
				End time
Digital	Do not disturb			Alarm can override end time
Wellbeing	Do not disturb	Schedule		Do not disturb behavior
			Event	User schedule
				During events for
				Where reply is
				Do not disturb behavior
			Add more	
		Duration for quick	Until you turn off	
		Duration for quick settings	For 1 hour	
			Ask every time	

Menu	Sub-menu		Menu Option	
			No sound from notifications	
			No visuals or sound from notifications	
				Don't turn on screen
		Display options for hidden notifications	Custom Custom	Don't wake for notifications
	Do not disturb			Hide notification dots on app icons
Digital Wellbeing				Hide status bar icons at top of screen
				Don't pop notifications on screen
			Hide from pull- down shade	
	Heads up			
	Show icon in the app list			
	Parental controls			

Menu	Sub-menu		Menu Option
	Google services		
		Account storage	
		Backup by Google One	
		Backup details	
		Apps	
		Photo & videos	
		Device settings	
	Backup is off		Calendar
	for photos & videos		Contacts
	videos		Drive
		Google account data	Gmail
			Google Calendar
Google			Google TV
			Tasks in Calendar
		Back up using meter Wi-Fi data	
		Use find my devices	
		Find your offline devices	Off
			Without network
	Find my device		With network in high-traffic areas only
			With network in all areas
		Find my device app	
		Find my device web	

Menu	Sub-menu		Menu Option
		Use autofill with Google	
		Google Account	
		Personal info	
	Autofill	Google Password Manager	
		Google Pay	
		Preferences	
	Google Wallet		
Google	Cross-device services	Account	
		Device name	
		Who can share with you	Your devices
			Contacts
		with you	Everyone
	Family group	Creat a family group	
	What's new		
	Give feedback		
	Parental Controls		

Menu	Sub-menu		Menu Option
		Boot mode Boot mode Disable embeded OS	Normal mode
			Secure mode
			Last shutdown channel
			ViewBoard
			HDMI 1
			HDMI 2
		Startup input HDMI 3 HDMI 4 DP VGA	HDMI 3
	Startup &		HDMI 4
Advanced	shutdown		DP
		6	Hibernate
		Standby Mode	Sleep
		Energy Star mode	
		Add startup/ shutdown task	Startup task/ Shutdown task
			Schedule settings

Menu	Sub-menu		Menu Option
			Allow input alias
			ViewBoard
			HDMI 1
			HDMI 2
		Labol input Source	HDMI 3
		Label input Source	HDMI 4
			DP
			VGA
			Type-C 1
			Type-C 2
		Wake up by active HDMI input	
	Input source	Auto search signal	
Advanced		Auto switch input ports	
			Manual selection
			1 min
			3 mins
			5 mins
			10 mins
		Energy saving	15 mins
			30 mins
			45 mins
			60 mins
			Off
		HDMI CEC	
		HDR	

Menu	Sub-menu		Menu Option
	Security settings	Unknown source security	
		Enable password for ViewBoard settings	
		Reset Advanced Settings Password	
	Pen detection		
Advanced	Pen detection	Marker	
	арр	myViewBoard whiteboard	
		3840 x 2160 @ 60 Hz	
	HDMI OUT	1920 x 1080 @ 60 Hz	
	fromat	720 x 480 @ 60 Hz	
		Auto	
	System languages		
	App Languages		
		Regional preferences	
		Temperature	Use default
			Celsius (°C)
			Fahrenheit (°F)
System			Use default
Зузісііі	Regional preferences		Sunday
	preferences		Monday
		First day of week	Tuesday
			Wednesday
			Thursday
			Friday
			Saturday
	Voice input		

Menu	Sub-menu		Menu Option
	On-device recognition	Add language	
		Auto update	
		languages Advanced	
		Preferred engine	
		Languages	
	Text-to-speech	Speech rate	
	output	Pitch	
		Play/Reset	
	Launcher	Scheme A	
	Scheme	Scheme B	
	Sidebar	On/Off	
		Gboard	
		Google Voice	
System		Typing	
		Remoting Use on-screen	
		keyboard	
		Keyboard shortcuts	Caps lock
			Ctrl
			Action key
	Keyboard		Alt
			Reset all
			Use spell checker
		Spell checker	Languages
			Default spell checker
		Personal dictionary	
		Pointer speed	

Menu	Sub-menu		Menu Option
	Gestures	Navigation mode	Gesture navigation 3-button navigation Side toolbar navigation
		Press & hold power button	Power menu Digital assistant
		Set time automatically	
		Date	
		Time	
	Data & tima	Set automatically	
	Date & time	Time zone	Region
			Time zone
System		Use locale default	
		Use 24-hour format	
	Windows Ink		
	Display ID		
	Backup		
	System Update		
		Allow multiple users	
		User	
		Add user	
	Multiple Users	Add guest	
		Delete guest activity	
		Add users from lock screen	


Menu	Sub-menu		Men
System	Reset options	Reset Wi-Fi & Bluetooth	
		Reset app preferences	
		Erase all data (factory rest)	
	Device name		
		Third-party license	
		Google legal	
About Device	Legal information	Google Play system update license	
		System Webview license	
		Wallpaper credits	
		Open source licenses	
		Model	
	Model	Serial number	
		Asset Tagging	
		Android version	
	Android	Android security update	
	version	Kernel version	
		Build number	

Menu	Sub-menu
	IP address
	Ethernet address
	Wi-Fi MAC address
About Device	Device Wi-Fi MAC address
	Bluetooth address
	Up time
	Build number
	myViewBoard Whiteboard
Tips & Support	myViewBoard Display
	myViewBoard Manager
	New features

Pre-installed Applications and Settings

AirSync

Wirelessly mirror screens to a larger display.

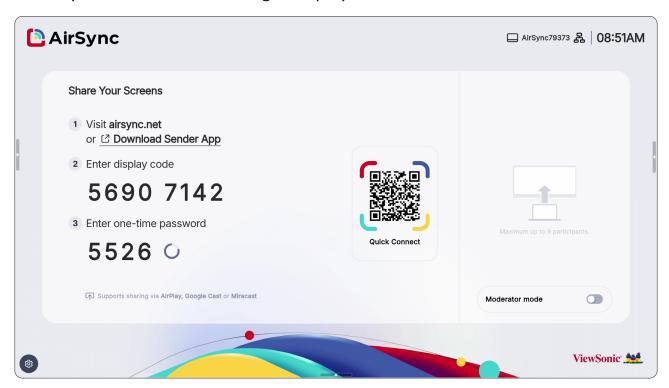


To share a screen to a ViewBoard with AirSync:

- 1. Open AirSync on the ViewBoard you want to share your screen to.
- 2. On the device you want to share the screen from, go to: https://airsync.net.
- **3.** Enter the **Display Code** and **One Time Password** for the ViewBoard you wish to share to.

Note: The password refreshes every 30 seconds.

myViewBoard Manager

Remotely manage multiple installations of ViewSonic devices.

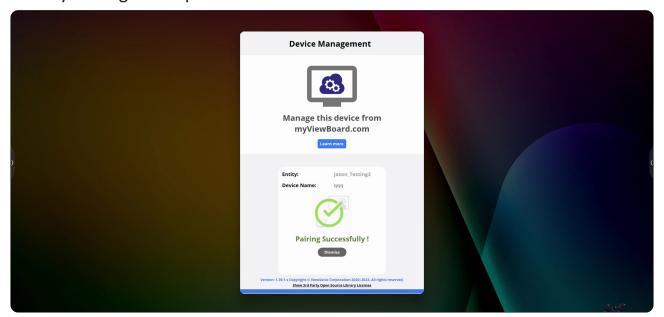

Once devices are set up and have myViewBoard Manager installed, they can be added to the entity and managed remotely from the Manager web application.

Note: Only available to Entity Admins from myviewboard.com after signing in.

Add a Device

On the device to manage:

- 1. Download and install myViewBoard Manager.
- 2. Open myViewBoard Manager and note the 6-digit PIN displayed.

In the myViewBoard Manager web application on myviewboard.com:


- 1. Click Add Device.
- 2. Input the 6-digit PIN obtained earlier.
- 3. Name the device (if applicable).
- 4. Click Add.

Note: To learn more about myViewBoard Manager, visit: https://myviewboard.com/kb/en US/getting-started/overview-manager.

myViewBoard Whiteboard

A digital whiteboarding application.

Note: To learn more about myViewBoard Whiteboard, visit: https://myviewboard.com/kb/en_US/getting-started-whiteboard/overview-whiteboard.

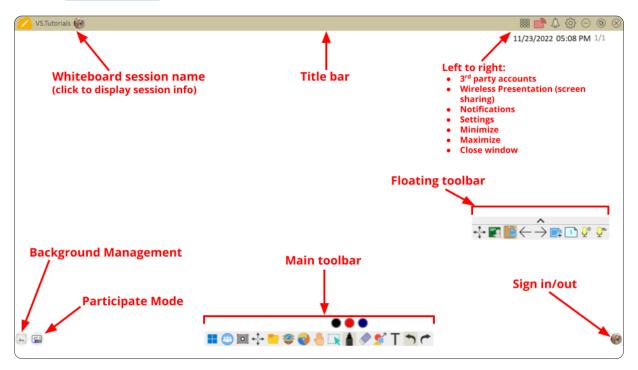

Floating Toolbar

	Item	Description
←	Move	Move the Floating Toolbar.
	Present Mode	Switch between presentation and preparation modes.
	Paste from Clipboard	Insert the current clipboard content onto the canvas.
\leftarrow	Previous Page	Go to the previous page (if the canvas has multiple pages).
\rightarrow	Next Page	Go to the next page (if the canvas has multiple pages).
	New Page	Add a new canvas.
	Pages in Whiteboard	Create, select, rearrange, copy and delete pages.

Main Toolbar

	ltem	Description				
	Screen Capture	Screenshot, video, and audio recording.				
←	Move	Select and hold to move the toolbar to the left side, right side, or bottom of the screen.				
	File	Open, save, export, and print whiteboard files.				
	Magic Box	Import resources (image, video, audio, etc.) to the whiteboard.				
	Embedded Browser	Open the built-in browser to access internet resources, which can be dragged onto the canvas.				
	Infinite Canvas					
	Selection	Select objects, text, and other elements on the canvas.				
	Pen	Writing tools and customization options.				
	Eraser	Erase objects or clear the page.				
•	Shapes and Lines	Draw shapes, arrows, and add tables.				
T	Text and Handwriting	Add a text box.				
1	Undo	Undo the previous action.				
~	Redo	Redo the previous action.				

Background Management

	Item	Description		
my	Sign In Sign in to a myViewBoard account.			
	Background Management	Change the canvas background.		
*	FollowMe Setting	Display custom images uploaded to a cloud storage account.		
	Color Palette	Choose from solid or gradient colors as the background.		
	Pre-installed	Choose backgrounds that come pre-installed with Whiteboard.		
© °% = 0	myViewBoard Originals	Display original content created by myViewBoard.		
	Local Hard Drive	Use images from the local hard drive.		

RS-232 Protocol

This document describes the hardware interface and software protocols of RS-232 interface communication between the ViewSonic LED Display and computers or other control units with RS-232 protocol.

The protocol contains three command sections:

- Set-Function
- Get-Function
- Remote control pass-through mode

Note: Below, "PC" represents all the control units that can send or receive the RS-232 protocol command.

Description

RS-232 Hardware Specification

ViewSonic LFD communication port on the rear side:

- 1. Connector type: DSUB 9-Pin Male (female or 3.5 mm barrel connector)
- 2. Use of crossover (null modem) cable for connection
- **3.** Pin Assignment:


Male DSUB 9-Pin (preferred)

12345



6789

Female DSUB 9-Pin

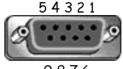

9876

Pin #	Signal	Remark
1	NC	
2	RXD	Input to Display
3	TXD	Output from Display
4	NC	
5	GND	
6	NC	
7	NC	
8	NC	
9	NC	
frame	GND	

3.5 mm barrel connector (alternative for limited space)




Item	Signal	Remark
Tip	TXD	Output from Display
Ring	RXD	Input to Display
Sleeve	GND	

LAN Hardware Specification

ViewSonic LFD communication port on the rear side:

1. Connector type: 8P8C RJ45

2. Pin Assignment:

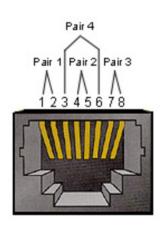

Pin#	Signal	Remark
1	TX+	Output from Display
2	TX-	Output from Display
3	RX+	Input to Display
4	BI_D3+	For 1G case
5	BI_D3-	For 1G case
6	RX-	Input to Display
7	BI_D4+	For 1G case
8	BI_D4-	For 1G case
frame	GND	

RS-232 Communication Setting

Baud Rate Select: 9600bps (fixed)
Data bits: 8 bits (fixed)
Parity: None (fixed)

• Stop Bits: 1 (fixed)

LAN Communication Setting

Type: Ethernet Protocol: TCP/IP

Port: 5000 (fixed)

WOL Port: 9 (fixed) for UDP*3.2.0

Cross subnet: No Logon Credentials: No

Command Message Reference

PC sends to LFD command packet followed by "CR". Every time PC sends control command to Display, the Display shall respond as follows:

- 1. If the message is received correctly it will send "+" (02Bh) followed by "CR" (00Dh)
- 2. If the message is received incorrectly it will send "-" (02Dh) followed by "CR" (00Dh)

Protocol

Set-Function Listing

The PC can control the Display for specific actions. The Set-Function command allows you to control the Display behavior at a remote site through the RS-232 port. The Set-Function packet format consists of 9 bytes.

Set-Function Description:

Length: Total Byte of Message excluding "CR"

LFD ID Identification for each Display (01~98; default is 01)

ID "99" means to apply the set command for all connected displays. Under such circumstances, only ID#1 display has to

reply.

The LFD ID can be set via the OSD menu for each Display.

Command Type Identify command type,

"s" (0x73h): Set Command

"+" (0x2Bh): Valid command Reply "-" (0x2Dh): Invalid command Reply

Command: Function command code: One byte ASCII code.

Value[1~3]: Three bytes ASCII that defines the value.

CR 0x0D

Set-Function Format

Send: (Command Type="s")

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Byte Count	1 Byte	2	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte
Count	1 byte	Byte	1 byte	1 byte 1	1 byte	т вусе	т вусе	I byte
Bytes order	1	2~3	4	5	6	7	8	9

Reply: (Command Type="+" or "-")

Name	Length	ID	Command Type	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5

Note: When PC applies command to all displays (ID=99), only the #1 set needs to reply by the name of ID=1.

Example 1: Set Brightness at 76 for Display (#02) and this command is valid Send (Hex Format)

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	0x38	0x30 0x32	0x73	0x24	0x30	0x37	0x36	0x0D

Reply (Hex Format)

Name	Length	ID	Command Type	CR
Hex	0x34	0x30 0x32	0x2B	0x0D

Example 2: Set Brightness at 75 for Display (#02) and this command is NOT valid Send (Hex Format)

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	0x38	0x30 0x32	100/2	0x24	0x30	0x37	0x35	0x0D

Reply (Hex Format)

Name	Length	ID	Command Type	CR
Hex	0x34	0x30 0x32	0x2D	0x0D

Set-Function Table

A. Basic Function

Set Function	Length	ID	Command	Comi	mand	Value Range	Comments
			Type (ASCII)	Code (ASCII)	Code (Hex)	(Three ASCII bytes)	
Power ON *3.2.1/ OFF (standby)	8		S	!	21	000: STBY 001: ON	1. The Power-on via LAN control may work only under specific modes. See display UG for details. *3.1.1 2. "WOL by MAC address" maybe avail- able as an alterna- tive. *3.2.1
Input Select	8		S	u	22	000: TV 001: AV 002: S-Video 003: YPbPr 004: HDMI1 014: HDMI2 024: HDMI3 034: HDMI4 005: DVI 006: VGA1 016: VGA2 026: VGA3 007: Slot-in PC (OPS/SDM)/HDBT 008: Internal memory 009: DP1 *3.2.4 023: DP2 019: Type-C 1 *3.3.2 039: Type-C 2 00A: Embedded/Main (Android)	1. No need for USB 2. For the case of two or more same sources, the 2nd digital is used to indicate the extension. 3. The HEX of 00A is 30 30 41. 4. 00Z is reserved for cycle mode *3.3.1 5. Using 2nd digito identify DP or Type C. 0 and even numbers stand for DP; odd numbers stand for Type C *3.3.2
Brightness	8		s	\$	24	000 ~ 100 900: Bright down (-1) 901: Bright up (+1) *3.1.1	
Backlight *3.2.0	8		А	В	42	000~100	1. For Android platform whose main mode is controlled by backlight and the other sources are controlled by brightness. 2. Derived from Color calibration. *3.2.0
Power lock	8		S	4	34	000: Unlock 001: Lock	*See note in details
Volume	8		s	5	35	000 ~ 100 900: Volume down(-1) 901:Volume up(+1)	
Mute	8		S	6	36	000: OFF 001: ON (mute)	
Button lock	8		S	8	38	000: Unlock 001: Lock	*See note in details
Menu lock	8		S	>	3E	000: Unlock 001: Lock	*See note in details

Set Function	Length	ID	Command	Command		Value Range	Comments
Number *3.1.1	8		S	@	40	000~009	
Key Pad *3.1.1	8		S	А	41	000: UP 001: DOWN 002: LEFT 003: RIGHT 004: ENTER 005: INPUT 006: MENU/(EXIT) 007: EXIT	
Remote Control	8		S	В	42	000: Disable 001: Enable 002: Pass through	Disable: RCU will have no function Enabled: RCU controls normally Pass through: Display will bypass the RC code to connected device via the RS-232 port, but not react itself.
Restore default	8		S	~	7E	000	Recover to factory settings

Note:

1. Behavior at Lock Modes

Lock Mode	Behavior				
Button Lock	 Lock all buttons on the front panel and RCU, except for "Power" All the SET functions should be workable via RS-232, even the ones with according hot key in RCU like Mute,etc. 				
MENU Lock	 Lock the "MENU' key of front panel and RCU The Factory and Hospitality modes should not be blocked for the model using MENU-combined key to enter these two modes. Alternative approach will be indicated separately if any limitation by model. 				
POWER Lock	 Lock the "POWER" key on the front and RCU. The SET_POWER ON/OFF should be workable via RS-232, but does not mean the POWER lock will be released under this case. Can not be unlocked by reset in OSD setting Will auto AC power-on in power-lock Under power-lock, the set will not enter power saving when no PC signal and neither turn off when no other video signals after 15 minutes. 				
Remote Control Disable	Lock the RCU keys, but keep the front panel buttons workable.				

2. Wake-on-LAN by MAC address as alternative for SET Power on

(Length=126 Bytes)

6 Bytes	6 Bytes (#1)	(#1) 6 Bytes (#2)		6 Bytes (#16)	24 Bytes	
0xFF FF FF	MAC address	MAC address		MAC address	0x00 00 00	

B. Optional Function

Set Function	Length	ID	Command	Com	ımand	Value Range	Comments
			Type (ASCII)	Code (ASCII)	Code (Hex)	(Three ASCII bytes)	
Contrast	8		S	#	23	000 ~ 100	
Sharpness	8		S	%	25	000 ~ 100	
Color	8		s	&	26	000 ~ 100	
Tint	8		s	٤	27	000 ~ 100	
Backlight On_Off	8		s	(29	000: OFF 001: ON	
Color mode	8		s)	29	000: Normal 001: Warm 002: Cold 003: Personal	
Surround sound	8		S	-	2D	000: OFF 001: ON	
Bass	8		S		2E	000 ~ 100	
Treble	8		s	1	2F	000 ~ 100	
Balance	8		s	0	30	000 ~ 100	050 is central
Picture Size	8		s	1	31	000: FULL (16:9) 001: NORMAL (4:3) 002: REAL (1:1) *3.1.0	
OSD language	8		s	2	32	000: English 001: French 002: Spanish	Could be extended for more supported languages by model
PIP-Mode	8		S	9	39	000: OFF 001: PIP(POP) 002: PBP	
PIP-Sound select	8		S	÷	3A	000: Main 001: Sub	
PIP-Position	8		s	;	3B	000: Up 001: Down 002: Left 003: Right	
PIP-Input	8		S	7	37 *2.9	000: TV 001: AV 002: S-Video 003: YPbPr 004: HDMI1 014: HDMI2 024: HDMI3 034: HDMI4 005: DVI 006: VGA1 016: VGA2 026: VGA3	Value range is same as SET- Input select
						007: Slot-in PC (OPS/SDM)/HDBT 008: Internal memory 009: DP/Type-C *3.2.4 00A: Embedded/ Main (Android)	,

Set Function	Length	ID	Command	Com	mand	Value Range	Comments	
Tiling-Mode	8		s	Р	50	000: OFF 001: ON	(for video wall)	
Tiling- Compensation	8		s	Q	51	000: OFF 001: ON	(for video wall) Bezel width compensation	
Tiling-H by V Monitors	8		S	R	52	01x~09x: H 0x1~0x9: V	(for video wall) 1. 2nd digital for H monitors 2. 3rd digital for V monitors	
Tiling-Position	8		s	S	53	001~025	(for Video wall) Copy the screen of Position# to identified display	
Date: Year	8		S	V	56	Y17~Y99	Last 2 digits (20)17~(20)99	
Date: Month	8		S	V	56	M01~M12	2 digits	
Date: Day	8		S	V	56	D01~D31	2 digits	
Time: Hour	8		s	W	57	H00~H23	24-hr format. 2 digits.	
Time: Min	8		s	W	57	M00~M59	2 digits	
Time: Sec	8		S	W	57	S00~S59	2 digits	

Note:

1. Tiling definition of H Monitors, V Monitors, and Position

			H MONITORS	i		1
	1	2	3	4	5	-Position
RS	6	7	8	9	10	
V MONITORS	11	12	13	14	15	
>	16	17	18	19	20	
	21	22	23	24	25	

2. Set Date example

Date: 2017-3/15

Send: 0x 38 30 31 73 56 59 31 37 0D ("Y17")

Send: 0x 38 30 31 73 56 4D 30 33 0D ("M03")

Send: 0x 38 30 31 73 56 44 31 35 0D ("D15")

3. Set Time example

Time: 16:27:59

Send: 0x 38 30 31 73 57 48 31 36 0D ("H16")

Send: 0x 38 30 31 73 57 4D 32 37 0D ("M27")

Send: 0x 38 30 31 73 57 53 35 39 0D ("S59")

Get-Function Listing

The PC can interrogate the LFD for specific information. The Get-Function packet format consists of 9 bytes which is similar to the Set-Function packet structure. Note that the "Value" byte is always = 000.

Get-Function Description:

Length: Total Byte of Message excluding "CR".

TV/DS ID Identification for each of TV/DS (01~98; default is 01).

Command Type Identify command type,

"g" (0x67h): Get Command

"r" (0x72h) : Valid command Reply "-" (0x2Dh) : Invalid command Reply

Command: Function command code: One byte ASCII code.

Value[1~3]: Three bytes ASCII that defines the value.

CR 0x0D

Get-Function Format

Send: (Command Type="g")

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5	6	7	8	9

Reply: (Command Type="r" or "-")

If the Command is valid, Command Type = "r"

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5	6	7	8	9

If the Command is NOT valid, Command Type = "-"

Name	Length ID		Command Type	CR	
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte	
Bytes order	1	2~3	4	5	

Example 1: Get Brightness from TV-05 and this command is valid. The Brightness value is 67.

Send (Hex Format)

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	0x38	0x30 0x35	()y6/	0x62	0x30	0x30	0x30	0x0D

Reply (Hex Format)

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	0x38	0x30 0x35	0x72	0x62	0x30	0x36	0x37	0x0D

Example 2: Get Color from Display (#05), but the Color command is not supported by this model.

Send (Hex Format)

Name	Length	ID	Command Type	Command	Value1	Value2	Value3	CR
Hex	0x38	0x30 0x35	0x67	0x26	0x30	0x30	0x30	0x0D

Reply (Hex Format)

Name	Length	ID	Command Type	CR
Hex	0x34	0x30 0x35	0x2D	0x0D

Get-Function Table

A. Basic Function

Get Function	Length	ID	Command	Comr	nand	Response Range	Comments
			Type (ASCII)	Code (ASCII)	Code (Hex)	(Three ASCII bytes)	
Get-Brightness	8		g	b	62	000 ~ 100	
Get-Backlight *3.2.0	8		а	В	42	000 ~ 100	1. For Android platform whose main mode is controlled by backlight and the other sources are controlled by brightness.
							2. Derived from Color calibration. *3.2.0
Get-Volume	8		g	f	66	000 ~ 100	
Get-Mute	8		g	g	67	000: OFF 001: ON (muted)	
Get-Input select	8		g	j	6A	000~ 100~	1. 1st digit for signal detection: 0 means "no signal"; 1 means "signal detected" 2. 2nd & 3rd digit: See
Get-Power status: ON/ STBY	8		g	I	6C	001: ON 000: STBY	Set-function table
Get-Remote control	S		g	n	6E	000: Disable 001: Enable 002: Pass through	Get RCU mode status
Get-Power lock	8		g	0	6F	000: Unlock 001: Lock	
Get-Button lock	8		g	р	70	000: Unlock 001: Lock	
Get-Menu lock	8		g	I	6C	000: Unlock 001: Lock	
Get-ACK	8		g	Z	7A	000	This command is used to test the communication link
Get-Thermal	8		g	0	30	000~100: 0~+100 deg C -01~-99: -1~-99 deg C	
Get-Operation hour *3.2.0	8		g	1	31	000	1. Accumulated hours in 6-digit integer (000,001~ 999,999) *3.2.0 2. Can not be reset when FW update and Factory initiation *3.2.2 3. Reply in new 32-byte format *3.2.0
Get-Device name	8		g	4	34	000	Reply in new 32-byte format *3.2.0

Get Function	Length	ID	Command	Comr	mand	Response Range	Comments
Get-MAC address	8		g	5	35	000	(for the models with LAN) Reply in new 32-byte format *3.2.0
Get-IP address *3.2.0	8		g	6	36	000	(for the models with LAN) Reply in new 32-byte format *3.2.0
Get-Serial number *3.2.0	8		g	7	37	000	Reply in new 32-byte format *3.2.0
Get-FW version *3.2.0	8		g	8	38	000	Reply in new 32-byte format *3.2.0

Note:

1. Get Operation Hour example

Assumed the accumulated operation hour is 123,456 hrs

Send: 0x 38 30 31 67 31 30 30 30 0D (Get Operation hour)

Reply: 0x 32 30 31 72 31 31 32 33 34 35 36 00 00 ... 00 00 0D

2. Get Device Name example

Assumed the device name is CDE-5500

Send: 0x 38 30 31 67 34 30 30 30 0D (Get Device Name)

Reply: 0x 32 30 31 72 34 43 44 45 2D 35 35 30 30 00 00 ... 00 00 0D

Assumed the device name is "NMP-302#1"

Send: 0x 38 30 31 67 34 30 30 30 0D (Get Device Name)

Reply: 0x 32 30 31 72 34 4E 4D 50 2D 33 30 32 23 31 00 00 ...00 00 0D

3. Get MAC address example

Assumed the MAC address is 00:11:22:aa:bb:cc

Send: 0x 38 30 31 67 35 30 30 30 0D (Get MAC add)

Reply: 0x 32 30 31 72 35 30 30 31 31 32 32 61 61 62 62 63 63 00 00...00 00 0D

4. Get IP address example

Assumed the IP address is 192.168.100.2

Send: 0x 38 30 31 67 36 30 30 30 0D (Get IP address)

Reply: 0x 32 30 31 72 36 31 39 32 2E 31 36 38 2E 31 30 30 2E 32 00 00...00 00

0D

5. Get Serial number example

Assumed the Serial number is ABC180212345

Send: 0x 38 30 31 67 37 30 30 30 0D (Get Serial number)

Reply: 0x 32 30 31 72 37 41 42 43 31 38 30 32 31 32 33 34 35 00 00...00 00 0D

6. Get FW version example

Assumed the FW version is 3.02.001

Send: 0x 38 30 31 67 38 30 30 30 0D (Get FW version)

Reply: 0x 32 30 31 72 38 33 2E 30 32 2E 30 30 31 00 00...00 00 0D

B. Optional Function

Get Function	Length	ID	Command	Com	ımand	Response Range	Comments
			Type (ASCII)	Code (ASCII)	Code (Hex)	(Three ASCII bytes)	
Get-Contrast	8		g	а	61	000 ~ 100	
Get-Sharpness	8		g	С	63	000 ~ 100	
Get-Color	8		g	d	64	000 ~ 100	
Get-Tint	8		g	е	65	000 ~ 100	
Get-Backlight On_Off	8		g	h	68	000: OFF 001: ON	
Get-PIP mode	8		g	t	74	000: OFF 001: PIP (POP) 002: PBP	
Get-PIP input	8		g	u	75	000 ~	See Set-input selec
Get-Tiling Mode	8		g	V	76	000: OFF 001: ON	(for Video wall)
Get-Tiling Compensation	8		g	w	77	000: OFF 001: ON	(for Video wall) Bezel width compensation
Get-Tiling H by V monitors	8		g	x	78	01x~09x: H monitors 0x1~0x9: V monitors	(for Video wall) 1. 2nd digital for H monitors 2. 3rd digital for V monitors
Get-Tiling position	8		g	У	79	000: OFF 001~025	(for Video wall) Copy the screen of Position# to identified display
Get-Date: Year	8		g	2	32	Y00~Y00	Last 2 digits (20)17~(20)99
Get-Date: Month	8		g	2	32	M00~M00	2 digits
Get-Date: Day	8		g	2	32	D00~M00	2 digits
Get-Time: Hour	8		g	3	33	H00~H00	24-hr format. 2 digits
Get-Time: Min	8		g	3	33	M00~M00	2 digits
Get-Time: Sec	8		g	3	33	S00~S00	2 digits

Note:

1. Get Date example

Assumed the current date of display#01 as below:

Date: 2017-3/15

Send: 0x 38 30 31 67 32 59 30 30 0D (Get Date:Year)

Reply: 0x 38 30 31 72 32 59 31 37 0D ("Y17")

Send: 0x 38 30 31 67 32 4D 30 30 0D (Get Date:Month)

Reply: 0x 38 30 31 72 32 4D 30 33 0D ("M03")

Send: 0x 38 30 31 67 32 44 30 30 0D (Get Date:Day)

Reply: 0x 38 30 31 72 32 44 31 35 0D ("D15")

2. Get Time example

Assumed the current time of display#01 as below:

Time: 16:27:59

Send: 0x 38 30 31 67 33 48 30 30 0D (Get Time:Hour)

Reply: 0x 38 30 31 72 33 48 31 36 0D ("H16")

Send: 0x 38 30 31 67 33 4D 30 30 0D (Get Time:Min)

Reply: 0x 38 30 31 72 33 4D 32 37 0D ("M27")

Send: 0x 38 30 31 67 33 53 30 30 0D (Get Time:Sec)

Reply: 0x 38 30 31 72 33 53 35 39 0D ("S59")

3. Get RS232 version example

Assumed the version is 3.0.1

Send: 0x 38 30 31 67 36 30 30 30 0D (Get RS232 version)

Reply: 0x 38 30 31 72 36 33 30 31 0D ("301")

C. Auto Reply *3.2.1

The display will send out the updated data/status automatically without GET query from the host whenever the following data/status is changed by the user through any of the available ways like: remote control unit, front control panel keys, or touch screen.

- Power On/Off
- Input Select
- Brightness
- Backlight
- Volume
- Mute On/Off

Remote Control Pass-through Mode

When the PC sets the Display to Remote Control Pass through mode, the Display will send a 7-byte packet (followed by "CR") in response to remote control unit (RCU) button activation.

In this mode the RCU will have no effect on the Display function. For example: "Volume+" will not change the volume of the Display, but instead only send the "Volume+" code to the PC over the RS-232 port.

IR Pass Through-Function format

Reply: (Command Type="p")

Name	Length	ID	Command Type	RCU Code1 (MSB)	RCU Code2 (LSB)	CR
Byte Count	1 Byte	2 Byte	1 Byte	1 Byte	1 Byte	1 Byte
Bytes order	1	2~3	4	5	6	7

Example 1: Remote Control Pass-through when "VOL+" key is pressed for Display (#5)

Send (Hex Format)

Name	Length	ID	Command Type	RCU Code1 (MSB)	RCU Code2 (LSB)	CR
Hex	0x36	0x30 0x35	0x70	0x31	0x30	0x0D

Key	Code (HEX)	Basic *3.1.1	Optional *3.1.1
1	01	V	
2	02	V	
3	03	V	
4	04	V	
5	05	V	
6	06	V	
7	07	V	
8	08	V	
9	09	V	
0	0A	V	
-	OB		V
RECALL (LAST)	0C		V
INFO (DISPLAY)	0D		V
	0E		
ASPECT (ZOOM, SIZE)	OF		V
VOLUME UP (+)	10	V	
VOLUME DOWN (-)	11	V	
MUTE	12	V	
CHANNEL/PAGE UP (+)/ BRIGHTNESS+	13		V
CHANNEL/PAGE DOWN (-)/ BRIGHTNESS-	14		V
POWER	15	V	
SOURCES (INPUTS)	16	V	
	17		
	18		
SLEEP	19		V
MENU	1A	V	
UP	1B	V	
DOWN	1C	V	
LEFT (-)	1D	V	
RIGHT (+)	1E	V	
OK (ENTER, SET)	1F	V	
EXIT	20	V	
	21		
	22		
	23		
	24		
	25		
	26		
	27		
	28		
	29		

Key	Code (HEX)	Basic *3.1.1	Optional *3.1.1
	2A		
	2B		
RED (F1)	2C		V
GREEN (F2)	2D		V
YELLOW (F3)	2E		V
BLUE (F4)	2F		V

Note:

- 1. This IR-pass-through code is different from the RCU key code.
- 2. Special control sequence for POWER key under IR-pass through mode.
- **2-1.** When Display is OFF and receives the IR POWER code: Display will turn itself ON, then forward the POWER code to the host via RS-232.
- **2-2.** When Display is ON and receives the IR POWER code: Display will forward the POWER code to the host via RS-232, then turn OFF itself.
- **2-3.** When SET-POWER LOCK is enabled, the Display will not respond to POWER key pressing.
- **3.** The VOLUME UP and VOLUME DOWN code will repeatedly output when you press and hold the keys.

Appendix

Display Modes

DisplayPort

Resolution	Refresh Rate (@)	
640 x 480	60, 67, 72 Hz	
800 x 600	56, 60, 72, 75 Hz	
832 x 624	75 Hz	
1024 x 768	60, 70, 75 Hz	
1152 x 864	75 Hz	
1152 x 870	75 Hz	
1280 x 720	60 Hz	
1280 x 960	60 Hz	
1280 x 1024	60, 75 Hz	
1360 x 768	60, 85 Hz	
1366 x 768	60 Hz	
1440 x 900	60 Hz	
1600 x 1200	60 Hz	
1680 x 1050	60 Hz	
1920 x 1080	60 Hz	
1920 x 1200	60 Hz	
3840 x 2160	25, 30, 50, 60 Hz	

HDMI

Resolution	Refresh Rate (@)	
640 x 480	60, 67, 72, 75 Hz	
800 x 600	56, 60, 72, 75 Hz	
832 x 624	75 Hz	
1024 x 768	60, 70, 75 Hz	
1152 x 864	75 Hz	
1152 x 870	75 Hz	
1280 x 720	60 Hz	
1280 x 960	60 Hz	
1280 x 1024	60, 75 Hz	
1360 x 768	60, 85 Hz	
1366 x 768	60 Hz	
1440 x 900	60 Hz	
1600 x 1200	60 Hz	
1680 x 1050	60 Hz	
1920 x 1080	60 Hz	
1920 x 1200	60 Hz	
3840 x 2160	25, 30, 50, 60 Hz	

USB Type C

Resolution	Refresh Rate (@)	
640 x 480	60, 67, 72 Hz	
800 x 600	56, 60, 72, 75 Hz	
832 x 624	75 Hz	
1024 x 768	60, 70, 75 Hz	
1152 x 864	75 Hz	
1152 x 870	75 Hz	
1280 x 720	60 Hz	
1280 x 960	60 Hz	
1280 x 1024	60, 75 Hz	
1360 x 768	60, 85 Hz	
1366 x 768	60 Hz	
1440 x 900	60 Hz	
1600 x 1200	60 Hz	
1680 x 1050	60 Hz	
1920 x 1080	60 Hz	
1920 x 1200	60 Hz	
3840 x 2160	25, 30, 50, 60 Hz	

VGA

Resolution	Refresh Rate (@)	
640 x 480	60, 67, 72 Hz	
800 x 600	56, 60, 72, 75 Hz	
832 x 624	75 Hz	
1024 x 768	60, 70, 75 Hz	
1152 x 864	75 Hz	
1152 x 870	75 Hz	
1280 x 720	60 Hz	
1280 x 960	60 Hz	
1280 x 1024	60, 75 Hz	
1360 x 768	60, 85 Hz	
1366 x 768	60 Hz	
1440 x 900	60 Hz	
1600 x 1200	60 Hz	
1680 x 1050	60 Hz	
1920 x 1080	60 Hz	
1920 x 1200	60 Hz	

HDMI Out

Resolution	Refresh Rate (@)	
720 x 480	60 Hz	
1920 x 1080	60 Hz	
3840 x 2160	60 Hz	

Troubleshooting

This section describes some common problems that you may experience when using the ViewBoard.

Problem or Issue	Possible Solutions	
	1. Check whether something is obstructing the display's remote control receiver.	
Remote Control is not working	2. Check whether the batteries in the remote control are installed correctly.	
	3. Check whether the batteries need to be replaced.	
	1. Check whether Sleep mode is enabled.	
The unit turns off unexpectedly	2. Check if there is a power outage in your area.	
	3. Turn on the display and see if the problem is with the signal and control system.	

PC Mode

Problem or Issue	Possible Solutions
	1. Check the display settings.
No PC signal	2. Check the display resolution.
ivo i e signai	3. Adjust the Hs &Vs (synchronization) settings using the OSD menu.
Packground stroaking	1. Choose auto adjust.
Background streaking	2. Adjust clock and phase.
Uncurported format	1. Choose auto adjust.
Unsupported format	2. Adjust clock and phase settings.

Touch Function

Problem or Issue	Possible Solutions
	1. Check that drivers are installed correctly.
Touch function does	2. Reinstall driver(s).
not work	3. Check setup and align it.
	4. Check whether the touch pen is working properly.

Video Not Working Properly

Problem or Issue	Possible Solutions	
	1. Check the Power status.	
No picture/ No sound	2. Check the signal cable.	
	3. Check that the internal PC is installed correctly.	
Picture is unclear or	1. Check the signal cable.	
cuts in and out	2. Check if other electronics are interrupting the signal.	
Poor picture	1. Adjust chroma, brightness, and contrast settings in the menu.	
	2. Check the signal cable.	

Audio Not Working Properly

Problem or Issue	Possible Solutions
	1. Press the Mute/Unmute button.
No sound	2. Adjust the volume.
	3. Check the audio cable.
	1. Adjust the sound balance in the menu.
One speaker only	2. Check the sound control panel settings of the computer.
	3. Check the audio cable.

Maintenance

General Precautions

- Make sure the device is turned off and the power cable is unplugged from the power outlet.
- Never spray or pour any liquid directly onto the screen or case.
- Handle the device with care, as a darker-colored device, if scuffed, may show marks more clearly than a lighter-colored device.
- Do not use the system continuously for long periods of time.

Cleaning the Screen

- Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
- If the screen is still not clean, apply a small amount of non-ammonia, nonalcohol based glass cleaner onto a clean, soft, lint-free cloth; then wipe the screen.

Cleaning the Case

- Use a soft, dry cloth.
- If the case is still not clean, apply a small amount of non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

Disclaimer

- ViewSonic® does not recommend the use of any ammonia or alcohol-based cleaners on the display screen or case. Some chemical cleaners have been reported to damage the screen and/or case of the device.
- ViewSonic® will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.

Note: If condensation appears between the glass and the panel, keep the display turned on until the moisture disappears.

Regulatory and Service Information

Compliance Information

This section addresses all connected requirements and statements regarding regulations. Confirmed corresponding applications shall refer to nameplate labels and relevant markings on the unit.

FCC Compliance Statement

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Contains FCC ID: GSS-VS20736

Industry Canada Statement

CAN ICES (B) / NMB (B)

Contains FCC ID: GSS-VS20736

Contains IC ID: 4280A-VS20736

CE Conformity for European Countries



The device complies with the EMC Directive 2014/30/EU and Low Voltage Directive 2014/35/EU, Radio Equipment Directive 2014/53/EU and RoHS2 Directive 2011/65/EU & Annex II EU/2015/863.

The full declaration of conformity can be found at the following website:

- https://www.viewsonicglobal.com/public/products_download/safety compliance/IFP/VS20634 CE DoC.pdf
- https://www.viewsonicglobal.com/public/products_download/safety_ compliance/IFP/VS20635 CE DoC.pdf
- https://www.viewsonicglobal.com/public/products_download/safety_ compliance/IFP/VS20636 CE DoC.pdf

The following information is only for EU-member states:

The mark shown to the right is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose of the equipment as unsorted municipal waste, but use the return and collection systems according to local law.



The mark shown to the right is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose of the equipment as unsorted municipal waste, but use the return and collection systems according to local law.



Declaration of RoHS2 Compliance

This product has been designed and manufactured in compliance with Directive 2011/65/EU of the European Parliament and the Council on restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS2 Directive) and is deemed to comply with the maximum concentration values issued by the European Technical Adaptation Committee (TAC) as shown below:

Substance	Proposed Maximum Concentration	Actual Concentration
Lead (Pb)	0.1%	< 0.1%
Mercury (Hg)	0.1%	< 0.1%
Cadmium (Cd)	0.01%	< 0.01%
Hexavalent Chromium (Cr6+)	0.1%	< 0.1%
Polybrominated biphenyls (PBB)	0.1%	< 0.1%
Polybrominated diphenyl ethers (PBDE)	0.1%	< 0.1%
Bis (2-ethylhexyl) phthalate (DEHP)	0.1%	< 0.1%
Butyl benzyl phthalate (BBP)	0.1%	< 0.1%
Dibutyl phthalate (DBP)	0.1%	< 0.1%
Diisobutyl phthalate (DIBP)	0.1%	< 0.1%

Certain components of products as stated above are exempted under the Annex III of the RoHS2 Directives as noted below:

- Copper alloy containing up to 4% lead by weight.
- Lead in high melting temperature type solders (i.e. lead-based alloys containing 85% by weight or more lead).
- Electrical and electronic components containing lead in a glass or ceramic other than dielectric ceramic in capacitors, e.g. piezoelectronic devices, or in a glass or ceramic matrix compound.
- Lead in dielectric ceramic in capacitors for a rated voltage of 125V AC or 250V DC or higher.

ENERGY STAR Statement

ENERGY STAR is a U.S. Environmental Protection Agency voluntary program that helps businesses and individuals save money and protect our climate through superior energy efficiency. Products that earn the ENERGY STAR prevent greenhouse gas emissions by meeting strict energy efficiency criteria or requirements set by the U.S. Environmental Protection Agency.

As an ENERGY STAR Partner, ViewSonic is determined to meet the Energy star Guidelines and mark all certified models with the ENERGY STAR logo.

The following logo appears on all ENERGY STAR-certified models:



Note: The power management features significantly reduce energy consumption when the product is not in use. Power management allows the device to automatically enter a low power "sleep" mode after a defined period of inactivity. And the power management features also enter Sleep Mode or Off Mode within 5 minutes of being disconnected from a host computer. Please note any change in energy settings will increase energy consumption.

Indian Restriction of Hazardous Substances

Restriction on Hazardous Substances statement (India). This product complies with the "India E-waste Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Product Disposal at End of Product Life

ViewSonic® respects the environment and is committed to working and living green. Thank you for being part of Smarter, Greener Computing. Please visit the ViewSonic® website to learn more.

USA & Canada:

https://www.viewsonic.com/us/go-green-with-viewsonic

Europe:


https://www.viewsonic.com/eu/environmental-social-governance/recycle


Taiwan:

https://recycle.moenv.gov.tw/

For EU users, please contact us for any safety/accident issue experienced with this product:

ViewSonic Europe Limited

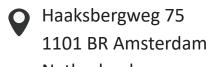

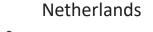

+31 (0) 650608655

EPREL@viewsoniceurope.com

https://www.viewsonic.com/eu/

Copyright Information

Copyright© ViewSonic® Corporation, 2025. All rights reserved.

Macintosh and Power Macintosh are registered trademarks of Apple Inc.

Microsoft, Windows, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewSonic® and the three birds logo are registered trademarks of ViewSonic® Corporation.

VESA is a registered trademark of the Video Electronics Standards Association. DPMS, DisplayPort, and DDC are trademarks of VESA.

ENERGY STAR® is a registered trademark of the U.S. Environmental Protection Agency (EPA).

As an ENERGY STAR® partner, ViewSonic® Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Disclaimer: ViewSonic® Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic® Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic® Corporation.



Customer Service

For technical support or product service, see the table below or contact your reseller.

Note: You will need the product's serial number.

Country/ Region	Website	Country/ Region	Website					
Asia Pacific & Africa								
Australia	www.viewsonic.com/au/	Bangladesh	www.viewsonic.com/bd/					
中国 (China)	www.viewsonic.com.cn	香港 (繁體中文)	www.viewsonic.com/hk/					
Hong Kong (English)	www.viewsonic.com/hk-en/	India	www.viewsonic.com/in/					
Indonesia	www.viewsonic.com/id/	Israel	www.viewsonic.com/il/					
日本 (Japan)	www.viewsonic.com/jp/	Korea	www.viewsonic.com/kr/					
Malaysia	www.viewsonic.com/my/	Middle East	www.viewsonic.com/me/					
Myanmar	www.viewsonic.com/mm/	Nepal	www.viewsonic.com/np/					
New Zealand	www.viewsonic.com/nz/	Pakistan	www.viewsonic.com/pk/					
Philippines	www.viewsonic.com/ph/	Singapore	www.viewsonic.com/sg/					
臺灣 (Taiwan)	www.viewsonic.com/tw/	ประเทศไทย	www.viewsonic.com/th/					
Việt Nam	www.viewsonic.com/vn/ South Africa & Mauritius		www.viewsonic.com/za/					
Americas								
United States	www.viewsonic.com/us	iewsonic.com/us Canada www.viewsonic						
Latin America								
Europe								
Europe	www.viewsonic.com/eu/	France	www.viewsonic.com/fr/					
Deutschland	www.viewsonic.com/de/	Қазақстан	www.viewsonic.com/kz/					
Россия	www.viewsonic.com/ru/	España	www.viewsonic.com/es/					
Türkiye	www.viewsonic.com/tr/	Україна	www.viewsonic.com/ua/					
United Kingdom	United Kingdom www.viewsonic.com/uk/							

Limited Warranty

ViewSonic® Smart White Board

What the warranty covers:

ViewSonic® warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic® will, at its sole option, and as your sole remedy, repair or replace the product with a similar product. Replacement Product or parts may include remanufactured or refurbished parts or components. The repair or replacement unit or parts or components will be covered by the balance of the time remaining on the customer's original limited warranty and the warranty period will not be extended. ViewSonic® provides no warranty for any third-party software whether included with the product or installed by the customer, installation of any unauthorized hardware parts or components (e.g. Projector Lamps). (Please refer to: "What the warranty excludes and does not cover" section).

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty excludes and does not cover:

- Any product on which the serial number has been defaced, modified, or removed.
- Damage, deterioration, or malfunction resulting from:
 - » Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - » Repair or attempted repair by anyone not authorized by ViewSonic®.
 - » Damage to or loss of any programs, data, or removable storage media.
 - » Normal wear and tear.
 - » Removal or installation of the product.
- Software or data loss occurring during repair or replacement.
- Any damage of the product due to shipment.
- Causes external to the product, such as electric power fluctuations or failure.
- Use of supplies or parts not meeting ViewSonic's specifications.
- Failure of owner to perform periodic product maintenance as stated in the User Guide.
- Any other cause which does not relate to a product defect.

- Damage caused by static (non-moving) images displayed for lengthy periods of time (also referred to as image burn-in).
- Software Any third-party software included with the product or installed by the customer.
- Hardware/Accessories/Parts/Components Installation of any unauthorized hardware, accessories, consumable parts or components (e.g. Projector Lamps).
- Damage to, or abuse of, the coating on the surface of the display through inappropriate cleaning as described in the product User Guide.
- Removal, installation, and set-up service charges, including wall-mounting of the product.

How to get service:

- For information about receiving service under warranty, contact ViewSonic® Customer Support (Please refer to the "Customer Service" page). You will need to provide your product's serial number.
- To obtain warranty service, you will be required to provide: (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
- Take or ship the product, freight prepaid, in the original container to an authorized ViewSonic® service center or ViewSonic®.
- For additional information or the name of the nearest ViewSonic® service center, contact ViewSonic®.

Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

Exclusion of damages:

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic® shall not be liable for:

- Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
- Any other damages, whether incidental, consequential or otherwise.
- Any claim against the customer by any other party.
- Repair or attempted repair by anyone not authorized by ViewSonic[®].

Effect of state law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Sales outside the U.S.A. and Canada:

For warranty information and service on ViewSonic® products sold outside of the U.S.A. and Canada, contact ViewSonic® or your local ViewSonic® dealer.

The warranty period for this product in mainland China (Hong Kong, Macao, and Taiwan Excluded) is subject to the terms and conditions of the Maintenance Guarantee Card.

For users in Europe and Russia, full details of warranty provided can be found at: http://www.viewsonic.com/eu/ under "Support/Warranty Information".

Mexico Limited Warranty

ViewSonic® Smart White Board

What the warranty covers:

ViewSonic® warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic® will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components & accessories.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty excludes and does not cover:

- Any product on which the serial number has been defaced, modified or removed.
- Damage, deterioration, or malfunction resulting from:
 - » Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, unauthorized attempted repair, or failure to follow instructions supplied with the product.
 - » Causes external to the product, such as electrical power fluctuations or failure.
 - » Use of supplies or parts not meeting ViewSonic®'s specifications.
 - » Normal wear and tear.
 - » Any other cause which does not relate to a product defect.
- Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.
- Removal, installation, insurance, and set-up service charges.

How to get service:

For information about receiving service under warranty, contact ViewSonic® Customer Support (Please refer to the attached "Customer Service" page). You will need to provide your product's serial number, so please record the product information in the space provided below on your purchase for your future use. Please retain your receipt of proof of purchase to support your warranty claim.

F	\cap	r	٧	'n	п	r	R	6	_	\cap	r	h	ς
	u			u	u		٠,			_		u	

Product Name:	Model Number:	
Document Number:	Serial Number:	
Purchase Date:	Extended Warranty Purchase?	(Y/N)
If so, what date does warranty expire?		

- To obtain warranty service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
- Take or ship the product, in the original container packaging, to an authorized ViewSonic® service center.
- Round trip transportation costs for in-warranty products will be paid by ViewSonic[®].

Limitation of implied warranties:

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

Exclusion of damages:

ViewSonic®'s liability is limited to the cost of repair or replacement of the product. ViewSonic® shall not be liable for:

- Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
- Any other damages, whether incidental, consequential or otherwise.
- Any claim against the customer by any other party.
- Repair or attempted repair by anyone not authorized by ViewSonic®.

Contact Information for Sales & Authorized Service (Centro Autorizado de Servicio) within Mexico: Name, address, of manufacturer and importers: México, Av. de la Palma #8 Piso 2 Despacho 203, Corporativo Interpalmas, Col. San Fernando Huixquilucan, Estado de México Tel: (55) 3605-1099 http://www.viewsonic.com/la/soporte/index.htm NÚMERO GRATIS DE ASISTENCIA TÉCNICA PARA TODO MÉXICO: 001.866.823.2004 Hermosillo: Villahermosa: Distribuciones y Servicios Computacionales SA de CV. Compumantenimietnos Garantizados, S.A. de C.V. AV. GREGORIO MENDEZ #1504 Calle Juarez 284 local 2 Col. Bugambilias C.P: 83140 COL, FLORIDA C.P. 86040 Tel: 01-66-22-14-9005 Tel: 01 (993) 3 52 00 47 / 3522074 / 3 52 20 09 E-Mail: disc2@hmo.megared.net.mx E-Mail: compumantenimientos@prodigy.net.mx Puebla, Pue. (Matriz): Veracruz, Ver.: CONEXION Y DESARROLLO, S.A DE C.V. Av. RENTA Y DATOS, S.A. DE C.V. Domicilio: 29 SUR 721 COL. LA PAZ Americas # 419 72160 PUEBLA, PUE. ENTRE PINZÓN Y ALVARADO Tel: 01(52).222.891.55.77 CON 10 LINEAS Fracc. Reforma C.P. 91919 Tel: 01-22-91-00-31-67 E-Mail: datos@puebla.megared.net.mx E-Mail: gacosta@qplus.com.mx Chihuahua: Cuernavaca: Soluciones Globales en Computación Compusupport de Cuernavaca SA de CV C. Magisterio # 3321 Col. Magisterial Francisco Leyva # 178 Col. Miguel Hidalgo Chihuahua, Chih. C.P. 62040, Cuernavaca Morelos Tel: 4136954 Tel: 01 777 3180579 / 01 777 3124014 E-Mail: Cefeo@soluglobales.com E-Mail: aquevedo@compusupportcva.com Distrito Federal: Guadalajara, Jal.: QPLUS, S.A. de C.V. SERVICRECE, S.A. de C.V. Av. Coyoacán 931 Av. Niños Héroes # 2281 Col. Del Valle 03100, México, D.F. Col. Arcos Sur, Sector Juárez Tel: 01(52)55-50-00-27-35 44170, Guadalajara, Jalisco E-Mail: gacosta@qplus.com.mx Tel: 01(52)33-36-15-15-43 E-Mail: mmiranda@servicrece.com Monterrey: Guerrero Acapulco: GS Computación (Grupo Sesicomp) **Global Product Services** Progreso #6-A, Colo Centro Mar Caribe # 1987, Esquina con Golfo Pérsico 39300 Acapulco, Guerrero Fracc. Bernardo Reyes, CP 64280 Tel: 744-48-32627 Monterrey N.L. México Tel: 8129-5103 E-Mail: aydeem@gps1.com.mx MERIDA: Oaxaca, Oax.: ELECTROSER CENTRO DE DISTRIBUCION Y Av Reforma No. 403Gx39 y 41 SERVICIO, S.A. de C.V. Mérida, Yucatán, México CP97000 Murguía # 708 P.A., Col. Centro, 68000, Oaxaca Tel: (52) 999-925-1916 Tel: 01(52)95-15-15-22-22 E-Mail: rrrb@sureste.com Fax: 01(52)95-15-13-67-00 E-Mail. gpotai2001@hotmail.com Tijuana: **FOR USA SUPPORT:** STD ViewSonic® Corporation Av Ferrocarril Sonora #3780 L-C 381 Brea Canyon Road, Walnut, CA. 91789 USA Col 20 de Noviembr Tel: 800-688-6688 Tijuana, Mexico E-Mail: http://www.viewsonic.com

Smart White Board Warranty Term Template In UG VSC_TEMP_2013

