


Introduction to Hardware of Z9X PRO


Device Interface

Zidoo Z9X PRO is equipped with audio and video input & output ports and data transmission ports. Please refer to the descriptions in this manual.


1. Front

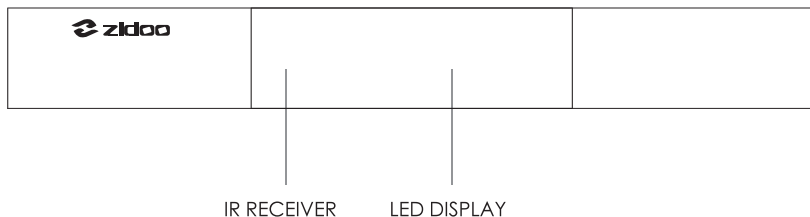


2. Left

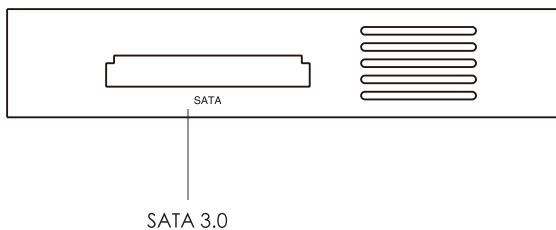

3. Right

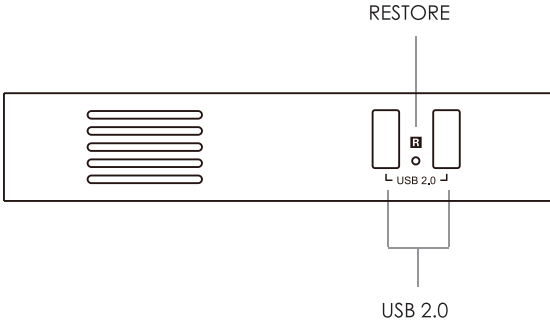

4. Back

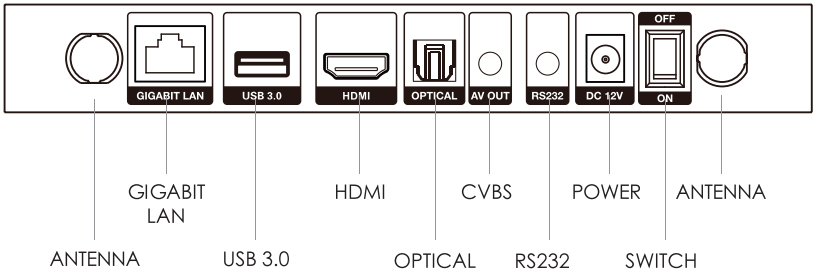


Note:

- * Please load/change the hard disk after turning off the power. If it is a brand-new hard disk, please load it after formatting it.
- * Do not touch any liquid in case the liquid runs into the inner part of the device and damage it.
- * Any maintenance personnel who are not appointed are not allowed to open the case.

Device Connection

1. Connect HDMI Cable to TV


1) Cut off the power . Please make sure the power of the TV and media player are off.

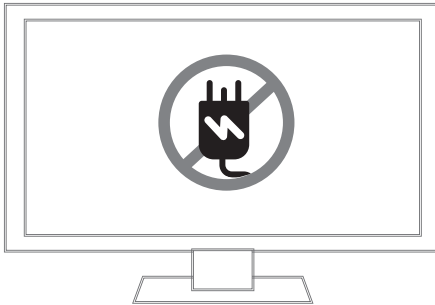


2) When the TV is turned off, please connect HDMI port on Zidoo to HDMI IN port on TV.



3) Connect with the power. This device is equipped with suitable DC power adapter. Please connect the head of DC power adapter to the DC power input port of this device, then insert the plug of DC power adapter into the socket of 110V – 240V.

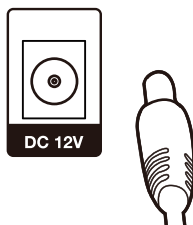


4) Corresponding video source is selected by TV.

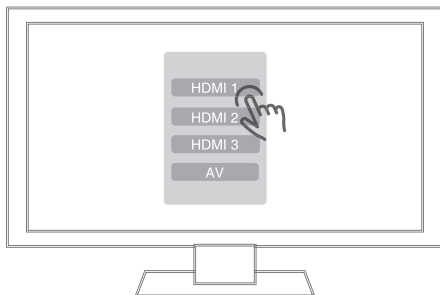


2. Connect AV Cable to the TV

The connection method is same as connecting HDMI cable.

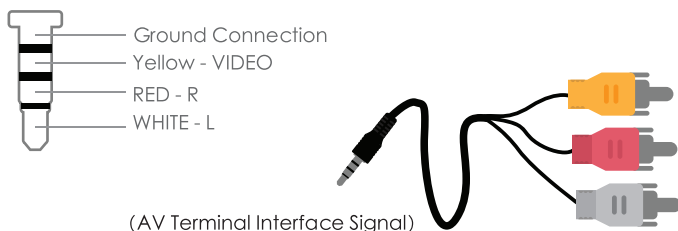

3. Assembly Sequence to Connect RS232 to 3.5mm Connector

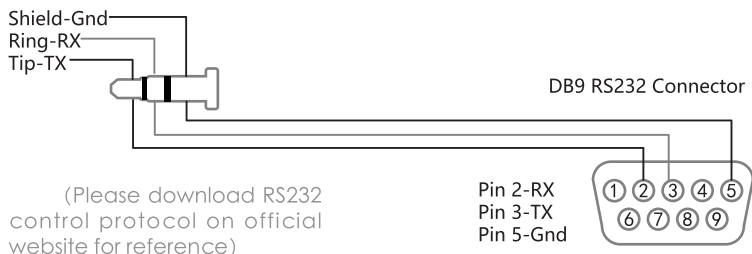

Z9X PRO Specification


Front Display	LED
Shell	Aluminum Alloy
OS	Android 11
CPU	Realtek RTD1619BPD ARM Cortex-A55(Quad-core)
GPU	ARM Mali-G57
NPU	1.6TOPS
RAM	4GB DDR4
Internal Storage	32GB eMMC
Bluetooth	BT 5.2
WIFI	2.4G + 5G dual-band WiFi,802.11 a/b/g/n/ac/ax 2T2R, 802.11ax MIMO OFDM
Ethernet	1*RJ-45 Ethernet Jack (10/100/1000Mbps)
HDMI Output	HDMI 2.1, support up to 4K @ 60p, HDR, 12Bit, YCbCr 4:4:4 color range, support audio pass-through
Video Decoding	4K@60p,AV1/HEVC/H.265,12Bit, HDR10, HDR10+, Dolby vision
Audio Decoding	Support high-definition audio pass-through and audio decode
Intelligent Control	Mobile APP control, RS-232, TCP/IP control and WOL support
SATA	1*SATA 3.0
USB	1*USB 3.0, 2*USB 2.0
Power Supply	DC 12V / 2A
Other Interface	1*IR Receiver, 1*3.5(mm)AV Out), 1*SPDIF(2CH, 5.1CH),1*3.5(mm) RS-232, 2* External High-Gain Antenna

Boot Initialization Wizard


Before using the machine formally, the system will perform the initial setup. Please set according to devices and requirements to get the best visual experience.

1. System language selection, screen zoom, time zone setting


Choose the system language according to your language habit.

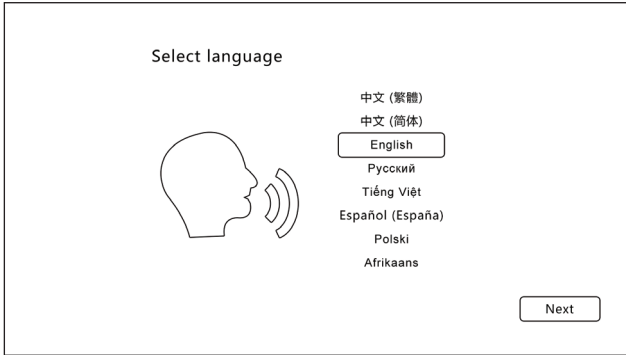

Press the UP and DOWN buttons on remote control to adjust screen display area.

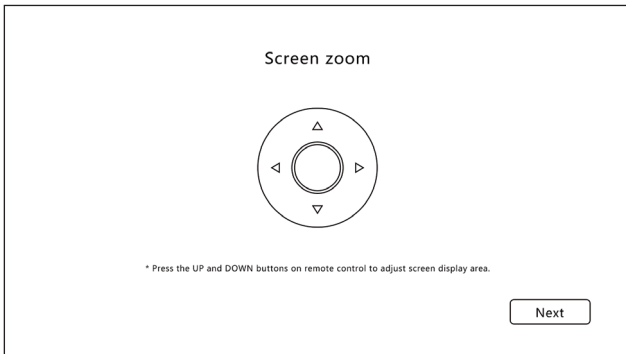


Select the time zone for the system according to your location.

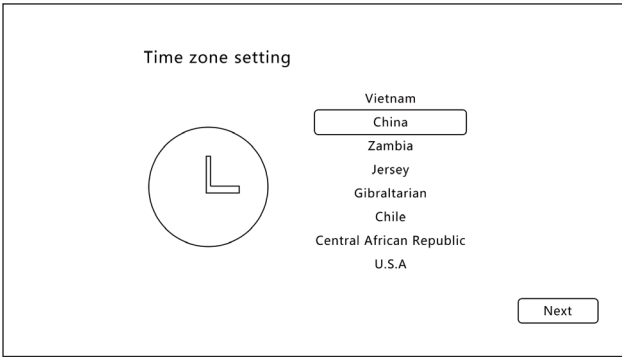

2. Network Setting

Configure network to connect device with network quickly.

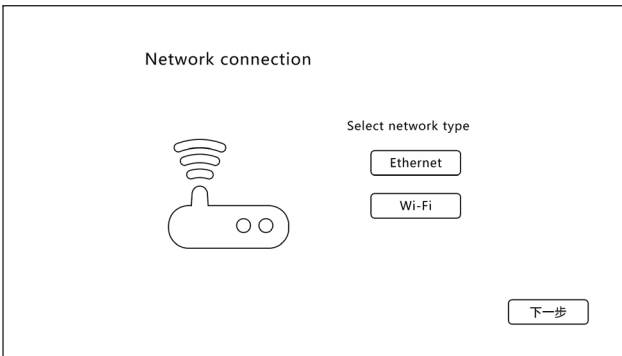


WIFI: choose network SSID, input password and connect WIFI.

Ethernet: plug in the network cable to connect the network automatically .


3. Select output mode

Please select the corresponding mode according to your needs, then it will finish relevant setting.

Wizard mode: select the corresponding option according to your usage environment and device connection.

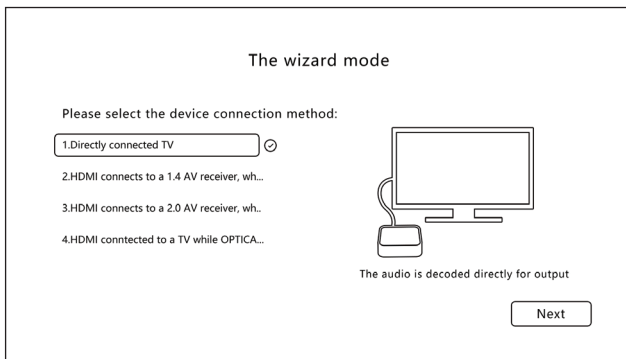

Expert mode: The audio and video output is customized by users, it is recommended for professionals.

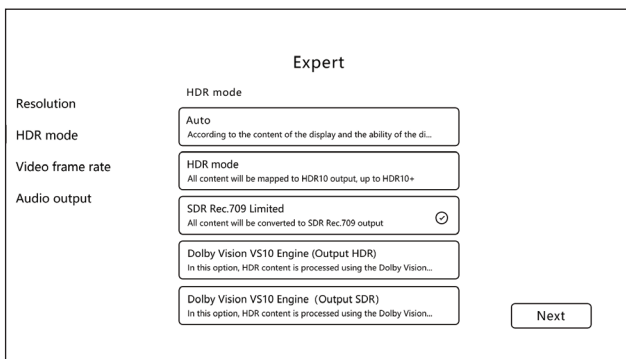

4. The key definition

Define the corresponding functions for number keys, timing key, subtitle key, audio key, up and down keys and page keys on the remote control according to your usage habits.

The key definition

Number keys	Specific percentage of video >
Timing keys	Close >
Subtitle keys	Subtitle list >
Audio keys	Audio list >
Up and Down keys	Switch chapter >
Page Turning Keys	Switch chapter >

[Next](#)

After completing settings above, please follow prompts and click “Next” until entering Zidoo user interface. Enjoy Zidoo audio visual feast!

OTA System Update


Zidoo will update the firmware from time to time.

Find the update icon in APPs and click it, online update and local update are supported. After ticking "Automatically check online upgrade", you will receive the prompt for the latest firmware update automatically.



1. Online Update


Click "Online Update" to obtain information of online update.

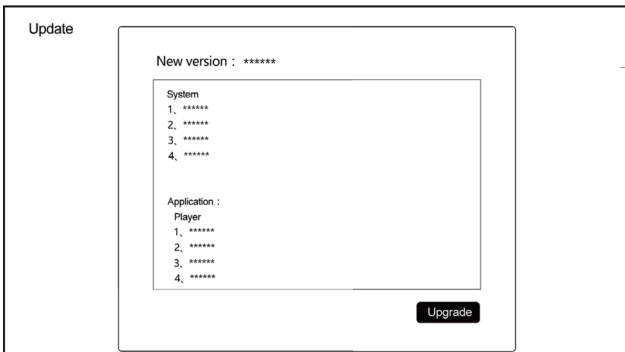


2. Local Update

Users can download the update files on the forum or official website and update firmware through files.


Copy the downloaded update file to USB disk. Click "USB update" to select the update file.

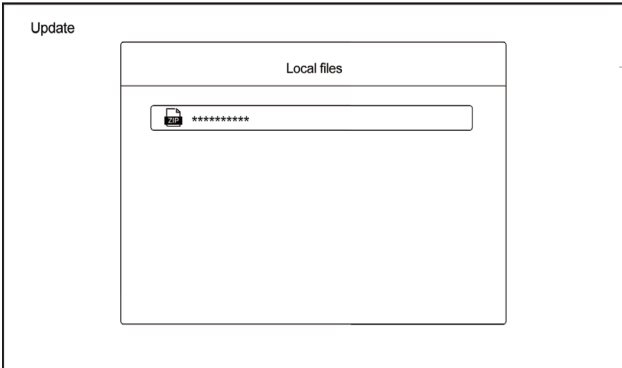


Download the update files by online update or local update. Click "Update" to update it.

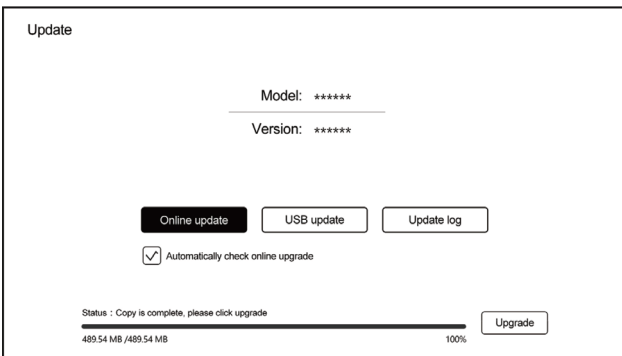

The system will automatically check the update file whether is completed or not.

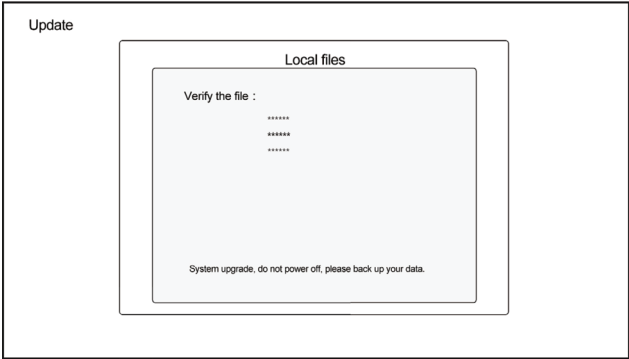

Note: Automatically access to system upgrade. Please don't power off in the progress.

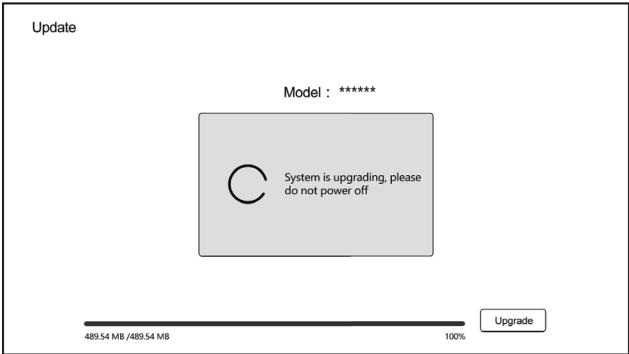

Once the update process is completed, the system will automatically restart.



Special Note:

To guarantee user experience, Zidoo will update the firmware from time to time. Therefore, this manual may not be totally in line with the product.

Guarantee

保修卡

User File

用户信息

User name 用户姓名		Sex 性别	
Address 回寄地址			
Telephone 联系电话		Zip 邮编	
Product name 产品名称		Model NO. 型号	
Fault description 故障说明			

Guarantee Item

保修条款

- (1) One year guarantee from date of purchased(not including fittings).
- (2) All of damage by man-made(tear open the housing, tear off the sticker, unnormally using), or losing this card, we will not guarantee.
- (1) 保修期限：本产品遵循国家三包条例，商品存在非人为损坏所引起的硬件故障，本公司将提供一年保修服务（配件除外）。
- (2) 如需寄回本公司维修，请与此保修卡一同寄回。
- (3) 一切人为因素造成的损坏（包括擅自拆机，撕毁标签，自行刷机 etc），本公司将不予保修。





QUALIFIED
CERTIFICATE
合格证

CHECKER/检验员 _____

DATE/日期 _____