

General important announcements:

A.

When persons are underneath the ceiling lift it is obligated that the operator has constant visual contact with the lift during it's travel.

B.

The control panel must be installed or positioned in the way that the operator has constant visual contact with the lift during it's travel.

C.

It is not allowed for persons to be standing underneath the lift, when the measured distance between the floor and the lowest point of the lift is less than 2 meters (6.5 feet)

D.

The ceiling lift and other equipment may only be installed when the installer is working on a rigid and stable platform.

E.

The lift is suitable for lifting persons.

F.

It is allowed to mount 1 piece of equipment, keeping the allowed max. load of the lift in mind.

G.

When more equipment needs to be installed, the equipment must be assembled in a way that they are mounted together as 1 piece underneath the lift, keeping the allowed max. load of the lift in mind.

H.

When loads are mounted underneath the lift it is important that the point of gravity of the load is centred underneath the lift.

I.

When the lift is faulty during normal use or during testing, it must be put out of function immediately. The repair must be done by a approved engineers. Clearance of the product after repair must be given by authorised and trained engineers.