



Safety instructions and warnings

Fixed display trolley

Please read and follow all the safety instructions below and on the product before installing the display trolley. Failure to comply with the safety instructions may result in property damage or personal injury, and could affect the safety features contained in the unit. Please retain all safety instructions.

- Do not begin installation until you have read and understood the complete operating instructions.
- Carry out the installation with another person to ensure safe installation.
- Remove the product from its packaging and remove all packaging material. Make sure that no packaging material is on or in the product. If you notice any damage to the packaging, also check whether there is any damage to the product. If you notice any external damage to the unit or any unexpected or unusual functioning, the product must not be used any longer. Contact the dealer immediately, from whom you purchased the product or celexon directly (Web: www.celexon.co.uk, Mail: info@celexon.co.uk) for further information.
- To ensure trouble-free operation, the product must only be used indoors, it is NOT suitable for outdoor use.
- The use of the product and accessories is forbidden to children under 16 years of age.
- Ensure that no children play with the devices or are in the vicinity without supervision.
- Converting or modifying the product compromises product safety.
- **Caution: Risk of injury!** Never open the product without authorisation. Never carry out repairs yourself!
- Do not use the product near gas or water appliances or in a dusty environment.
- Handle the product with care. It can be damaged by knocks, blows or falling from even a small height.
- Keep the product away from moisture and heat.
- Never immerse the product in water or other liquids.
- Use the product only in its intended manner. Any use for any other purpose may damage the product or its surroundings.
- Tighten the screws, but do not overtighten them. Overtightening (e.g. by using a cordless screwdriver) can cause damage and impair the secure hold of the product.
- After mounting the product and other components, check that they are sufficiently strong and safe to operate.
- Do not load the product with more weight than permitted. Pay attention to the maximum permissible carrying weight.
- Make sure that the product is not loaded asymmetrically, especially after the product has been adjusted.
- Only use the stand on level, stable surfaces. Make sure that the brakes on the wheels are activated when the stand is in place.
- Push or pull the stand slowly and carefully to prevent it from tipping over. Remove any obstacles on the floor before moving the stand.
- Regularly check all screws, wheels and the structure for stability and replace damaged parts immediately.
- Position the stand so that it is not in passageways or escape routes.
- All supply lines and cables must not be subjected to any additional load and must be laid in such a way that they are not damaged or crushed.
- Failure to comply with the above instructions may result in personal injury and damage to the product or equipment connected to it. Incorrect installation or use may also invalidate the warranty.
- If you are unsure about the use of the product, please contact your specialist personnel, your dealer or celexon directly (Web: www.celexon.co.uk, Mail: info@celexon.co.uk).
- Technical changes and errors excepted.

The manufacturer accepts no responsibility for damage to property or personal injury, If the display trolley is used outside the recommended specifications, or in the event of improper installation.