

PureLink

Install. Connect. Perform.



WIRELESS HDMI EXTENDER SET CSW030

Instruction Manual

HDMI[™]
HIGH DEFINITION MULTIMEDIA INTERFACE

Version 09.2024

TABLE OF CONTENT

CHAPTER	PAGE
Introduction	3
Intended Use	3
Safety Instructions	4-5
Delivery Content	6
Specifications	6-9
Installation	10
Application	11
FAQ	12-13
Maintenance	14
Cleaning	14
Warranty and Liability	15
CE Conformity	16
Disposal of the Device	16
Disclaimer	17

1. INTRODUCTION

Congratulations on your purchase of the PureLink CSW030! Replace your HDMI cable wirelessly and locate your HDTV or projector wherever you want in the same room. No need to worry about the location of your HD equipment. Perfect if you would rather not see cables running across the walls or if you do not want to (or cannot) drill holes and lay cables.

Suitable for all HDMI equipment, such as Blu-ray® Player, HD set-top box or Laptop.

PureLink products are manufactured with the utmost precision and are top quality. Please read this manual carefully and follow the instructions in order to get the very best from this product.

2. INTENDED USE



This product is intended for indoor use only. Do not use it outdoors. Contact with moisture, e.g. in bathrooms, must be avoided under all circumstances.

For safety and approval purposes (CE), you must not rebuild and/or modify this product. If you use the product for purposes other than those described above, the product may be damaged. In addition, improper use can cause hazards such as short circuiting, fire, electric shock etc.

Read the instructions carefully and keep them. Make this product available to third parties only together with its operating instructions.

3. SAFETY INSTRUCTIONS

Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.

The device is not a toy. Keep it out of the reach of children and pets.

Do not leave packaging material lying around carelessly. These may become dangerous playing material for children.

Protect the product from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, vapors and solvents.

Do not place the product under any mechanical stress.

If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. Safe operation can no longer be guaranteed if the product:

- is visibly damaged,
- is no longer working properly,
- has been stored for an extended period in poor ambient conditions or
- has been subjected to any serious transport-related stresses

Please handle the product carefully. Jolts, impacts or a fall even from a low height can damage the product.

Also observe the safety and operating instructions of any other devices which are connected to the product.

Consult an expert when in doubt about the operation, safety or connection of the device.

Make sure to observe the polarity and magnitude of the output voltage. Incorrect polarity or excessive voltage input leads to the destruction of the connected electrical appliance.

Sufficient ventilation is essential when operating the product. Do not cover the product. Never place the product on a table cloth or on a carpet! Place it on a hard, flame resistant base.

The product should not be used immediately after it has been brought from an area of cold temperature to an area of warm temperature. Condensed water might destroy the product. Wait until the product adapts to the new ambient temperature before use.

Make sure that the output of the power adapter is not short-circuited.

Suffocation Risk! Keep packaging materials away from children!

This product contains radios that emit electromagnetic fields. These electromagnetic fields may interfere with pacemakers, defibrillators, and other medical devices. Keep at least 6 inches (approximately 15 cm) of separation between your pacemaker or defibrillator and this product. If you suspect this product is interfering with your pacemaker or any other medical device, stop using it and consult your physician for information specific to your medical device.

4. DELIVERY CONTENT


1x PureLink CSW030 Transmitter (TX)
1x PureLink CSW030 Receiver (RX)
1x DC 5V/2A power adapter for RX
2x USB-A to USB-C cable for RX & TX
1x User Manual

5. SPECIFICATIONS

Product Size in mm:	TX: 72 x 52 x 14.2mm RX: 124 x 70 x 18.8mm
Product Weight in g:	TX: 50 g +/- 10% RX: 168 g +/- 10%
TX: Interface	HDMI in
RX: Interface	HDMI out / VGA out / Audio out
WiFi Standard	IEEE 802.11 protocol (5GHz)
Frequency Range	5180MHz-5240MHz (Band 1)
RF Power	10 dBm max.
Distance	30 m line of sight (no walls) max.
HDMI Compliance	HDMI 1.3

HDCP Compliance	HDCP 1.X
Audio Output	PCM 2CH
Resolution	1920 x 1080 @60Hz
Pixel Frequency Range	25MHz-165MHz
Power Supply	AC in 110-240V / DC out 5V/2A
Operating Humidity	10 - 80%
Operating Temperature	0 - 45°C
Storage Temperature	-20 - 60°C

RECEIVER

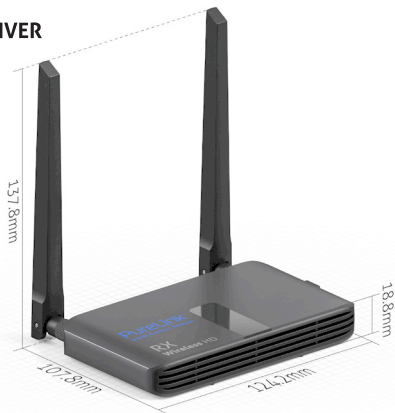

FRONT



BACK

TRANSMITTER



FRONT



BACK

6. INSTALLATION

THE PURELINK CSW030 TRANSMITTER (TX)

1. Connect your CSW030 transmitter to your HD device (HDMI OUT) or laptop (HDMI OUT).
2. Connect the power adapter to the USB port on the CSW030 transmitter and to a socket. If your HD device or Laptop has a USB port you can also use the USB cable to power the CSW030 transmitter.

THE PURELINK CSW030 RECEIVER (RX)

1. Connect your HDTV or HD Projector (HDMI IN) via an HDMI cable to the CSW030 Receiver (HDMI OUT)
2. Connect the power adapter to the USB IN on the CSW030 Receiver and to an electrical socket

Note: You cannot connect both receiver outputs at the same time. You must connect either [HDMI OUT] or [VGA OUT + AUDIO OUT]

7. APPLICATION

1. After plugging the power adapter into the wall outlet, turn on the PureLink CSW030 receiver using the on/off switch on the side.
2. After the indicator light turns into a fast flashing, wait ten seconds to complete the transmission. Connect the transmitter to the HDMI port of the computer, laptop, or other media source. After the indicator light changes to a fast flashing, wait ten seconds to complete the connection, and then press the main button on the transmitter to mirror the content from your device.
3. When the connection between the transmitter and receiver is completed, both LEDs will light up continuously.

Note: Place the transmitter and receiver at least 1 meter apart to ensure a good connection.

SWITCH YOUR EQUIPMENT ON

1. Switch the HDTV or HD Projector ON and select the HDMI input on this device to which you have connected the PureLink CSW030 Receiver.
2. Switch the HD device or Laptop to which the PureLink CSW030 transmitter is connected ON.
3. If there is a good connection between your HD device and the HDTV (or HD Projector), both LEDs on the receiver will light up constantly.

8. FREQUENTLY ASKED QUESTIONS

NO CONNECTION

If the PureLink CSW030 is not able to make a stable connection for 80 seconds during start-up, the PureLink CSW030 Receiver is probably outside the range of the PureLink CSW030 Transmitter. Place them closer to each other (a minimum distance of 1 meters apart) and check whether the connection can be made.

NO SIGNAL AVAILABLE FROM CHOSEN SOURCE

The PureLink CSW030 does not recognize an input signal on the selected SOURCE.

- Check whether the correct HDMI source has been selected and whether this is ON.
- Check whether the HDMI cable between the PureLink CSW030 Transmitter and HD device is connected properly.
- Replace the HDMI cable to the HD device.

VIDEO RESOLUTION IS NOT SUPPORTED

The video resolution that is set on your HD device is not recognized by the PureLink CSW030 Transmitter.

- Connect the HD device directly to the HDTV or projector and check whether the set video resolution corresponds to the resolutions that are supported.

LAPTOP OR PC SETTINGS

- Consult your Laptop or PC instructions for the correct picture and audio settings.
- Check to ensure that the resolution set corresponds to the resolutions that are supported.

Do you have other questions that have not been resolved by the above information?

Please contact us on support.purelink.de

9. MAINTENANCE

There are no components located inside the product you need to maintain. Never open/dismantle the product.

Maintenance, modifications and repairs are to be performed exclusively by an expert or at a qualified shop.

If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

10. CLEANING

Before cleaning the product must be disconnected from mains socket and all electrical loads.

Before cleaning the product, it must be disconnected from all other connected products.

Only use dry and soft cloth to clear the housing of the Product.

Do not use abrasive or solvents.

Do not use any aggressive cleaning agents, rubbing alcohol or other chemical solutions as they can cause damage to the housing and malfunctioning.

To clean the product, a dry, soft and clean cloth is sufficient. Do not apply too much pressure to the housing as this may cause scratch marks.

You can easily remove dust using a long-haired, soft and clean brush.

11. WARRANTY AND LIABILITY

If any fault or damage is detected on your product, please contact your dealer and provide your sales slip or invoice as evidence of the purchase, if necessary. Your dealer will repair the fault either on site, or send the device PureLink. Please describe the possible faults in detail – only then you can be assured that faults, occurring only rarely, will be found and repaired with certainty!

Any use other than described in this user`s manual is not permitted.

Disclaimer of liability

PureLink GmbH will not be held liable, nor provide any warranty for damage resulting from improper installation, assembly and use of the product, or failure to observe the operating instructions and/or safety instructions.

12. CE CONFORMITY



PureLink GmbH hereby declares that the CSW030 complies with the RED Directive 2014/53/EU, the ErP Directive 2009/128/EU amended by 2019/1782/EU and the RoHS Directive 2011/65/EU amended by 2015/863 EU.

The full text of the EU Declaration of Conformity is available at the following internet address:

<http://www.purelink.de>



DISPOSAL OF THE DEVICE

WEEE-Reg. No.: DE 93847290

According to the European WEEE directive, any electrical and electronic equipment must not be disposed with consumers waste. As a consumer, you are committed by law to reposit electrical and electronic devices to public collecting points or to the dealer for free at the end of the device's lifetime. Details are regulated in the respective national legislations. The garbage can symbol on the product, in the manual or on the packaging refers to these terms. With the return of your used devices you actively take part in protecting the environment.

13. DISCLAIMER

This product complies with the statutory national and European requirements. All company names and product names are trademarks of their respective owners.

All rights reserved.

We reserve our right for misprints and changes of the device, packing or user manual.

HDMI® is a registered trademark of HDMI Licensing L.L.C

PureLink GmbH

Von-Liebig-Straße 10
D - 48432 Rheine
Germany

PureLink UK LTD.

Carpenter Court, 1 Maple Road
Bramhall, Stockport
Cheshire SK7 2DH
United Kingdom

Telefon: 0049 (0)5971-800 299 -0
Fax: 0049 (0)5971-800 299 -99
E-mail: info@purelink.de
Internet: www.purelink.de

© 2024 PureLink GmbH. All rights reserved.
All trade names are registered trademarks of
respective manufactures listed.
HDMI is a trademark of HDMI Licensing LLC.

Version 09.2024

PureLink

Install. Connect. Perform.



KABELLOSES HDMI EXTENDER SET CSW030

Bedienungsanleitung



Version 09.2024

INHALTSVERZEICHNIS

KAPITEL	SEITE
Einleitung	21
Bestimmungsgemäßer Gebrauch	21
Sicherheitshinweise	22-23
Lieferumfang	24
Spezifikationen	24-27
Installation	28
Anwendung	29
Häufig Gestellte Fragen	30-31
Wartung	32
Reinigung	32
Gewährleistung und Haftung	33
CE Konformität	34
Geräteentsorgung	34
Haftungsausschluss	35

1. EINLEITUNG

Herzlichen Glückwunsch zum Erwerb des PureLink CSW030! Ersetzen Sie Ihr HDMI Kabel mit einem Wireless-System und stellen Ihre HD-Geräte dort im Raum auf, wo Sie es möchten! Sie müssen den Standort Ihrer HD-Geräte nicht mehr genau planen, was ideal ist, wenn Sie nicht möchten, dass Kabel sichtbar entlang der Wand verlaufen oder das Bohren von Löchern nicht gewünscht oder sogar unmöglich ist. Der PureLink CSW030 eignet sich für alle HDMI Geräte, wie Blu-ray® Player, HD-Set-Top Box oder Laptop.

Alle PureLink Produkte werden mit großer Sorgfalt hergestellt und sind von herausragender Qualität. Lesen Sie diese Anleitung bitte sorgfältig durch und befolgen Sie die Anweisungen, um die Funktionen dieses Produkts optimal nutzen zu können.

2. BESTIMMUNGSGEMÄSSER GEBRAUCH



Eine Verwendung ist nur in geschlossenen Räumen, also nicht im Freien erlaubt. Der Kontakt mit Feuchtigkeit, z.B. im Badezimmer u.ä. ist unbedingt zu vermeiden.

Aus Sicherheits- und Zulassungsgründen (CE) dürfen Sie das Produkt nicht umbauen und/oder verändern. Falls Sie das Produkt für andere Zwecke verwenden, als zuvor beschrieben, kann das Produkt beschädigt werden. Außerdem kann eine unsachgemäße Verwendung Gefahren wie zum Beispiel Kurzschluss, Brand, Stromschlag, etc. hervorrufen.

Lesen Sie sich die Bedienungsanleitung genau durch und bewahren Sie diese auf. Reichen Sie das Produkt nur zusammen mit der Bedienungsanleitung an dritte Personen weiter.

3. SICHERHEITSHINWEISE

Lesen Sie sich die Bedienungsanleitung aufmerksam durch und beachten Sie insbesondere die Sicherheitshinweise. Falls Sie die Sicherheitshinweise und die Angaben zur sachgemäßen Handhabung in dieser Bedienungsanleitung nicht befolgen, übernehmen wir für dadurch resultierende Personen-/Sachschäden keine Haftung. Außerdem erlischt in solchen Fällen die Gewährleistung/Garantie.

Dieses Produkt ist kein Spielzeug. Halten Sie es von Kindern und Haustieren fern.

Lassen Sie das Verpackungsmaterial nicht achtlos liegen. Dieses könnte für Kinder zu einem gefährlichen Spielzeug werden.

Schützen Sie das Produkt vor extremen Temperaturen, direktem Sonnenlicht, starken Erschütterungen, hoher Feuchtigkeit, Nässe, brennbaren Gasen, Dämpfen und Lösungsmitteln.

Setzen Sie das Produkt keiner mechanischen Belastung aus.

Wenn kein sicherer Betrieb mehr möglich ist, nehmen Sie das Produkt außer Betrieb und schützen Sie es vor unbeabsichtigter Verwendung. Der sichere Betrieb ist nicht mehr gewährleistet, wenn das Produkt:

- sichtbare Schäden aufweist,
- nicht mehr ordnungsgemäß funktioniert,
- über einen längeren Zeitraum unter ungünstigen Umgebungsbedingungen gelagert wurde oder
- erheblichen Transportbelastungen ausgesetzt wurde

Gehen Sie vorsichtig mit dem Produkt um. Durch Stöße, Schläge oder bereits dem Fall aus geringer Höhe kann das Produkt beschädigt werden.

Beachten Sie auch die Sicherheitshinweise und Bedienungsanleitungen der weiteren Geräte, an die das Produkt angeschlossen wird.

Wenden Sie sich an einen Sachverständigen, wenn Sie Zweifel zu Arbeitsweise, Sicherheit oder Anschluss des Produktes haben.

Beachten Sie die Polarität und Stärke der Ausgangsspannung. Falsche Polarität oder zu starke Spannungen führen zur Zerstörung des angeschlossenen Geräts.

Achten Sie beim Betrieb des Geräts auf eine ausreichende Luftzirkulation. Decken Sie das Produkt nicht ab. Stellen Sie das Gerät niemals auf eine Tischdecke oder einen Teppich! Platzieren Sie das Gerät auf einer stabilen, feuerfesten Unterlage.

Das Gerät sollte nicht sofort nach einem Wechsel von kalter zu warmer Umgebung angeschlossen werden. Kondenswasser könnte zu Schäden am Gerät führen. Warten Sie, bis sich das Gerät der neuen Umgebungstemperatur angepasst hat.

Stellen Sie sicher, dass der Ladeausgang nicht kurzgeschlossen wird.

Erstickungsgefahr! Halten Sie Verpackungsmaterial von Kindern fern!

4. LIEFERUMFANG


- 1x PureLink CSW030 Sender (TX)
- 1x PureLink CSW030 Empfänger (RX)
- 1x DC 5V/2A Netzadapter für RX
- 2x USB-A auf USB-C Kabel für TX und RX
- 1x Benutzerhandbuch

5. SPEZIFIKATIONEN

Produkt Größe in mm:	TX: 72 x 52 x 14,2mm RX: 124 x 70 x 18,8mm
Produkt Gewicht in g:	TX: 49.31 g +/- 10% RX: 165.67 g +/- 10%
TX: Schnittstelle	HDMI in
RX: Schnittstelle	HDMI out / VGA out / Audio out
WiFi Standard	IEEE 802.11 Protokoll (5GHz)
Frequenzbereich	5180MHz-5240MHz (Band 1)
RF Leistung	10 dBm max.
Entfernung	30 m Sichtweite (ohne Wände) max.
HDMI-Konformität	HDMI 1.3

HDCP-Konformität	HDCP 1.X
Audio Format	PCM 2CH
Auflösung	1920 x 1080 @60Hz
Bildfrequenzbereich	25MHz-165MHz
Stromzufuhr	AC in 110-240V / DC out 5V/2A
Relative Luftfeuchtigkeit	10 - 80%
Betriebstemperatur	0 - 45°C
Lagertemperatur	-20 - 60°C

RECEIVER

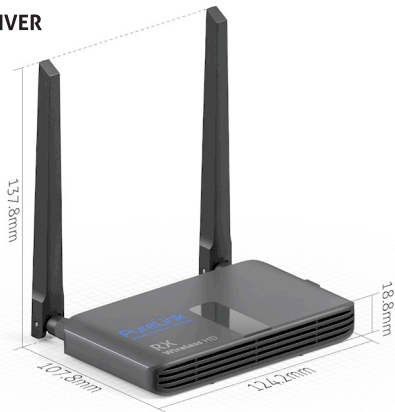

FRONT



BACK

TRANSMITTER



FRONT



BACK

6. INSTALLATION

DER PURELINK CSW030 SENDER (TX)

1. Schließen Sie den CSW030 Sender an Ihr HD-Gerät (HDMI OUT) oder Laptop (HDMI OUT) an.
2. Schließen Sie den beiliegenden Netzadapter an den USB-Eingang des CSW030 Senders und eine Steckdose an. Wenn Ihr HD-Gerät oder Laptop über einen USB-Port verfügt, können Sie auch das enthaltene USB Kabel als Stromquelle für den CSW030 Sender verwenden.

DER PURELINK CSW030 EMPFÄNGER (RX)

1. Schließen Sie Ihren HDTV oder HD-Projektor (HDMI IN) mit einem HDMI Kabel an den CSW030 Empfänger (HDMI OUT) an.
2. Schließen Sie den mitgelieferten Netzadapter an den USB-Eingang des CSW030 Empfängers und eine Steckdose an.

Achtung: Sie können nicht beide Reizeiverausgänge gleichzeitig anschließen. Sie müssen entweder [HDMI OUT] oder [VGA OUT + AUDIO OUT] anschließen.

7. ANWENDUNG

1. Nachdem Sie den Netzadapter an die Steckdose angeschlossen haben, schalten Sie den PureLink CSW030 Empfänger über den An- und Ausschalter an der Seite ein. Der Empfänger schaltet sich automatisch ein.
2. Nachdem das Anzeigelicht in ein schnelles Blinken übergeht, warten Sie zehn Sekunden, um die Übertragung abzuschließen. Verbinden Sie den Sender mit dem HDMI-Anschluss des Computers, Laptops oder einer anderen Medienquelle. Nachdem die Anzeigeleuchte schnell blinkt, warten Sie zehn Sekunden, um die Verbindung abzuschließen, und drücken Sie dann die Haupttaste auf dem Sender, um die Inhalte von Ihrem Gerät zu spiegeln.
3. Wenn die Verbindung zwischen dem Sender und Empfänger hergestellt ist, werden beide LED kontinuierlich aufleuchten.

Achtung: Zur Gewährleistung einer optimalen Verbindung stellen Sie Sender und Empfänger mindestens 1 Meter voneinander entfernt auf.

SCHALTEN SIE IHR GERÄT EIN

1. Schalten Sie den HDTV oder HD-Projektor EIN und wählen Sie an diesem Gerät den entsprechenden HDMI Eingang, an welchen Sie den PureLink CSW030 Empfänger angeschlossen haben.
2. Schalten Sie Ihr HD-Gerät oder Ihren Laptop, an welchen Sie den CSW030 Sender angeschlossen haben, EIN.
3. Wenn die Verbindung zwischen Ihrem HD-Gerät und dem HDTV (oder HD-Projektor) zustande gekommen ist, werden beide LED am Empfänger kontinuierlich aufleuchten.

8. HÄUFIG GESTELLTE FRAGEN

KEINE VERBINDUNG

Wenn der PureLink CSW030 nach dem Einschalten innerhalb von 80 Sekunden keine stabile Verbindung herstellen kann, befindet sich der CSW030 Empfänger wahrscheinlich außer Reichweite des Senders. Stellen Sie beide Geräte näher aneinander (mit einer Mindestentfernung von 1 Meter) und kontrollieren Sie, die Verbindung nun zustande kommt.

KEIN EINGANGSSIGNAL DER GEWÄHLTEN QUELLE ERKENNBAR

Der PureLink CSW030 erkennt kein Eingangssignal an der ausgewählten SOURCE (Quelle).

- Überprüfen Sie, ob die richtige HDMI Quelle ausgewählt ist und ob diese eingeschaltet ist
- Überprüfen Sie, ob das HDMI Kabel zwischen dem PureLink CSW030 Sender und dem HD-Gerät richtig angeschlossen ist
- Ersetzen Sie das HDMI Kabel zum HD-Gerät durch ein anderes

VIDEOAUFLÖSUNG WIRD NICHT UNTERSTÜTZT

Die an Ihrem HD-Gerät eingestellte Videoauflösung wird vom CSW030 Sender nicht erkannt.

Schließen Sie das HD-Gerät direkt mittels eines HDMI Kabels an den HDTV oder Projektor an und überprüfen Sie, ob die eingestellte Videoauflösung mit den unterstützten Auflösungen übereinstimmt.

LAPTOP ODER PC-EINSTELLUNGEN

- Ziehen Sie bezüglich der Bildschirm- und Audioeinstellungen die Gebrauchsanleitung Ihres Laptops oder PCs zu Rate
- Kontrollieren Sie, ob die eingestellte Auflösung mit den unterstützten Auflösungen übereinstimmt

Sie haben noch Fragen, die bisher im Obigen nicht beantwortet wurden?

Kontaktieren Sie uns unter support.purelink.de

9. WARTUNG

Es sind keinerlei für Sie zu wartende Bestandteile im Inneren des Produkts, öffnen/zerlegen Sie es deshalb niemals.

Lassen Sie Wartungs-, Anpassungs- und Reparaturarbeiten ausschließlich von einem Fachmann bzw. einer Fachwerkstatt durchführen.

Sollten Sie noch Fragen haben, die in dieser Bedienungsanleitung nicht beantwortet werden konnten, wenden Sie sich an unseren technischen Kundendienst oder an einen Sachverständigen.

10. REINIGUNG

Vor jeder Reinigung ist das Produkt von der Steckdose und den angeschlossenen Produkten zu trennen.

Vor jeder Reinigung ist das Produkt von den angeschlossenen Produkten zu trennen.

Verwenden Sie nur ein trockenes, weiches Tuch, um das Gehäuse des Produkts zu reinigen. Verwenden Sie keine Scheuer- oder Lösungsmittel.

Verwenden Sie auf keinen Fall aggressive Reinigungsmittel, Reinigungsalkohol oder andere chemische Lösungen, da dadurch das Gehäuse angegriffen oder gar die Funktion beeinträchtigt werden kann.

Zur Reinigung genügt ein trockenes, weiches und sauberes Tuch. Drücken Sie nicht zu stark auf das Gehäuse, dies führt zu Kratzspuren.

Staub kann mit Hilfe eines langhaarigen, weichen und sauberen Pinsels leicht entfernt werden.

11. GEWÄHRLEISTUNG UND HAFTUNG

Falls ein Fehler oder Defekt an Ihrem Produkt festgestellt werden sollte, wenden Sie sich bitte zuerst an Ihren Fachhändler und zeigen Sie ggf. Ihre Quittung oder Rechnung als Kaufnachweis vor. Ihr Händler wird den Fehler entweder vor Ort beheben, oder das Produkt an PureLink weiterleiten. Bitte beschreiben Sie eventuelle Fehler ausführlich beschreiben – nur dann haben Sie Gewähr, dass auch selten auftretende Fehler mit Sicherheit gefunden und beseitigt werden!

Ein anderer als in dieser Betriebsanleitung beschriebener Einsatz ist unzulässig.

Haftungsausschluss

Die PureLink GmbH übernimmt keinerlei Haftung oder Gewährleistung für Schäden, die aus unsachgemäßer Installation, Montage und unsachgemäßem Gebrauch des Produktes oder einer Nichtbeachtung der Bedienungsanleitung und/oder der Sicherheitshinweise resultieren.

12. CE KONFORMITÄT



Hiermit erklärt die PureLink GmbH, dass der CSW030 der Funkrichtlinie 2014/53/EU, der ErP Richtlinie 2009/128/EU ergänzt durch 2019/1782/EU und der RoHS Richtlinie 2011/65/EU ergänzt durch 2015/863 EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgende Internetadresse verfügbar:

<http://www.purelink.de>



GERÄTEENTSORGUNG

WEEE-Reg. Nr.: DE 93847290

Elektrische und elektronische Geräte dürfen nach der europäischen WEEE Richtlinie nicht mit dem Hausmüll entsorgt werden. Als Verbraucher sind Sie nach dem ElektroG verpflichtet, elektrische und elektronische Geräte am Ende ihrer Lebensdauer an den dafür eingerichteten, öffentlichen Sammelstellen oder an die Verkaufsstelle kostenlos zurückzugeben. Einzelheiten dazu regelt das jeweilige Landesrecht. Das Symbol auf dem Produkt, der Gebrauchsanleitung oder der Verpackung weist auf diese Bestimmungen hin. Mit dieser Art der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt.

13. HAFTUNGS AUSSCHLUSS

Das Produkt entspricht den gesetzlichen, nationalen und europäischen Anforderungen. Alle enthaltenen Firmennamen und Produktbezeichnungen sind Warenzeichen der jeweiligen Inhaber.

Alle Rechte vorbehalten.

Druckfehler und Änderungen an Gerät, Verpackung oder Anleitung behalten wir uns vor.

HDMI® ist eine eingetragene Marke der HDMI Licensing L.L.C.

PureLink GmbH

Von-Liebig-Straße 10
D - 48432 Rheine
Germany

PureLink UK LTD.

Carpenter Court, 1 Maple Road
Bramhall, Stockport
Cheshire SK7 2DH
United Kingdom

Telefon: 0049 (0)5971-800 299 -0
Fax: 0049 (0)5971-800 299 -99
E-mail: info@purelink.de
Internet: www.purelink.de

© 2024 PureLink GmbH. All rights reserved.
All trade names are registered trademarks of
respective manufactures listed.
HDMI is a trademark of HDMI Licensing LLC.

Version 09.2024