Neat Center



neat.


User manual

Neat Center Accessory for video conferencing device

Neat Center is a companion device that frames people in the meeting room face-on, ensuring remote participants remain at the center of the conversation by clearly seeing and hearing everyone for complete meeting equity.

It's simple to set up, can be positioned anywhere for optimal viewing and audio, and extends the power of Neat devices and Neat Symmetry for a closer-than-ever hybrid working experience.



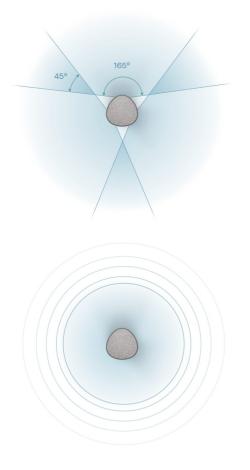

Broader vision

Neat Center broadens remote participants' view, giving them a 360° visual meeting experience when those in the room are talking among themselves and facing away from the primary video device.

Clearer sound

It allows remote participants to hear the conversation more clearly with an omnidirectional 16x mic array for ideal audio pickup throughout the room.

Simple setup

Neat Center can be ordered with or without a PoE power injector and comes with multiple mounting options to fit your needs, including a fixed or free-standing table mount and a ceiling mount. Neat Center can also be mounted on a tripod for ad hoc deployments anywhere throughout a space.


In the box

Neat Center Ethernet cable: 9.8ft (3m) Ceiling mount Table mount

Optional Neat accessories

Ethernet cable: 16.4ft (5m) PoE power injector*

*If using an alternative PoE power source, it must be compliant with the IEEE 802.3 af/at/bt PoE standard

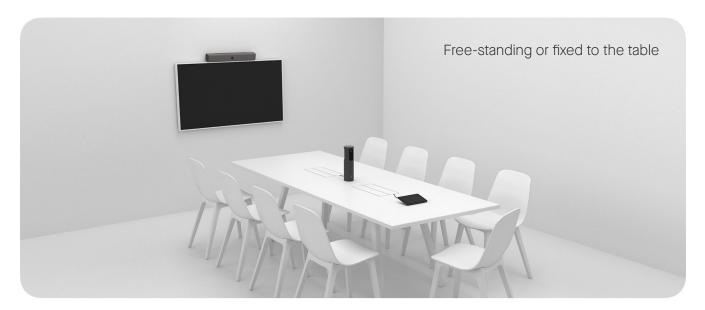






Sc sc

Screws for mounting to the table or ceiling are not included. A minimum of two diameter 6 mm screws must be used for a secure ceiling mount. The screws must be of the appropriate type for the material of the mounting surface. Mounting in the ceiling should only be performed by qualified personnel in line with applicable facility and state regulations.

Size and weight

Neat Center

Height: 11.7 inches (297 mm) Width: 3.3 inches (84 mm) Depth: 3.3 inches (84 mm) Weight: 3.24 pounds (1,47 kg)

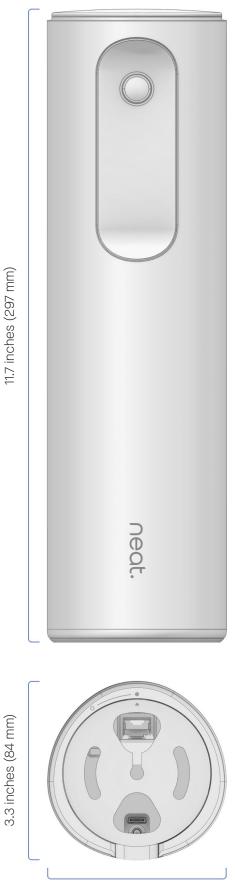

3.3 inches (84 mm)


Setup and connectivity

Setup

Use the provided cables to set up the system. Connect the cables according to the illustration. Cables marked — are included. Cables marked ---- are optional and not required for the system's basic use.

Requirements for a complete setup

Primary Neat device PoE network or Network port and PoE power injector Video service

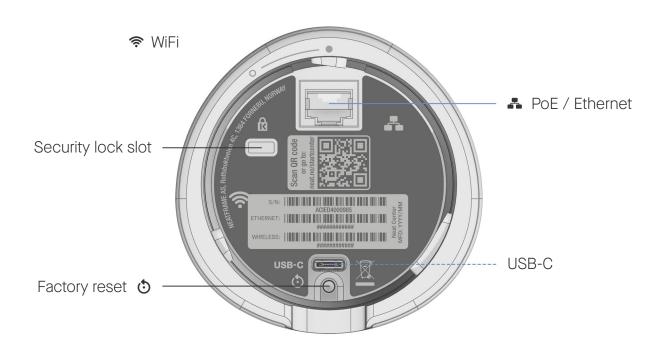

Environmental requirements

Ambient operating temperature: 32° to 95° F / 0° - 35° C Storage temperature: -4° - 140° F / -20° - 60° C Relative humidity: 10% to 90%

Additional product information

https://neat.no/center

Neat Center - User manual rev05